

Lexington

SERIES "T" PARTS LIST

ILLUSTRATED AND INDEXED



LEXINGTON MOTOR COMPANY
CONNERSVILLE, INDIANA, U. S. A.

Subsidiary United States Auto Corporation

WORKS OF HISTORICA

Lexington

SERIES "T" PARTS LIST

ILLUSTRATED AND INDEXED



LEXINGTON MOTOR COMPANY
CONNERSVILLE, INDIANA, U. S. A.

Subsidiary United States Auto Corporation



LEXINGTON SERIES "T" PARTS LIST

INDEX

PRICES ON APPLICATION

PAGE 5—	PRODUCTION CHART (Showing equipment of Lexington Series "T" Models.)
PAGE 6—	CYLINDER GROUP.
PAGE 8—	PISTON AND CONNECTING ROD GROUP.
PAGE 9—	CAMSHAFT GROUP.
PAGE 10—	CRANKSHAFT GROUP.
PAGE 11—	VALVE OPERATING MECHANISM.
PAGE 12—	VALVE AND SPRING GROUP.
PAGE 13—	CYLINDER HEAD AND EXHAUST MANIFOLD GROUP.
PAGE 14—	ENGINE LUBRICATING SYSTEM.
PAGE 15—	OIL PAN GROUP.
PAGE 16—	WATER PUMP GROUP.
PAGE 17—	WATER MANIFOLD GROUP.
PAGE 18—	RADIATOR AND COOLING FAN PARTS.
PAGE 20—	FLYWHEEL GROUP.
PAGE 21—	IGNITION.
PAGE 22—	IGNITION (Continued).
PAGE 24—	STEERING GEAR AND SPARK AND THROTTLE PARTS.
PAGE 26—	SPEEDOMETER GROUP.
PAGE 27—	PULLEYS AND BELTS.
PAGE 28—	SERIES "T" WIRING DIAGRAM WITH PART NUMBERS.
PAGE 30—	CLUTCH GROUP.
PAGE 32—	TRANSMISSION CASE AND PARTS.
PAGE 34—	CONTROL LEVERS AND VARIOUS TRANSMISSION PARTS.
PAGE 36—	PROPELLER SHAFT AND EMERGENCY BRAKE PARTS.
PAGE 38—	SERVICE BRAKE PARTS.
PAGE 40—	REAR AXLE HOUSING AND PARTS.
PAGE 42—	DIFFERENTIAL AND VARIOUS AXLE PARTS.
PAGE 45—	FRONT AXLE PARTS.
PAGE 46—	SPRINGS AND PARTS.
PAGE 48—	WHEELS AND PARTS.
PAGE 51—	HOUK WIRE WHEEL CARRIER.
PAGE 52—	FRAME BRACKETS, CROSS MEMBERS, AND VARIOUS PARTS.
PAGE 54—	MUFFLER AND EXHAUST TUBE PARTS.
PAGE 56—	GASOLINE TANK, LINES, AND PARTS.
PAGE 58—	INSTRUMENT AND INSTRUMENT BOARDS.
PAGE 59—	2-WAY HEAD LAMPS AND FITTINGS.
PAGE 61—	DIAGRAM SHOWING 2-WAY HEAD LAMP VACUUM CONTROL SYSTEM.

Telegraph Code for Shipping Instructions

ABSTRACT.....	Ship via Express
BAGGAGE.....	Ship via Parcel Post
CARGO.....	Ship via Parcel Post, Special Delivery
DISPATCH.....	Ship via Express, C. O. D.
EXCELL.....	Ship via Parcel Post, C. O. D.
FLAX.....	Ship via Parcel Post, Special Delivery, C. O. D.
GAIN.....	Ship via Express and Charge us
HUSILE.....	Ship via Parcel Post and charge us
INDEY.....	Ship via Parcel Post, Special Delivery, and charge us
JUDGE.....	Ship via Freight
KINDLY.....	Ship via Freight on Order Bill of Lading
LIMITED.....	Ship via Freight and charge us

The above code is intended to reduce the number of words in a telegram and at the same time to permit the Distributor or Dealer to give explicit shipping instructions. We would therefore recommend the use of the code in wires for parts.

N. B. The use of code words is permitted by telegraph companies in straight messages or night messages, but not in night letters, or other deferred service.

LEXINGTON SERIES "T" PARTS LIST

DO NOT FAIL TO READ THESE INSTRUCTIONS CAREFULLY BEFORE
USING THIS PARTS BOOK WHICH, IF CAREFULLY FOLLOWED,
WILL PREVENT NOT ONLY MISTAKES BUT DELAYS

This Parts List is effective as of January 1, 1921, and includes parts for Lexington Series "T" seven-passenger Touring Car, seven-passenger Salon Sedan, and four-passenger Sedanette.

First—Mail in "Owner's Car Record. "Address all service orders to the Lexington Motor Company, and *not* to any individual. Mark all service orders plainly: "*Attention service department.*"

Second—To avoid unnecessary and useless correspondence, parts should, where possible, be ordered from the Dealer from whom the car was purchased or from the nearest *Lexington* Distributor who is generally in a position to know what is desired, and by reason of his carrying a large stock of parts will be able to fill the order promptly and thus will obviate waiting for shipment from the factory. If necessary to order direct, note carefully the following instructions:

Third—Give the car number which will be stamped upon the manufacturer's identification plate on the right side of the dash beneath the hood. It is also stamped on the left front spring horn, on the side of right side rail at rear, and on the upper left side of crankcase.

Fourth—Do not order parts in a letter in which any other subject whatever is treated.

Fifth—Parts positively must be ordered by parts number and by name in full as given herein. Simply "one pair" or "one set" is not sufficient. State whether right or left, front or rear. This is determined from the position when seated in the driver's seat. When ordering parts that are to be painted, do not fail to state the color of same. (We reserve the right to ship parts painted standard or unpainted if order does not specify.)

Sixth—State definite shipping instructions in order—Express, Freight, or Parcel Post.

Seventh—No parts will be shipped on open account except to our regular Distributors. Otherwise shipment will be made C. O. D., unless sufficient cash is received with the order. This is no reflection on any one's financial responsibility, but does enable us to handle the order promptly, without delay in connection with the formality of opening an account.

Eighth—Confirm all telegrams by mail. Telegrams must be sent pre-paid. Collect telegrams will be refused.

Ninth—Any claim for shortage or errors should be made immediately upon receipt of shipment and should be accompanied by the original packing slip. All shipments are complete, properly packed, and in good order when delivered to the transportation company. Claims arising from damage to goods in transit must be made by consignee against transportation company from whose hands the shipment was taken. Our responsibility ceases when the goods are receipted for by the transportation company.

Tenth—Due to the unprecedented price fluctuation, quotations will be made on application and are subject to change without notice. We are, therefore, furnishing each Dealer and Distributor with an open-leaf price book which will be revised up-to-date.

ALL PRICES ARE NET, F. O. B. CONNERSVILLE, INDIANA,
AND ARE SUBJECT TO CHANGE WITHOUT NOTICE

LEXINGTON SERIES "T" PARTS LIST

FOREWORD

For the convenience of the car user and because of the mechanical construction of the various parts, it has been found necessary to furnish some of the parts of the engine and car in certain combinations or assemblies. A part number has been assigned to these assemblies and an "A" has been suffixed to the part number to indicate that it is an assembly; also the assembly number and description are printed in bold-faced type, thus showing that the part is made of more than one part, any of which may be ordered individually.

It will be noticed that this parts list does not include standard S. A. E. lockwashers or cotter pins. These are obtainable at most hardware stores or service stations, and so are not sold from the factory service department.

Kindly bear in mind that we stock parts for over forty various models of cars which we have built, and that there are six models of the Series "T." Therefore, **no order for parts will be accepted unless serial number of car accompanies same.**

—Service Manager



PRODUCTION CHART SHOWING EQUIPMENT OF LEXINGTON SERIES "T" MODELS


Model	Motor	Frame	Radiator	Rear Axle Ratio	Front Spring	Rear Spring	Steering Gear
Touring Car 30,001 to 30,500	Ansted	Standard	Ansted	41-8	Standard	Standard	Standard
Touring Car 30,501 and up	Ansted	Standard	Harrison	37-8	Standard	Standard	Standard
Salon-Sedan	Ansted	Standard	Ansted	41-8	Heavy	Heavy	Standard
Sedanette First Series	Ansted	Special	Harrison	41-8	Heavy	Standard	Standard
Sedanette Second Series	Ansted	Special	Ansted	41-8	Heavy	Standard	Standard

A CAREFUL STUDY OF THIS TABLE WILL SHOW YOU JUST WHAT COMBINATIONS OF THE
VARIOUS STANDARD UNITS HAS BEEN USED IN THE VARIOUS MODELS AND SHOULD
HELP TO MAKE THE ORDERING OF THE PARTS OF THE SERIES "T" EASIER.
BE SURE TO GIVE SERIAL NUMBER OF CAR WITH YOUR ORDER.

Model	Speedometer	Steering Wheel	Body Make	Wheels	Tires	Hood	Windshield
Touring Car 30,001 to 30,500	Drive 9740 Driven 5379	Standard Diam.	Central	32x4	33x4½	Moore	Moore
Touring Car 30,501 and up	Drive 11293 Driven 11294	Standard Diam.	Central	32x4½	32x4½	Staudt	Staudt
Salon-Sedan	Drive 9740 Driven 5379	17" Diameter	Streator	32x4½	32x4½	Moore	Special
Sedanette First Series	Drive 9740 Driven 5379	18" Diameter	McFarlan	32x4½	32x4½	Staudt	Special
Sedanette Second Series	Drive 9740 Driven 5379	18" Diameter	McFarlan	32x4½	32x4½	Special 19 Louvre	Special

LEXINGTON SERIES "T" PARTS LIST

E-692—Motor Assembly, Including Carburetor and Distributor.
CYLINDER GROUP

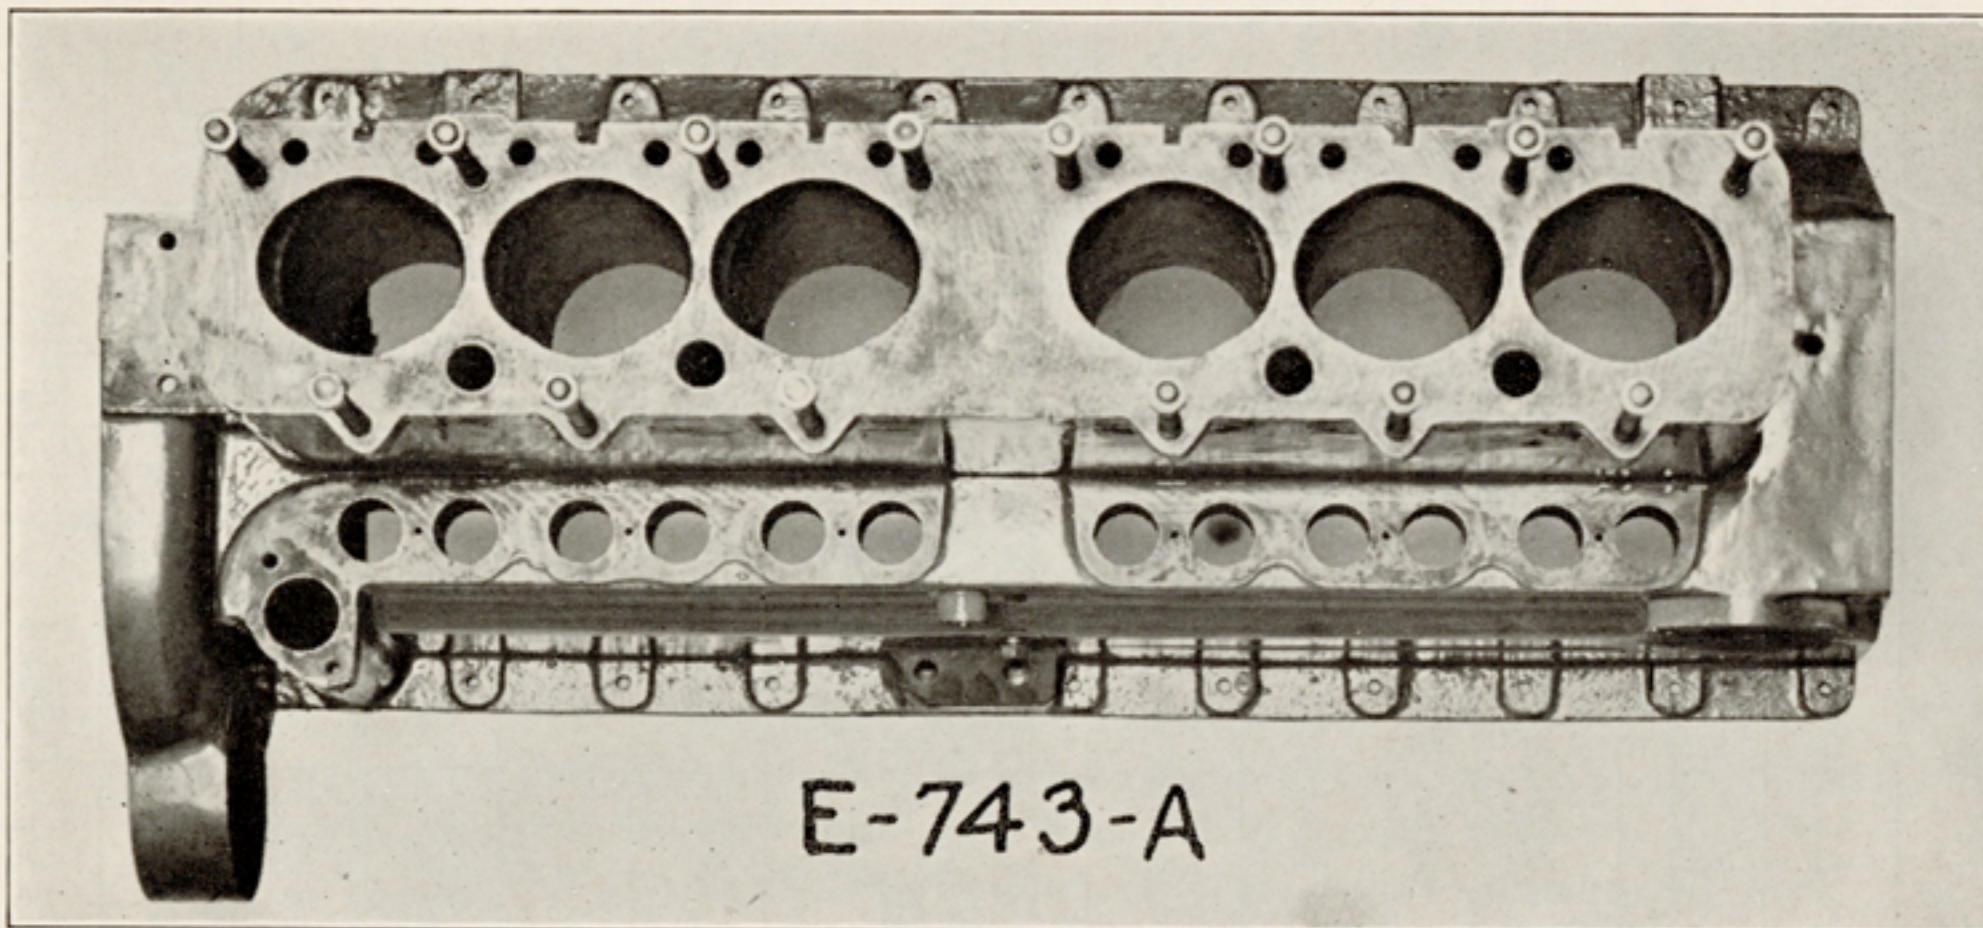

E-743-A

PRICES ON APPLICATION

Part No.	Name	No. Req.
E-743-A	Cylinder block assembly, including the following:	1
E-572	Crankshaft rear bearing, upper and lower	1
E-573	Crankshaft front bearing, upper and lower	1
E-574	Crankshaft center bearing, upper and lower	1
See note of explanation on Page 10.		
E-494	Crankshaft bearing stud, $\frac{9}{16} \times 18 \times 3\frac{1}{8}$ "	8
E-497	Cylinder head stud	14
E-502	Camshaft rear bearing plate. See Page 9	11
E-503	Camshaft rear bearing plate gasket	1
E-511	Camshaft rear bearing cover bolt	2
E-528	Camshaft rear bearing gasket	1
E-530	Camshaft front bearing	1
E-531	Camshaft rear bearing	1
E-532	Camshaft center bearing	1
E-540	Crankshaft bearing front shim	2
E-541	Crankshaft bearing center shim	2
E-542	Crankshaft bearing rear shim	2
E-546	Camshaft center bearing locating screw	1
E-637	Front and center main bearing lock wire $9\frac{1}{2}$ " long	2
E-638	Rear crankshaft bearing locking wire $7\frac{1}{4}$ " long	2
E-645	Compression test cup	1
SP-403	Cylinder head stud nut	14
SP-505	Crankshaft bearing stud nuts $\frac{9}{16}$ "-19 castled nut	8
SP-900	Camshaft front bearing screw $\frac{1}{4} \times 28 \times 1\frac{1}{2}$ " hex. C. S.	2
SP-3201	2" Hubbard plug	2
SP-3600	Camshaft rear bearing lock wire plate No. 18 B. W. G. 5"	1

NOTE:—Cylinder block cannot be furnished without including the parts listed above, but the individual parts may be obtained by ordering the part by its part number as explained in instructions for ordering parts.

LEXINGTON SERIES "T" PARTS LIST

CYLINDER GROUP—(Continued)

Part No.	Name	No. Req.
E-755-A	Cylinder block assembly , including the following:.....	1
E-743-A	Cylinder block including the parts as shown in assembly group on page 6.....	1
E-552	Pistons fitted to the above cylinder block.....	6
E-553	Piston rings fitted to the above pistons.....	12

E-756-A	Cylinder block assembly , including the following:.....	1
E-743-A	Cylinder block including the parts as shown in assembly group on page 6.....	1
E-552	Pistons fitted to above cylinder block.....	6
E-553	Piston rings fitted to above pistons.....	12
E-554	Piston pins fitted to above pistons.....	6
E-487	Piston pin clamp screws.....	6
SP-3602	Piston pin clamp screw lock wire.....	6

**ALL PRICES
ON
APPLICATION**

PRICES ON APPLICATION


TIMING GEAR COVER PLATE GROUP

E-405	Timing gear cover plate only.....	1
E-418	Magneto hole cover plate.....	1
E-500	Timing gear cover plate cork washer.....	1
E-501	Timing gear cover plate cork retainer.....	1
E-548	Magneto hole cover plate gasket.....	1
E-585	Timing gear cover plate gasket.....	1
E-693	Motor support bolt.....	1
E-694	Motor support bolt lockwasher.....	1
E-700	Motor support bolt nut, special.....	1
E-721	Oil gear case cover retainer.....	1
SP-911	Timing gear cover plate cap screw.....	9
SP-930	Magneto hole cover plate bolt washer, $\frac{5}{8}$ " S. A. E. light.....	3
SP-3402	Timing gear peep hole pipe plug, $\frac{3}{8}$ ".....	1

Car Number *must* be given when ordering repair parts. Order parts by number in *left* hand column using name of part in full. Read instructions carefully on page 3 before ordering.

LEXINGTON SERIES "T" PARTS LIST

PISTON AND CONNECTING ROD GROUP

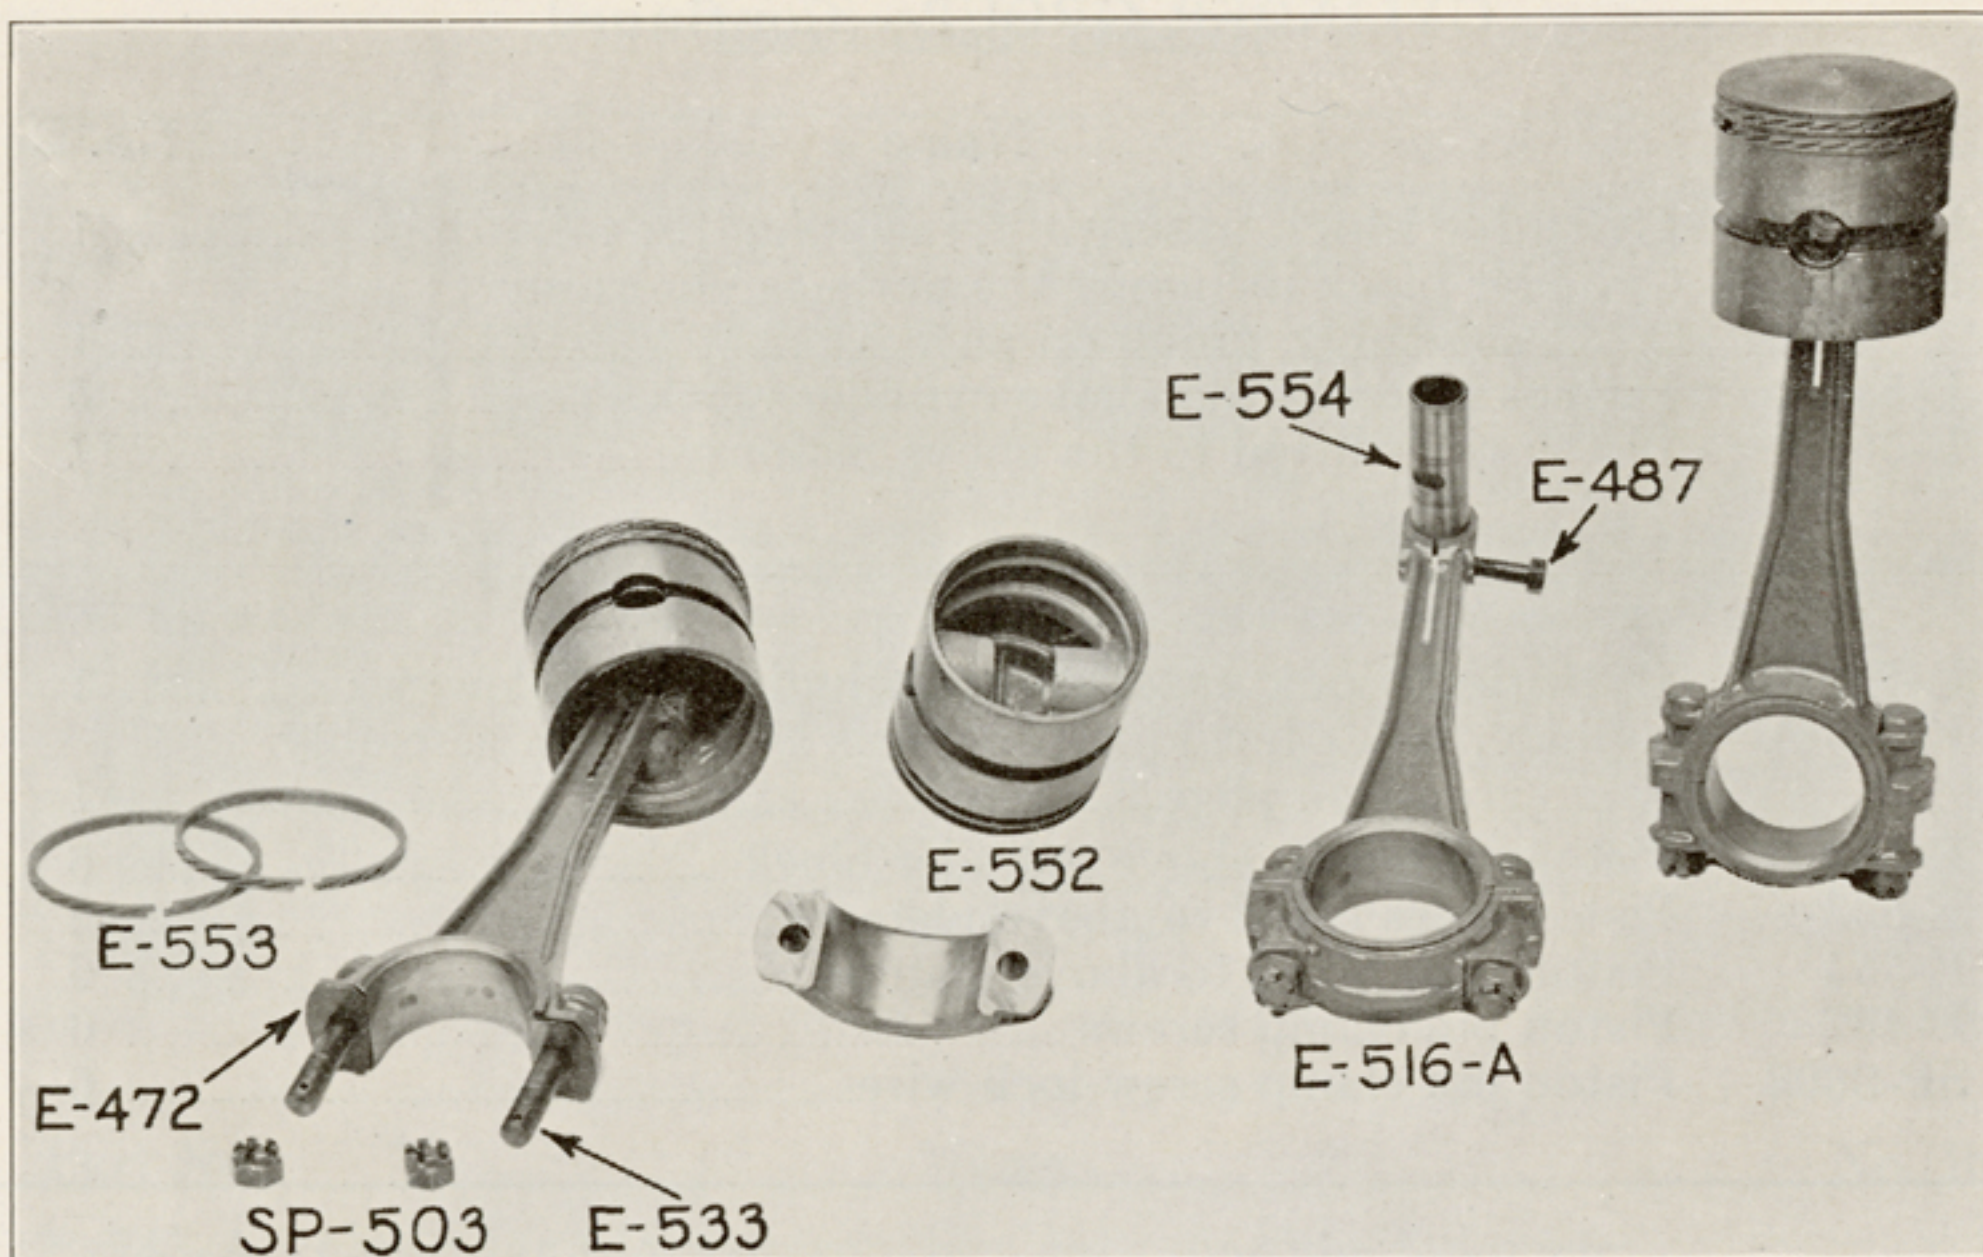


In the connecting rod group you will note we have not listed connecting rod bearings. The reason for this is that the bearings of the connecting rod for the Ansted Engine are poured in the rod and cap. Therefore, should it be necessary to replace the bearings in a connecting rod, it would be necessary for you to order a new connecting rod assembly, which will be shipped out with the bearings and shims. Full price will be charged for the connecting rod assembly. But, upon return of the old connecting rod, you will be refunded the price paid for the rod, less a nominal charge for rebabbiting. In ordering rods, specify motor number, or if any of the connecting rods have been removed before ordering, examine the web of the rod, and you will find a letter stamped on it. Advise us the letter you find stamped on it, which denotes the weight. The rods are lettered A, B, C, D, X and Y. It is necessary that replacement rods be of the correct weight, otherwise the engine will be out of balance.

Part No.	Name	No. Req.
E-516-A	Connecting rod with bearings and cap, type A.....	6
E-516-A	Connecting rod with bearings and cap, type B.....	6
E-516-A	Connecting rod with bearings and cap, type C.....	6
E-516-A	Connecting rod with bearings and cap, type D.....	6
E-516-A	Connecting rod with bearings and cap, type X.....	6
E-472	Connecting rod shims.....	12
E-533	Connecting rod bolts.....	12
SP-503	Connecting rod bolt nuts.....	12
SP-2213	Connecting rod bolt cotter.....	12
E-552	Piston, standard, .001", .002", .003", .005", .010", .020", and .025" oversize.....	6
E-553	Piston rings, standard .025" oversize.....	12
E-554	Piston pins, standard .003", .005", and .010".....	6
E-487	Piston pin clamp screws.....	6
SP-3602	Piston pin clamp screw lock wire.....	6

LEXINGTON SERIES "T" PARTS LIST

CAMSHAFT GROUP

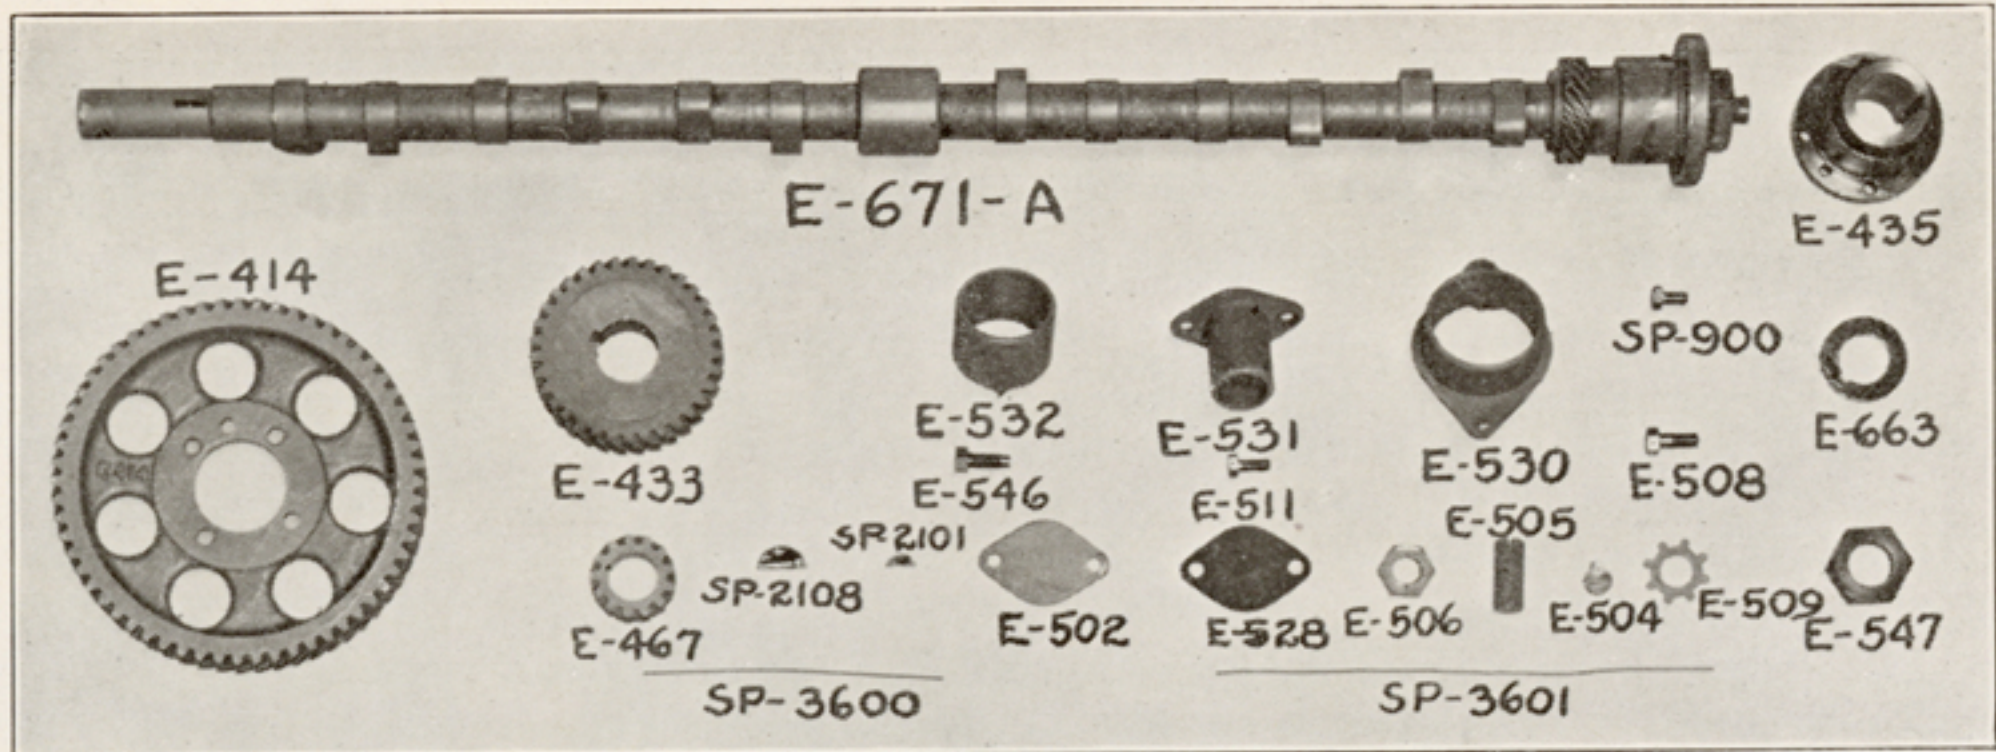


Part No.	Name	No. Req.
E-671-A	Camshaft Assembly, including the following.....	1
E-434	Distributor drive gear.....	1
E-435	Camshaft front collar.....	1
E-467	Oil pump drive gear.....	1
E-547	Camshaft front collar nut.....	1
E-663	Camshaft front collar lockwasher.....	1
SP-2101	Oil pump drive gear key.....	1
SP-2108	Distributor drive gear key.....	1
SP-2108	Camshaft front collar key.....	1
E-414	Camshaft gear.....	1
E-502	Camshaft rear bearing cover gasket (steel stamping.).....	1
E-503	Camshaft rear bearing cover gasket.....	1
E-504	Camshaft adjusting screw thrust plate.....	1
E-505	Camshaft adjusting screw.....	1
E-506	Camshaft adjusting screw locknut.....	1
E-508	Camshaft flange bolt.....	1
E-509	Camshaft adjusting screw star lockwasher.....	1
E-511	Camshaft rear bearing cover bolt, special.....	4
E-528	Camshaft rear bearing gasket.....	2
E-530	Camshaft front bearing.....	1
E-531	Camshaft rear bearing.....	1
E-532	Camshaft center bearing.....	1
E-546	Camshaft center bearing locating screw.....	1
SP-900	Camshaft front bracing screw.....	2
SP-2101	Oil pump driving gear key, No. 5 Woodruff.....	1
SP-3600	Camshaft rear bearing lock wire.....	1
SP-3601	Camshaft flange bolt lock wire.....	1

Car Number *must* be given when ordering repair parts. Order parts by number in left hand column using name of part in full. Read instructions carefully on page 3 before ordering.

PRICES ON APPLICATION

LEXINGTON SERIES "T" PARTS LIST

CRANKSHAFT GROUP

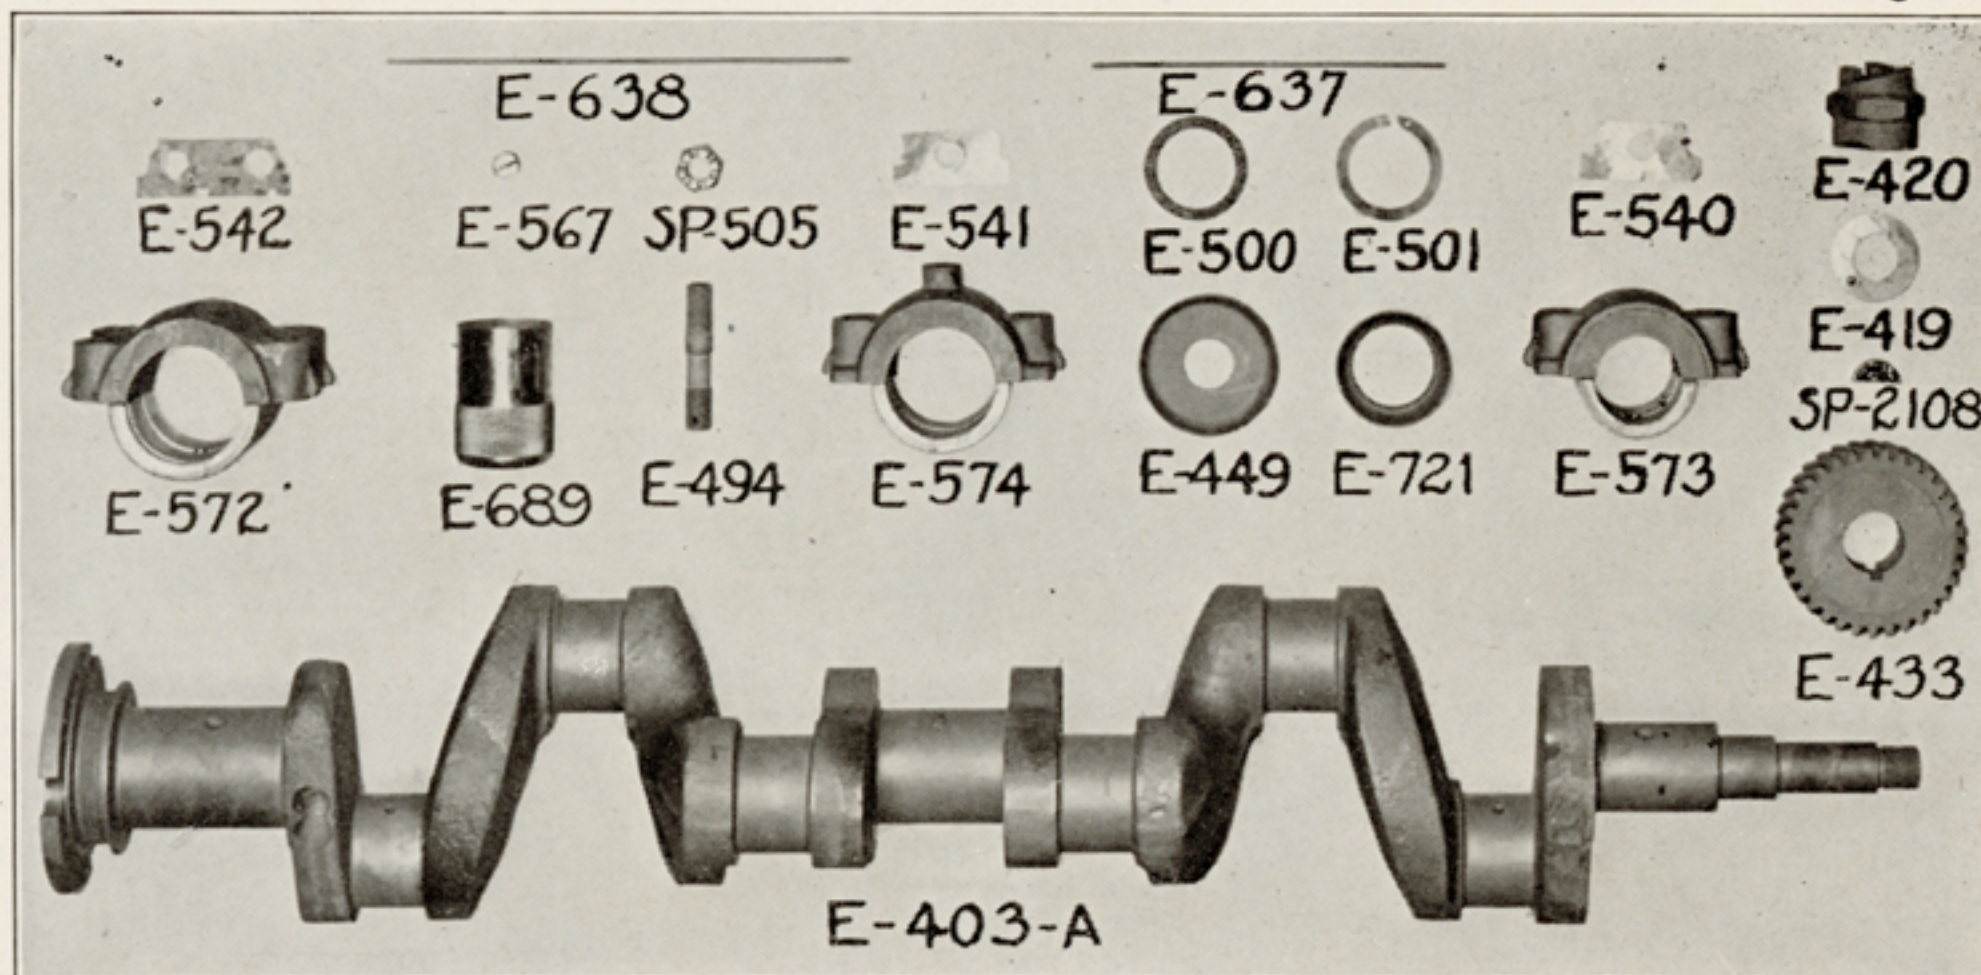

NOTE:—Crankshaft bearings will be furnished in pairs only and reamed to size for standard size crankshaft. If for any reason crankshaft has been reground it will be necessary to specify in your order how many thousandths of an inch crankshaft has been ground undersize.


Standard dimensions of crankshaft bearings are as follows:

Front—High limit 1.747	Low limit 1.746
Center—High limit 2.247	Low limit 2.246
Rear—High limit 2.372	Low limit 2.371

Part No.	Name	No. Req.
E-403-A	Crankshaft	1
E-419	Crankshaft starting crank jaw washer.....	1
E-420	Crankshaft starting crank jaw nut.....	1
E-572	Crankshaft rear bearing, upper and lower.....	1
E-573	Crankshaft front bearing, upper and lower.....	1
E-574	Crankshaft center bearing, upper and lower.....	1
E-433	Crankshaft gear.....	1
E-449	Crankshaft oil sling.....	1
E-494	Crankshaft bearing stud.....	8
E-500	Crankshaft oil gasket.....	7
E-501	Crankshaft oil gasket retainer.....	1
E-540	Crankshaft bearing front shim.....	2
E-541	Crankshaft bearing center shim.....	2
E-542	Crankshaft bearing rear shim.....	2
E-567	Crankshaft oil hole plug, 1/8" pipe thd., special.....	2
E-637	Crankshaft center and front bearing locking wire.....	2
E-638	Crankshaft rear bearing locking wire.....	3
E-689	Crankshaft starting crank extension cap.....	1
SP-505	Crankshaft bearing stud nut.....	8
SP-2108	Crankshaft gear key, No. 15 Woodruff.....	1

LEXINGTON SERIES "T" PARTS LIST

VALVE OPERATING MECHANISM

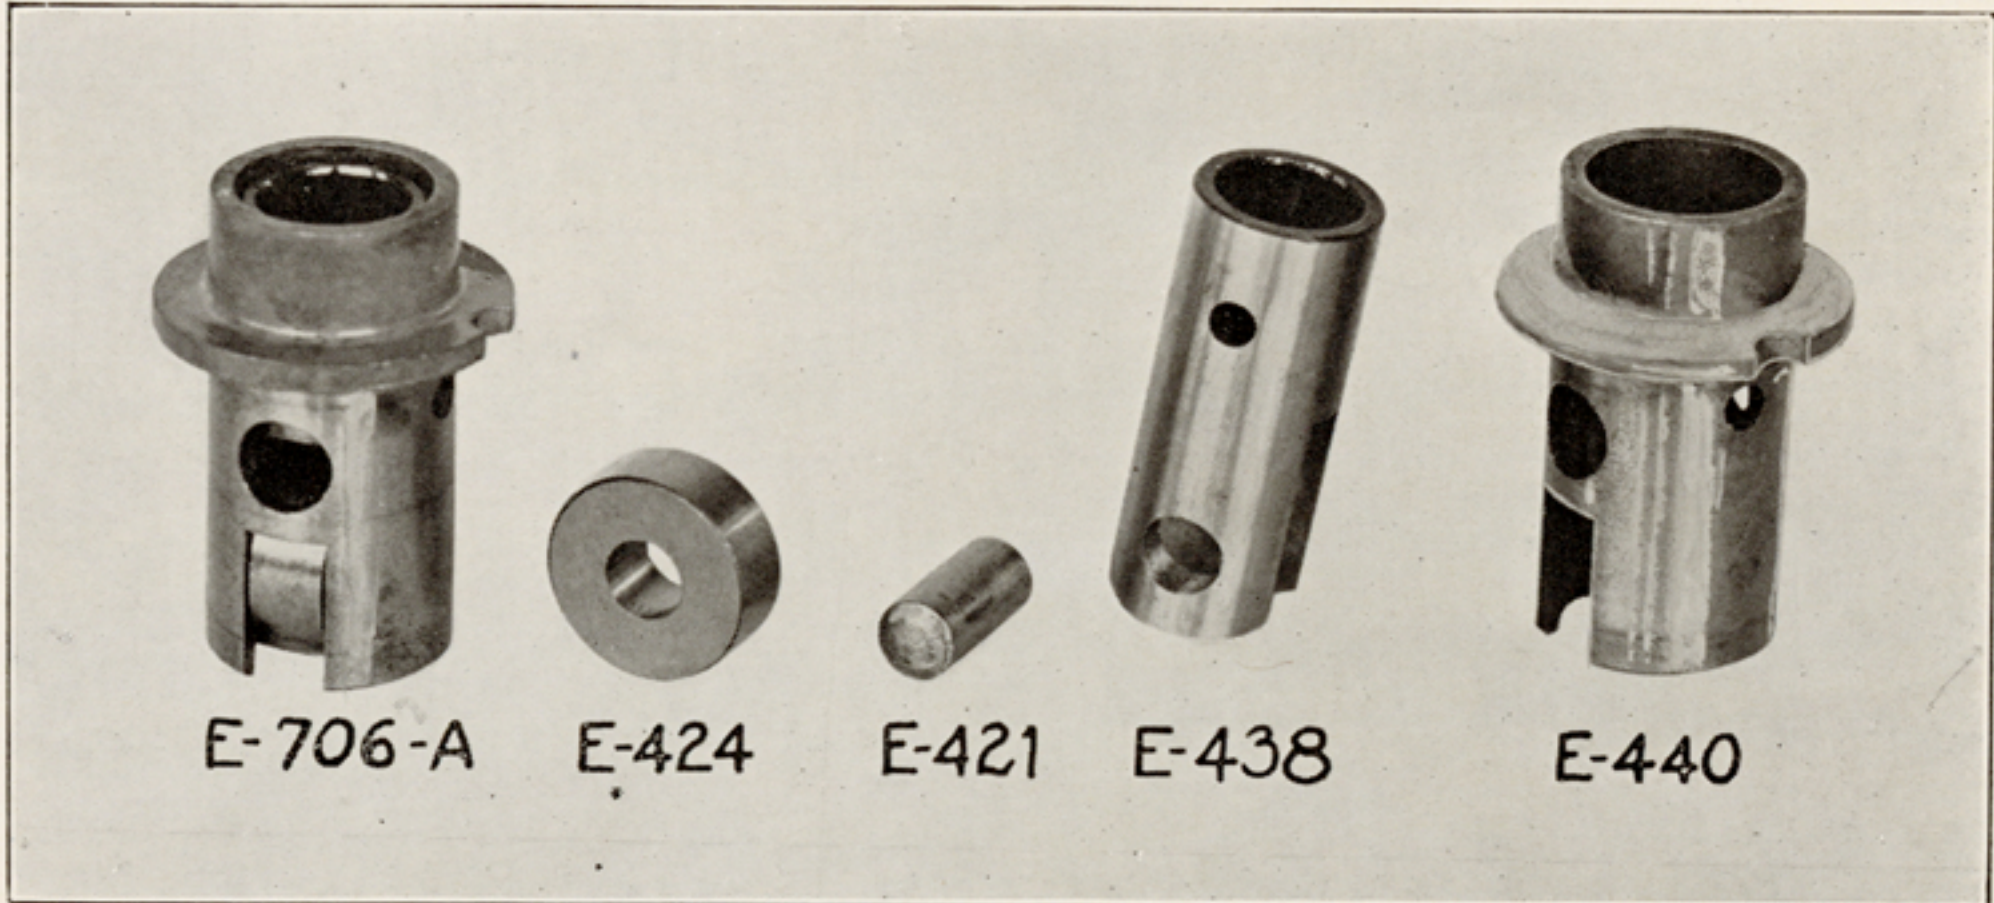

Part No.	Name	No. Req.
E-706-A	Valve lifter guide assembly, including the following:.....	12
E-421	Valve lifter roller pins.....	12
E-424	Valve lifter roller.....	12
E-438	Valve lifter.....	12
E-440	Valve lifter guides.....	12

NOTE:—Complete valve lifter guide assembly can be furnished as indicated above or the individual parts may be ordered by number.

Additional illustrations of Valve Mechanism are shown on pages 12 and 13.


E-443	Valve push rod tube nuts.....	12
E-444	Valve push rod tube lock nuts.....	12
E-450	Valve rocker arm adjusting studs.....	12
E-460	Valve rocker arm brackets.....	2
E-463	Valve push rod ends.....	12
E-490	Valve rocker arm bracket studs.....	8
E-491	Valve rocker arm adjusting stud lock nuts.....	12
E-493	Valve rocker arm bracket stud spacers.....	8
E-498	Valve push rods.....	12
E-499	Valve push rod tubes.....	12
E-535	Valve rocker arm complete.....	12
SP-502	Valve rocker arm bracket stud nuts.....	8
SP-1560	Valve lifter guide locating screw.....	6
SP-2202	Valve rocker arm bracket stud cotter pins.....	8

PRICES ON APPLICATION

Car Number *must* be given when ordering repair parts. Order parts by number in left hand column using name of part in full. Read instructions carefully on page 3 before ordering.

LEXINGTON SERIES "T" PARTS LIST

VALVE AND SPRING GROUP

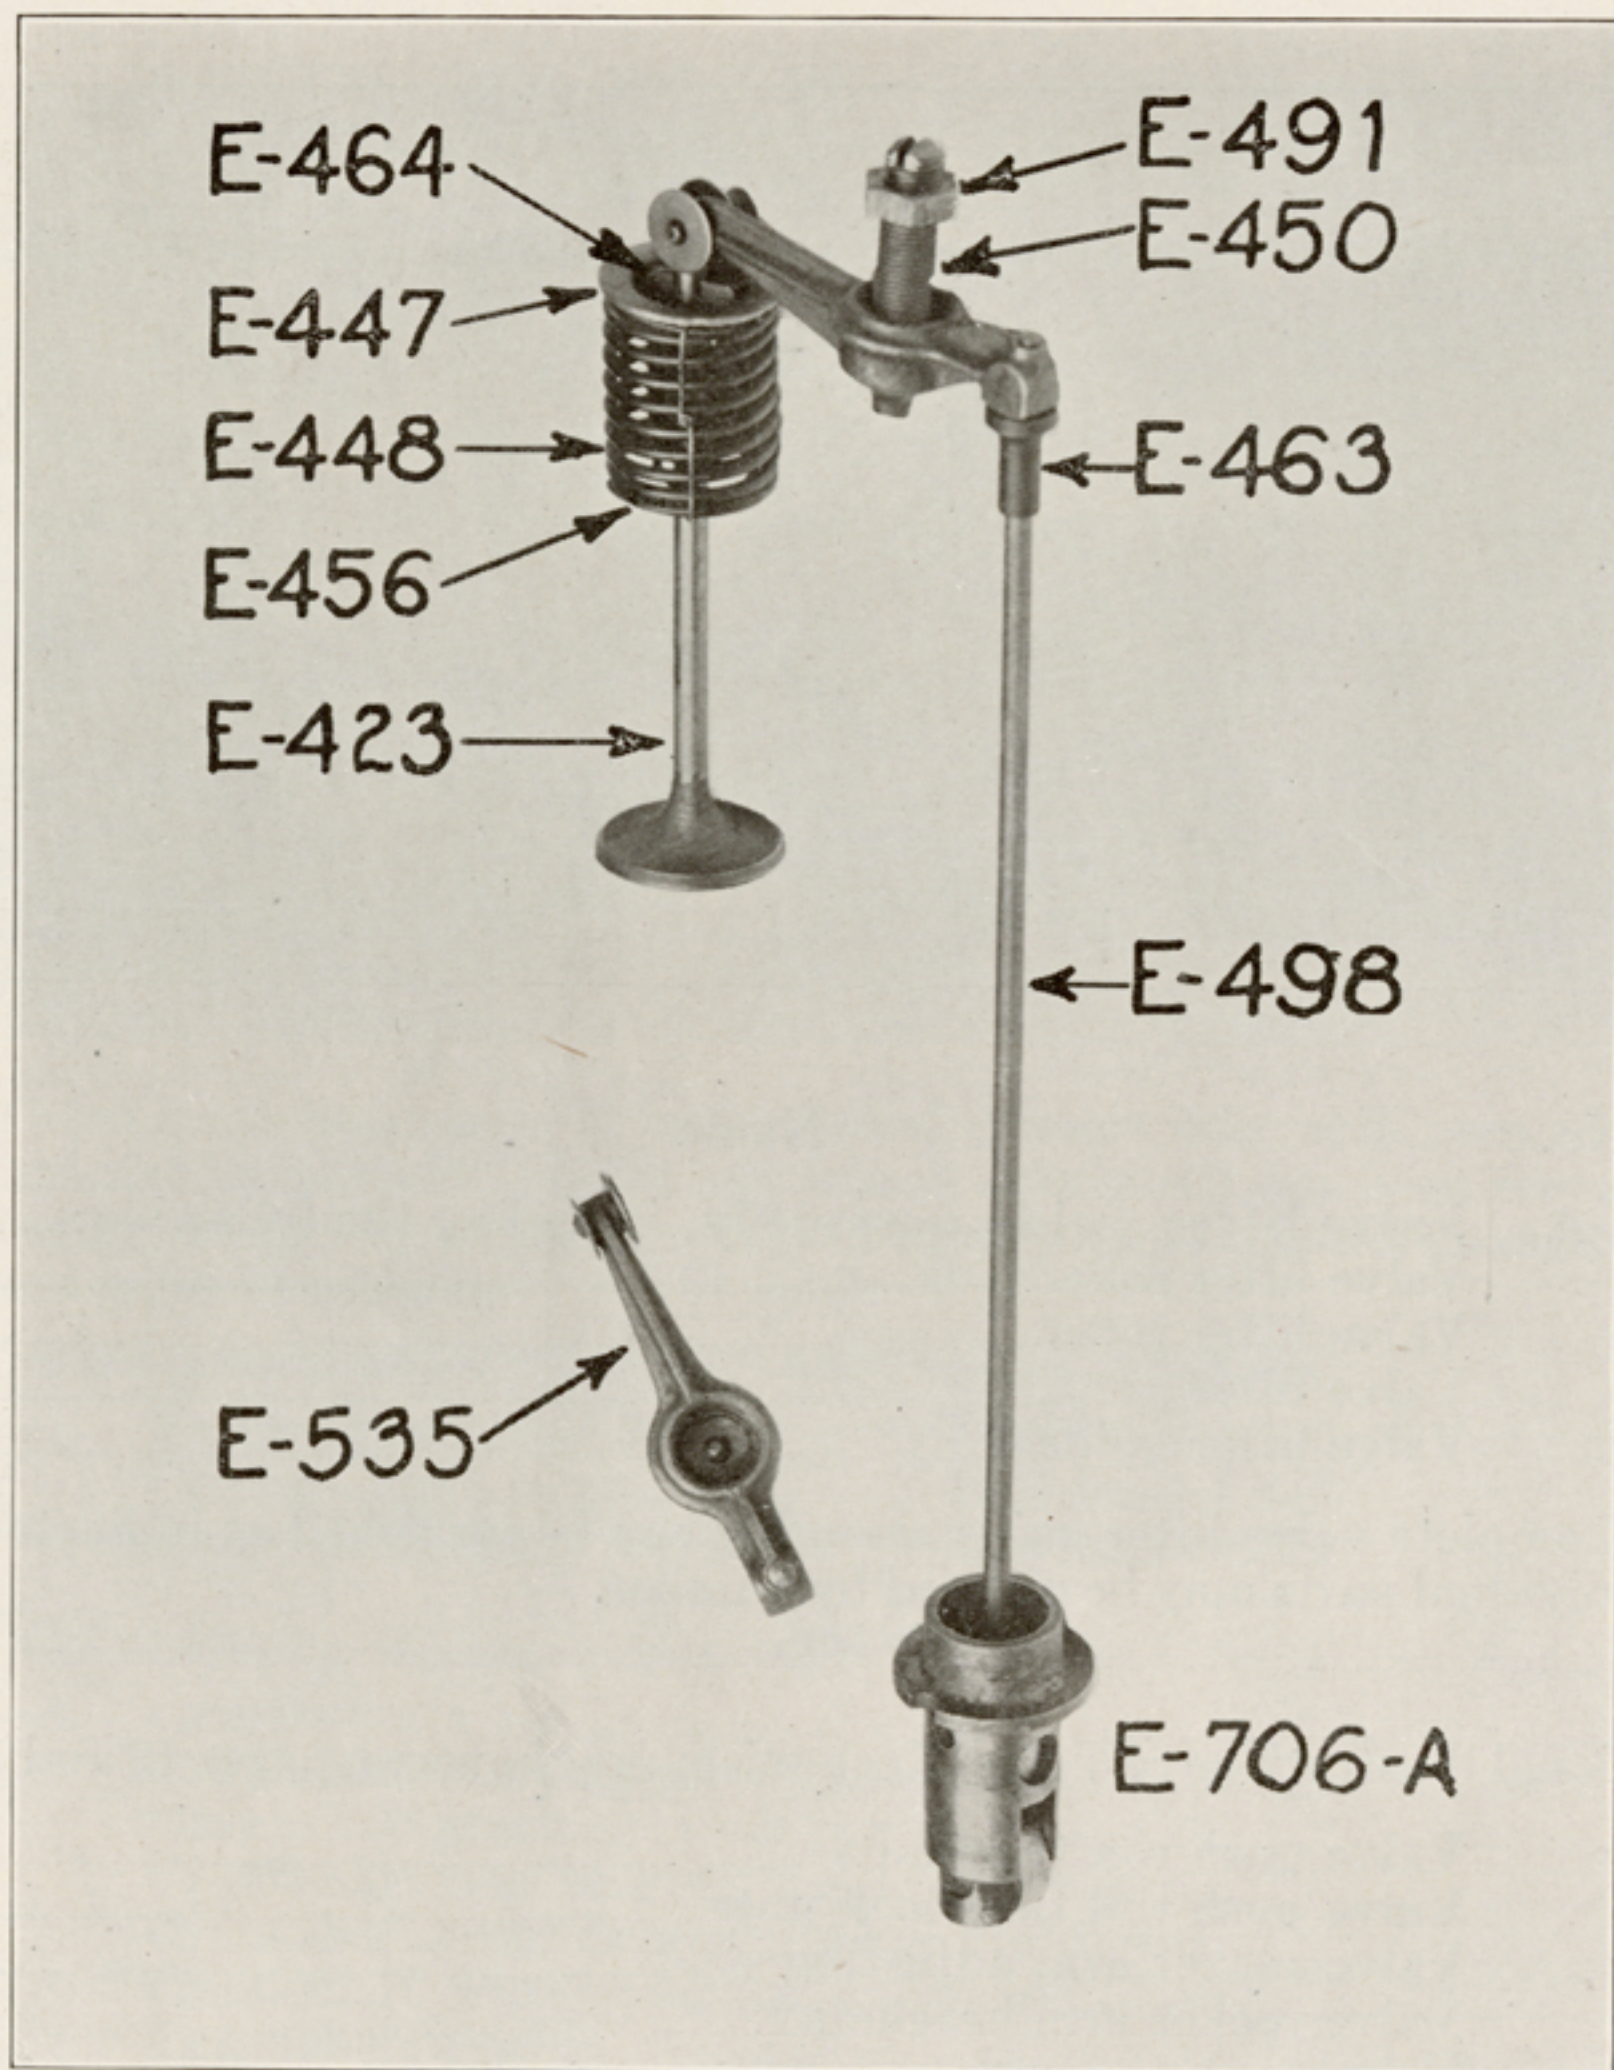


Part No.	Name	No. Req.
E-415	Valve stem guides.....	12
E-423	Valves.....	12
E-447	Valve spring cups.....	12
E-448	Auxiliary valve spring, small inside.....	12
E-456	Valve spring, large outside.....	12
E-464	Valve stem keys.....	12
E-748	Valve spring pilot.....	12

Car Number *must* be given when ordering repair parts. Order parts by number in *left* hand column using name of part in full. Read instructions carefully on page 3 before ordering.

LEXINGTON SERIES "T" PARTS LIST

CYLINDER HEAD AND EXHAUST MANIFOLD GROUP

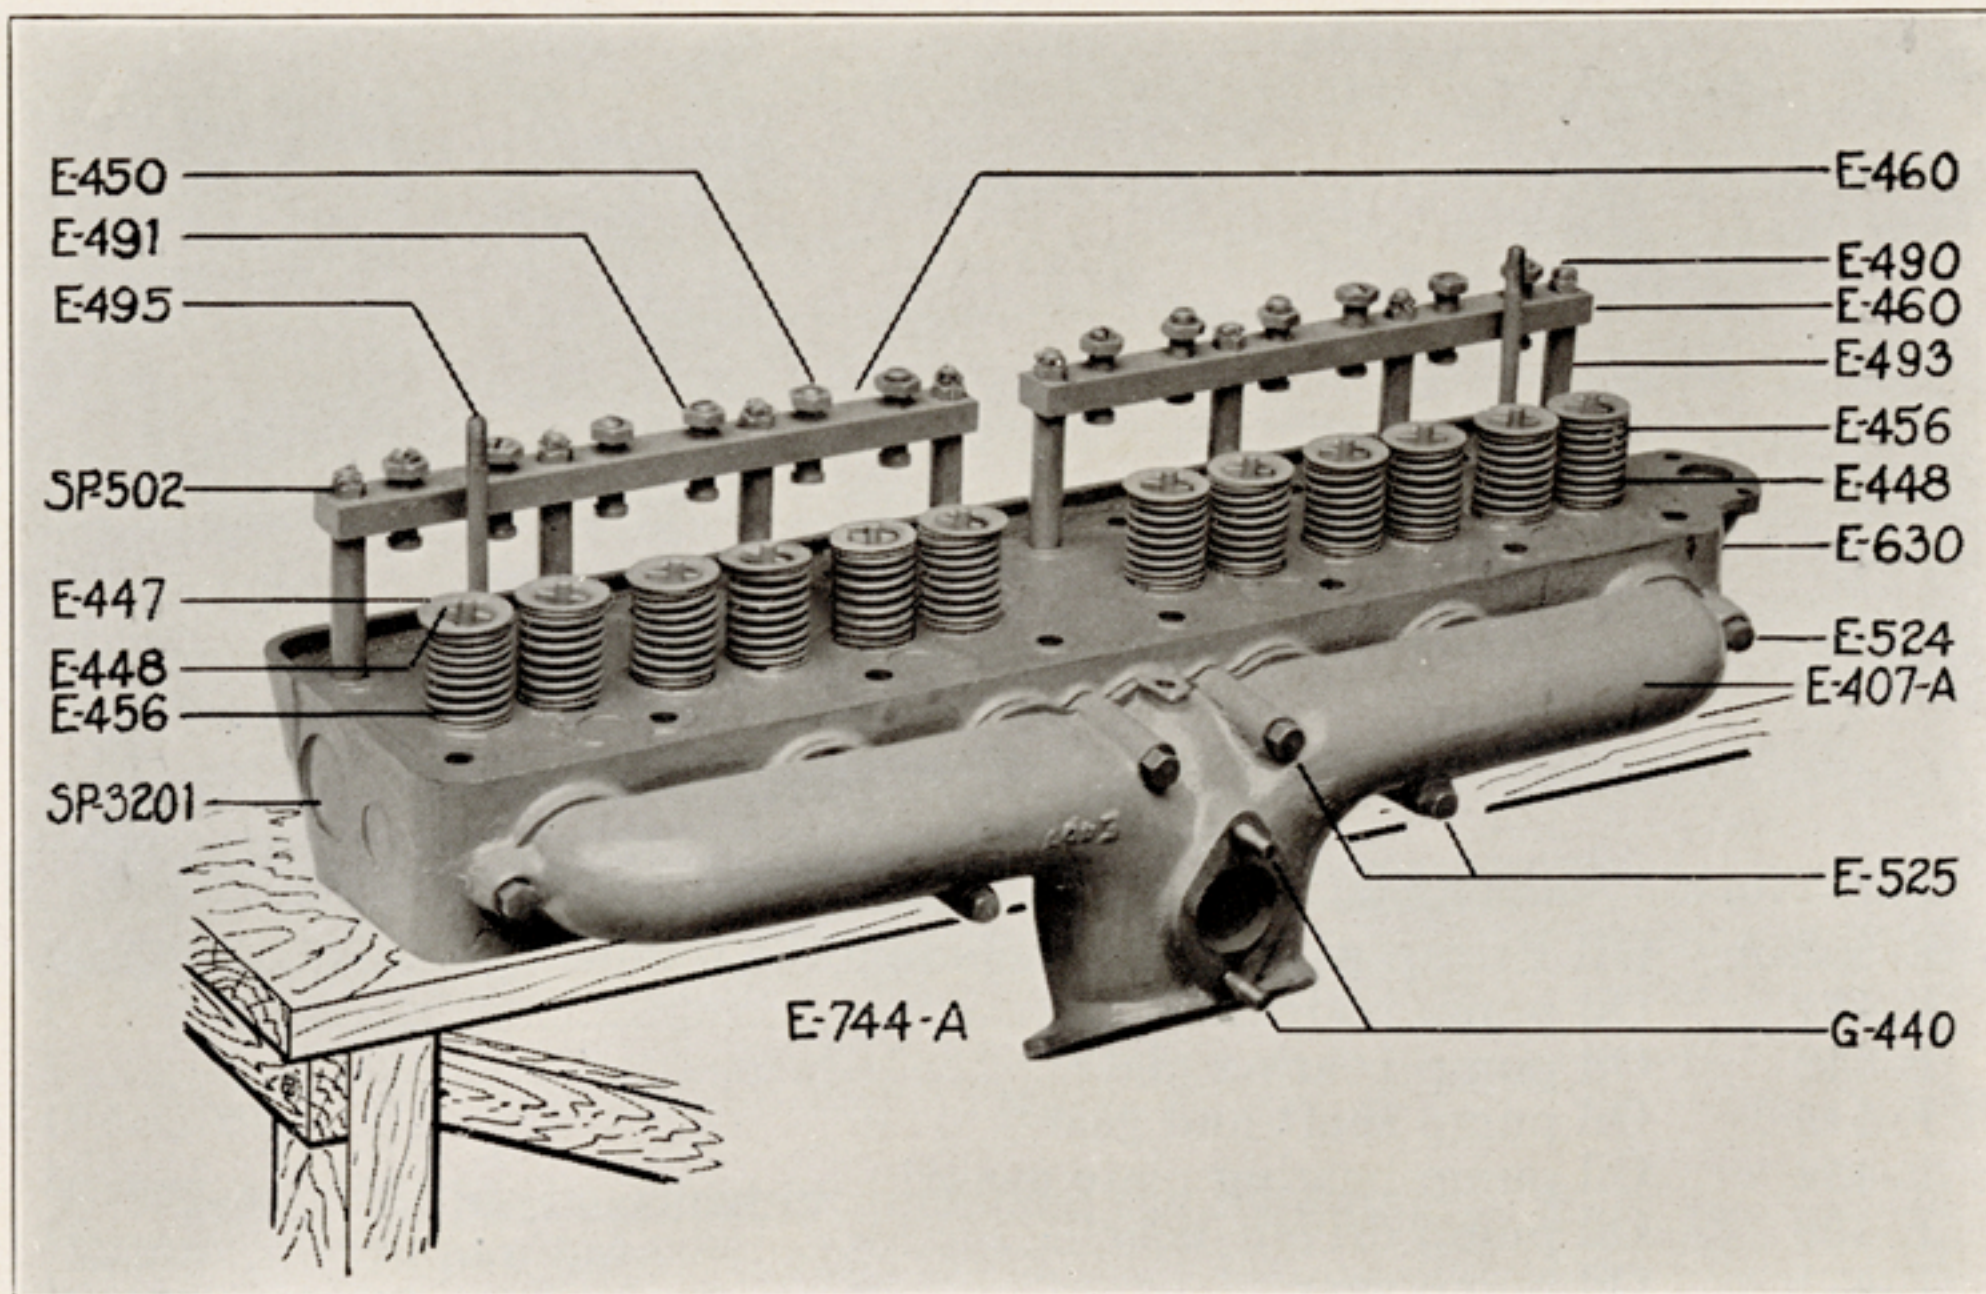

Part No.	Name	No. Req.
E-744-A	Cylinder head assembly, including the following:.....	1
E-415	Valve guide.....	12
E-490	Valve rocker arm bracket stud.....	8
E-630	Cylinder head plug, front.....	1
SP-502	Valve rocker arm bracket stud nut.....	8
SP-3201	Cylinder head 2" Hubbard plug, rear.....	1
SP-3200	Cylinder head 1 1/4" Hubbard plug.....	2
SP-3202	Cylinder head 1" Hubbard plug.....	7
E-465	Cylinder head gasket.....	1


E-407-A	Exhaust manifold assembly, including the following:.....	1
G-440	Carburetor studs.....	2
G-445	Carburetor stud nuts.....	2
E-512	Exhaust manifold gasket (center)	5
E-524	Exhaust manifold bolts, short.....	2
E-525	Exhaust manifold bolts, long.....	4
E-716	Exhaust manifold gasket-end.....	2

Car Number *must* be given when ordering repair parts. Order parts by number in left hand column using name of part in full. Read instructions carefully on page 3 before ordering.

PRICES ON APPLICATION

LEXINGTON SERIES "T" PARTS LIST

ENGINE LUBRICATING SYSTEM

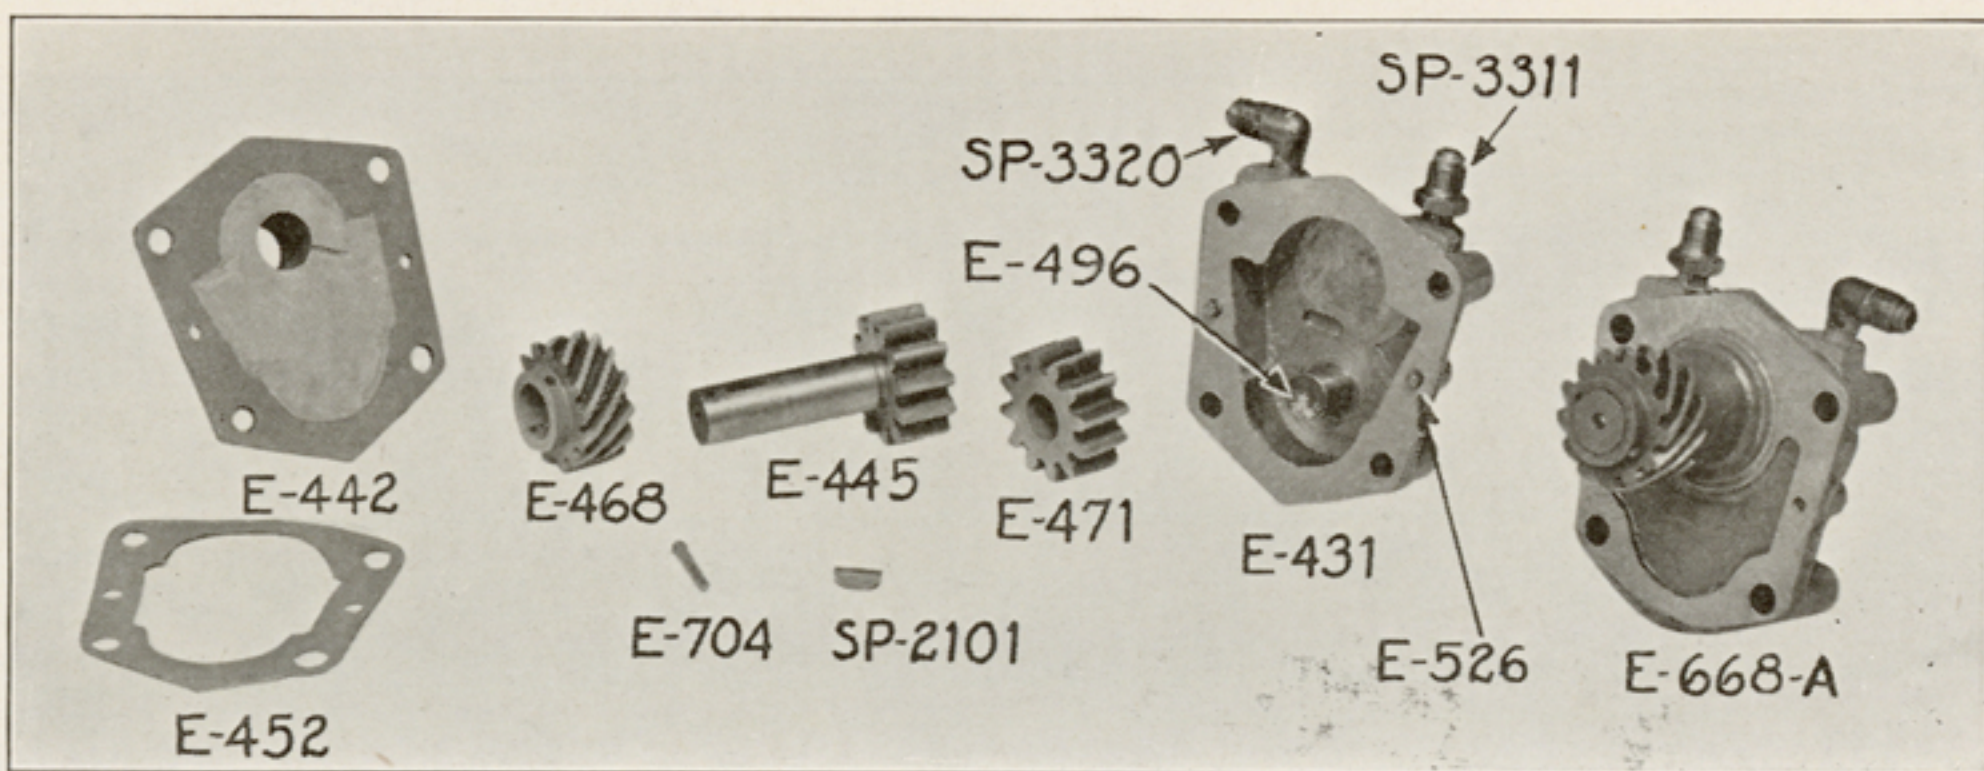

OIL PUMP GROUP

Part No.	Name	No. Req.
E-668-A	Oil Pump assembly, including the following:	1
E-431	Oil pump body	1
E-442	Oil pump bearing plate	1
E-445	Oil pump shaft and gear	1
E-452	Oil pump bearing plate gasket	1
E-468	Oil pump driven gear	1
E-471	Oil pump gear	1
E-496	Oil pump shaft, short	1
E-526	Oil pump dowel pins	2
E-704	Oil pump driven gear pin	1
SP-914	Oil pump bolts	4
SP-2101	Oil pump driven gear key	1


Following parts shown in illustration on Page 15.

E-491	Oil gauge housing tube nut	1
E-492	Oil suction pipe fittings	1
E-513	Oil delivery tube with nuts, pump to crankshaft bearing	1
E-519	Oil gauge housing tube	1
E-521-A	Oil gauge bayonet assembly	1
E-556	Oil suction pipe, oil pan to pump	1
E-557	Support for oil suction line	1
E-558	Oil suction pipe clip	1
E-561	Oil delivery tube tee	1
BD-428	Oil pressure line sleeve connection	1
SP-402	Oil suction line support locknut	1
SP-1560	Oil suction pipe clip screw	1
SP-3301	Oil suction pipe union nut	1
SP-3311	Oil delivery tube union	1
SP-3320	Oil suction pipe elbow	1
SP-3700	Oil suction pipe packing	1
E-750	Oil line from delivery tube to oil pressure gauge with union nuts	1

Car Number *must* be given when ordering repair parts. Order parts by number in left hand column using name of part in full. Read instructions carefully on page 3 before ordering.

LEXINGTON SERIES "T" PARTS LIST

OIL PAN GROUP

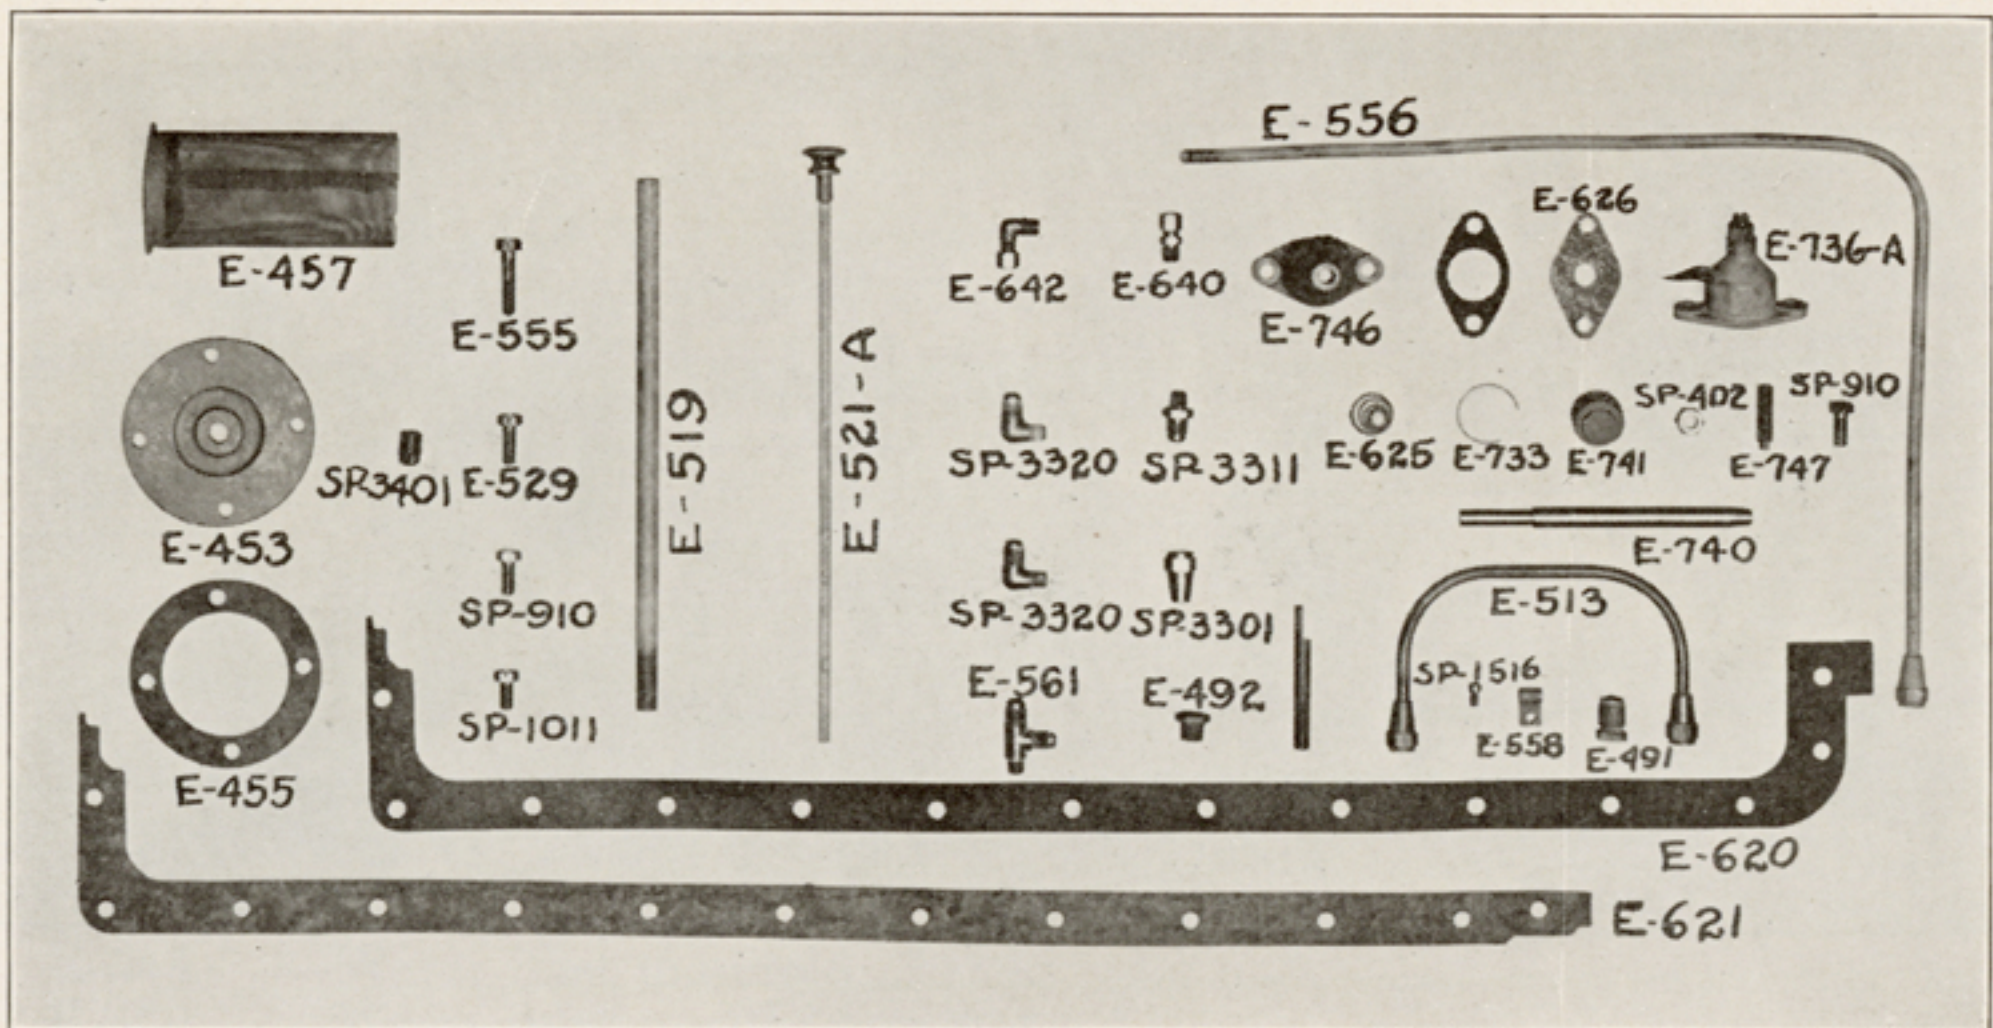

Part No.	Name	No. Req.
E-572-A	Oil pan assembly, including the following:.....	1
E-408	Oil pan only.....	1
E-453	Oil screen flange.....	1
E-455	Oil screen flange ring gasket.....	1
E-457	Oil screen.....	1
SP-910	Oil screen flange cap screw.....	4
SP-1011	Oil pan flange cap screw, pan to cylinder block.....	4
SP-3401	Oil screen flange plug.....	1

Following parts not included in above assembly.

E-529	Oil pan bolts.....	24
E-555	Oil pan bolt. long.....	2
E-620	Oil pan gasket, R. H.....	1
E-621	Oil pan gasket, L. H.....	1
E-647	Oil pan rear flange bolts.....	2


OIL REGULATOR GROUP

E-736-A	Oil regulator assembly, including the following:.....	1
E-625	Oil regulator compression spring.....	1
E-626	Oil regulator gasket.....	1
E-733	Oil regulator piston retaining spring.....	1
E-740	Oil regulator shaft.....	1
E-741	Oil regulator piston.....	1
E-746	Oil regulator cylinder.....	1
E-747	Oil regulator adjusting screw.....	1
SP-402	Oil regulator screw nut.....	Z
SP-910	Oil regulator cylinder cap screw.....	2

PRICES ON APPLICATION

LEXINGTON SERIES "T" PARTS LIST

WATER PUMP GROUP

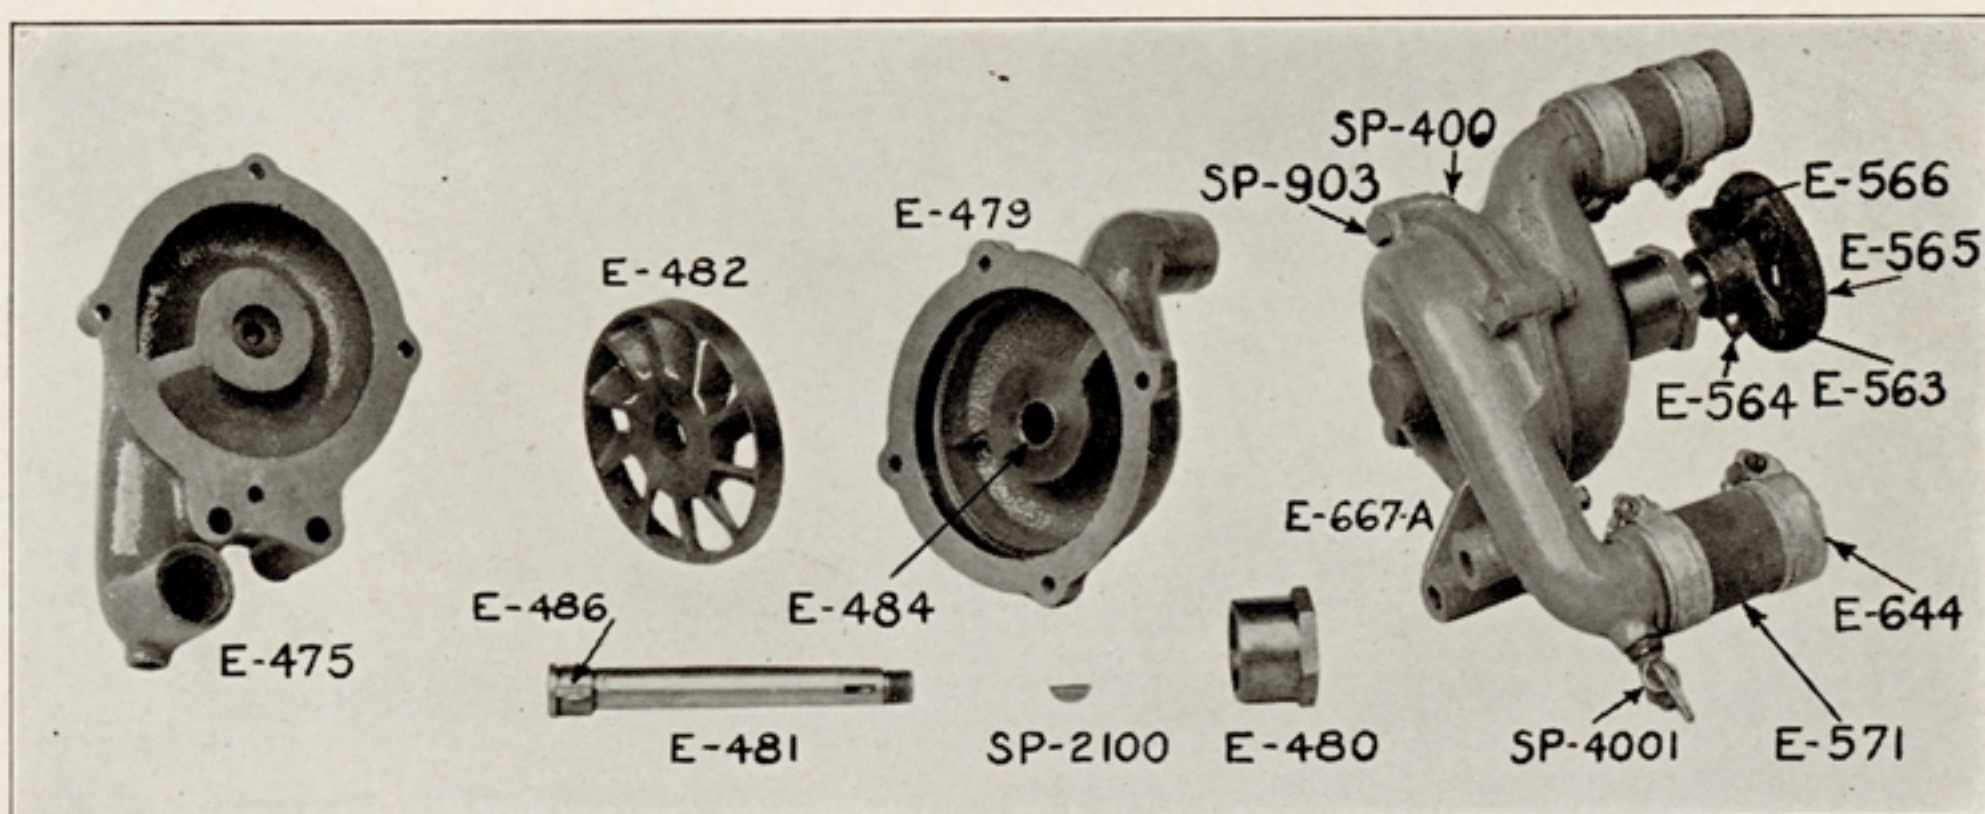

PRICES ON APPLICATION


Part No.	Name	No. Req.
E-667-A	Complete water pump assembly, including the following:	1
E-475	Water pump body, rear half.....	1
E-479	Water pump body, front half.....	1
E-480	Water pump packing nut.....	1
E-481	Water pump impeller shaft.....	1
E-482	Water pump impeller.....	1
E-483	Water pump body gasket.....	1
E-484	Water pump bushing.....	1
E-486	Water pump impeller key.....	1
SP-400	Water pump body bolt nuts.....	4
SP-903	Water pump body bolts.....	4
SP-3750	Water pump packing.....	1
SP-4001	Water pump drain cock.....	2

E-491	Water pump drive shaft nut.....	4
E-563	Water pump coupling flange.....	4
E-564	Water pump coupling lock plate.....	4
E-565	Water pump coupling discs.....	2
E-566	Water pump coupling spacer.....	8
E-568	Water pump drive shaft.....	1
E-643	Water pump coupling bolt.....	8
E-673	Water pump drive shaft lockwashers.....	4
SP-1037	Water pump anchor bolts.....	2
SP-2100	Water pump coupling flange key.....	4

Car Number *must* be given when ordering repair parts. Order parts by number in *left* hand column using name of part in full. Read instructions carefully on page 3 before ordering.

LEXINGTON SERIES "T" PARTS LIST

WATER MANIFOLD GROUP

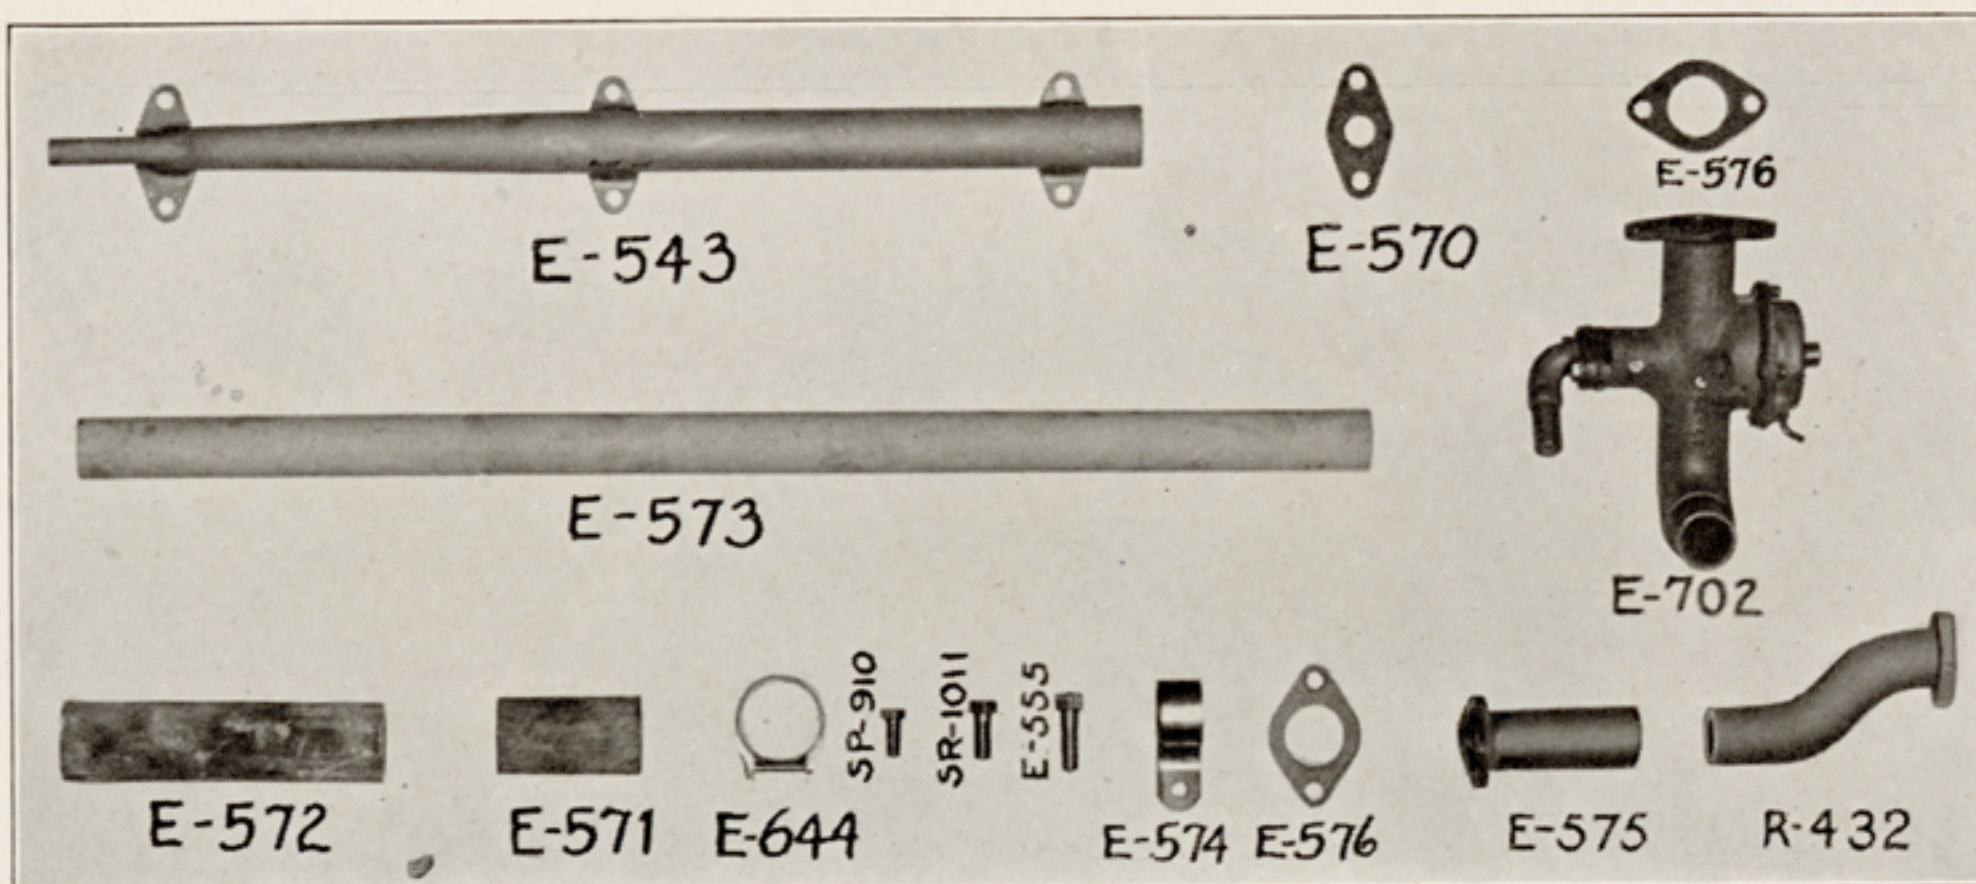


Part No.	Name	No. Req.
E-543	Water inlet manifold.....	1
E-570	Water inlet manifold gasket.....	3
E-571	Water inlet hose, short.....	2
E-572	Water inlet hose, long.....	1
E-573	Water inlet tube.....	1
E-574	Water inlet tube clip.....	2
E-575	Water outlet elbow.....	1
E-576	Water outlet elbow gasket.....	1
E-576	Water thermostat gasket.....	1
E-644	Water outlet hose clamp.....	2
E-644	Water inlet hose clamp.....	6
E-702	Water thermostat for cooling system.....	1
SP-401	Water inlet tube clip nut.....	2
SP-401	Water outlet elbow nuts.....	2
SP-910	Water inlet manifold cap screw.....	6
SP-913	Water outlet elbow cap screw.....	2

FAN GROUP (See cut, Page 18)

E-550-A	Fan Complete including the following:.....	1
E-462	Fan blade assembly complete with blade and spider.....	1
E-489	Fan shaft.....	1
E-510	Fan pulley.....	1
E-517	Fan cork washer.....	1
E-518	Fan oil plug.....	1
E-527	Fan thrust nut.....	1
E-534	Fan thrust nut oil tube.....	1
E-536	Fan bronze washer.....	1
E-537	Fan hub gasket.....	1
E-477	Fan bracket.....	1
E-588	Fan shaft lockwasher.....	1
E-592	Fan bracket stud.....	1
E-507	Fan adjustment screw.....	1
SP-932	Fan bracket bolt.....	3
SP-2100	Fan bracket stud key, No. 3 Woodruff.....	1

PRICES ON APPLICATION

LEXINGTON SERIES "T" PARTS LIST

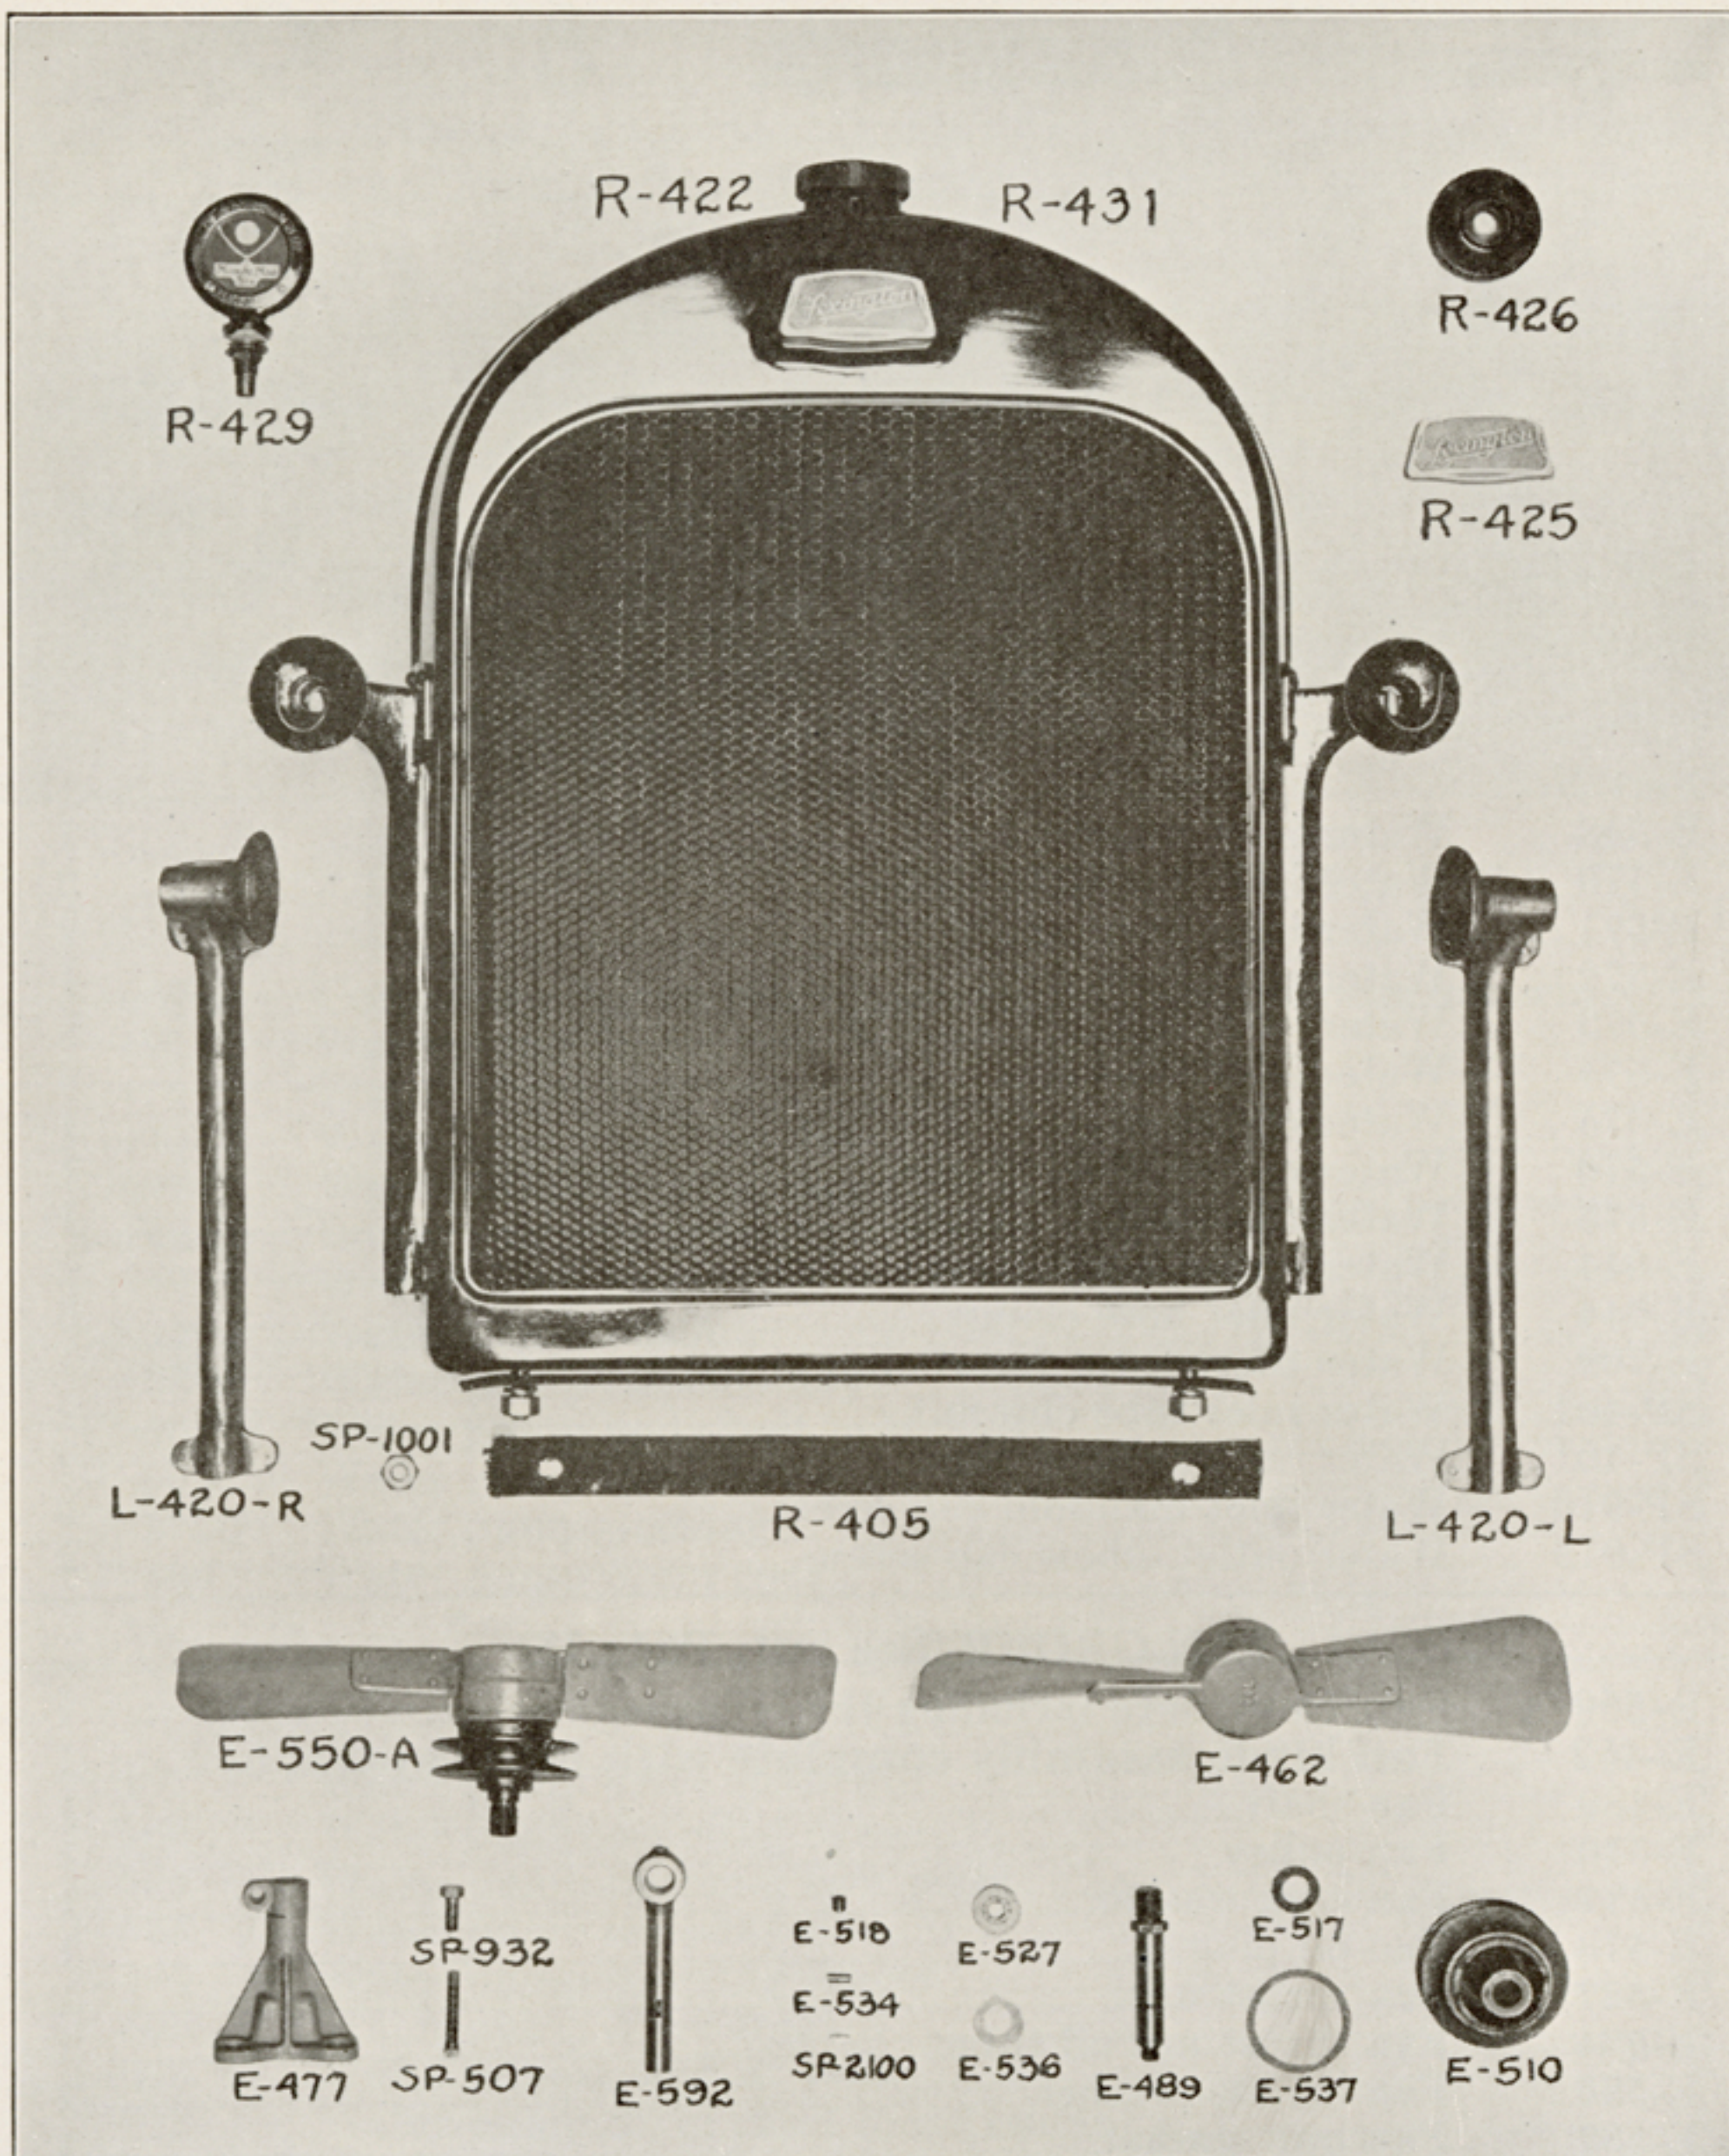

RADIATOR AND COOLING FAN PARTS

WORKS OF HISTORICA
CONNEERSVILLE - IN.

LEXINGTON SERIES "T" PARTS LIST

RADIATOR

NOTE:—When ordering radiators or parts it is necessary to furnish Service Department with serial number of car before proper part can be supplied.

Part No.	Name	No. Req.
R-422	Radiator with lamp brackets attached black enameled, Ansted.....	1
R-431	Radiator with lamp brackets attached, black enameled, Harrison.....	1
R-433	Radiator core, Ansted.....	1
R-434	Radiator core, Harrison.....	1
R-435	Radiator shell, Ansted.....	1
R-436	Radiator shell, Harrison.....	1
R-403	Radiator outlet elbow gasket, Vellumoid.....	1
R-403	Radiator inlet gasket, Vellumoid.....	1
R-405	Pc. antisqueak $\frac{1}{8}$ " thick, $1\frac{1}{2}$ " wide, 20" long. Between radi- ator and cross member.....	2
R-423	Radiator inlet hose, $1\frac{1}{4}$ "-3-ply-7".....	1
R-424	Radiator outlet hose, 3 ply- $1\frac{1}{4}$ -6" (wire inserted).....	1
R-425	Lexington name plate for radiator shell.....	1
R-426	Radiator filler cap, furnished with radiator.....	1
R-429	Boyce motometer large size.....	1
R-430	Pc. antisqueak $\frac{3}{8}$ "x $\frac{5}{8}$ " wide, 66" long.....	1
R-432	Radiator outlet elbow.....	1
L-420-R	Lamp bracket, right.....	1
L-420-L	Lamp bracket, left.....	1
E-575	Water outlet elbow.....	1
E-644	Radiator $1\frac{1}{4}$ "-3 ply hose clamps.....	4
E-702	Thermostat for cooling system.....	1
E-713	Thermostat by-pass hose, $\frac{1}{2}$ " diam. 3 ply $23\frac{1}{4}$ " long with R-422 only.....	1
E-714	Thermostat by-pass hose, $\frac{1}{2}$ " diam. 3 ply $24\frac{1}{4}$ " long with R-431 only.....	1
E-719	3 ply hose clamps $\frac{1}{2}$ ".....	1
M-164	Radiator $\frac{1}{4}$ " I. P. drain cock.....	1
SP-1001	Radiator hold down $\frac{1}{2}$ "-13-U. S. S. hex. nuts.....	2
SP-1011	$\frac{5}{16}$ "-18"-U. S. S. x $\frac{3}{4}$ " hex. cap screws.....	2
SP-2804	Japanned split iron rivets, for attaching antssqueak to radiator.....	18


PRICES ON APPLICATION

Car Number *must* be given when ordering repair parts. Order parts by number in *left* hand column using name of part in full. Read instructions carefully on page 3 before ordering.



LEXINGTON SERIES "T" PARTS LIST

FLYWHEEL GROUP

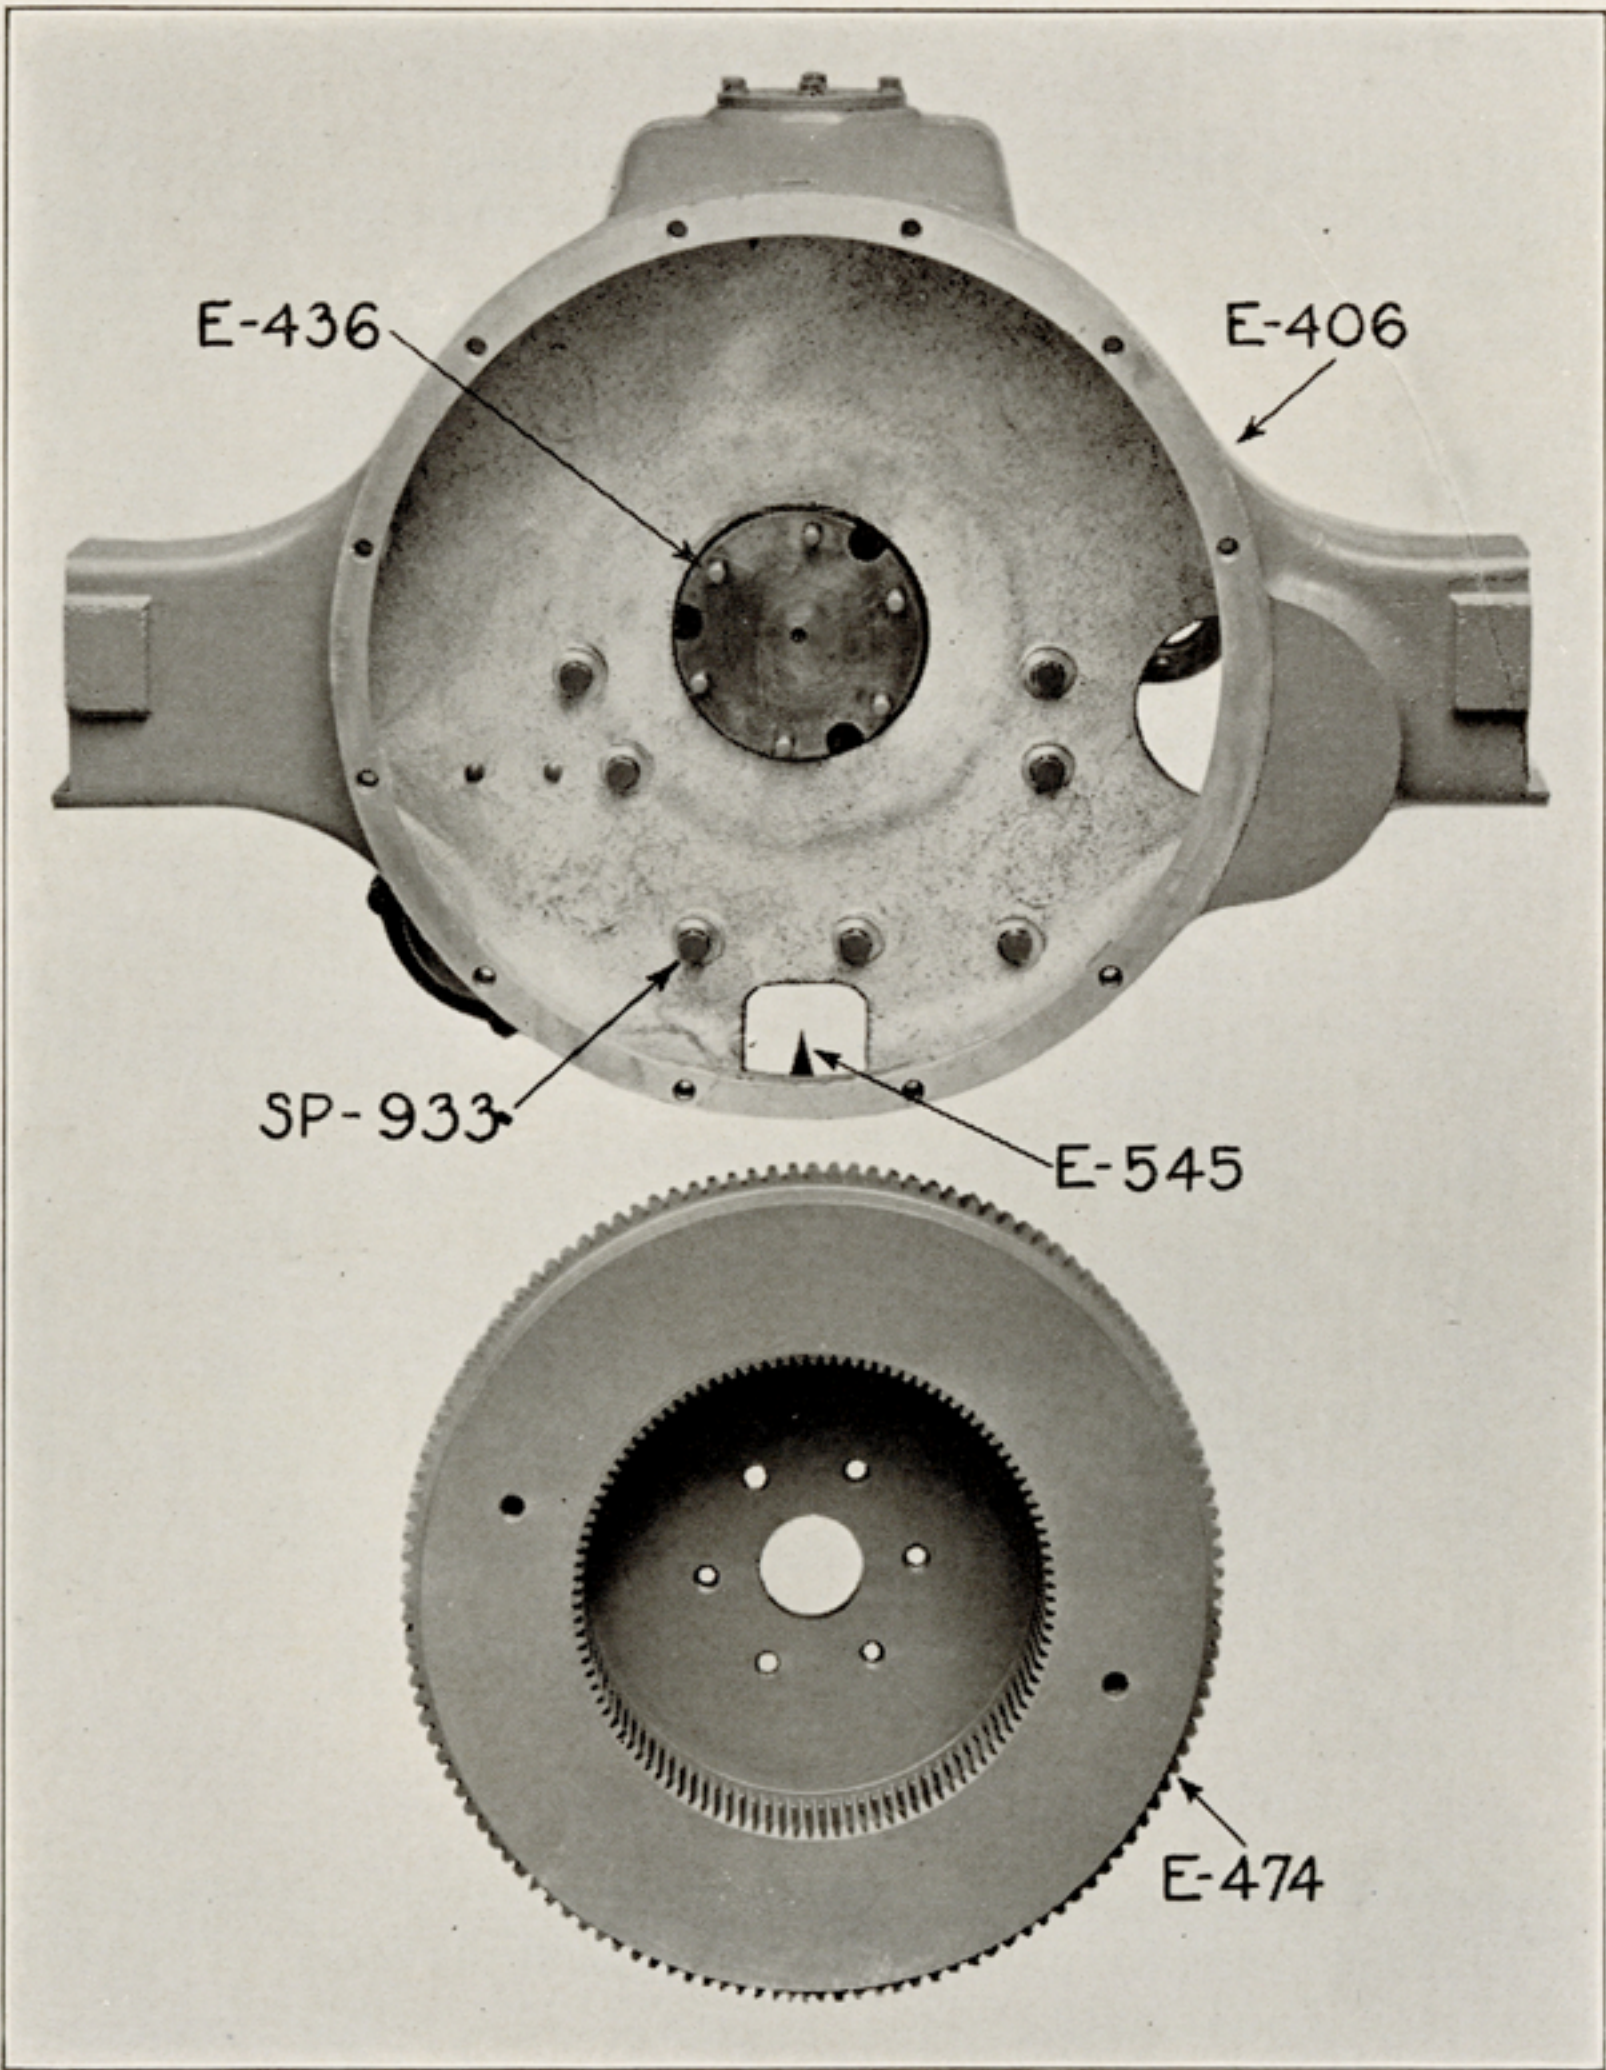


PRICES ON APPLICATION

Part No.	Name	No. Req.
E-406	Flywheel housing.....	1
E-436	Flywheel bolts.....	6
E-474	Flywheel.....	2
E-545	Flywheel pointer.....	1
SP-402	Flywheel bolt nuts.....	6
SP-933	Flywheel housing bolts.....	7
SP-1560	Flywheel pointer screws.....	2


Car Number *must* be given when ordering repair parts. Order parts by number in *left* hand column using name of part in full. Read instructions carefully on page 3 before ordering.

IGNITION



(Continued on Page 22)


LEXINGTON SERIES "T" PARTS LIST

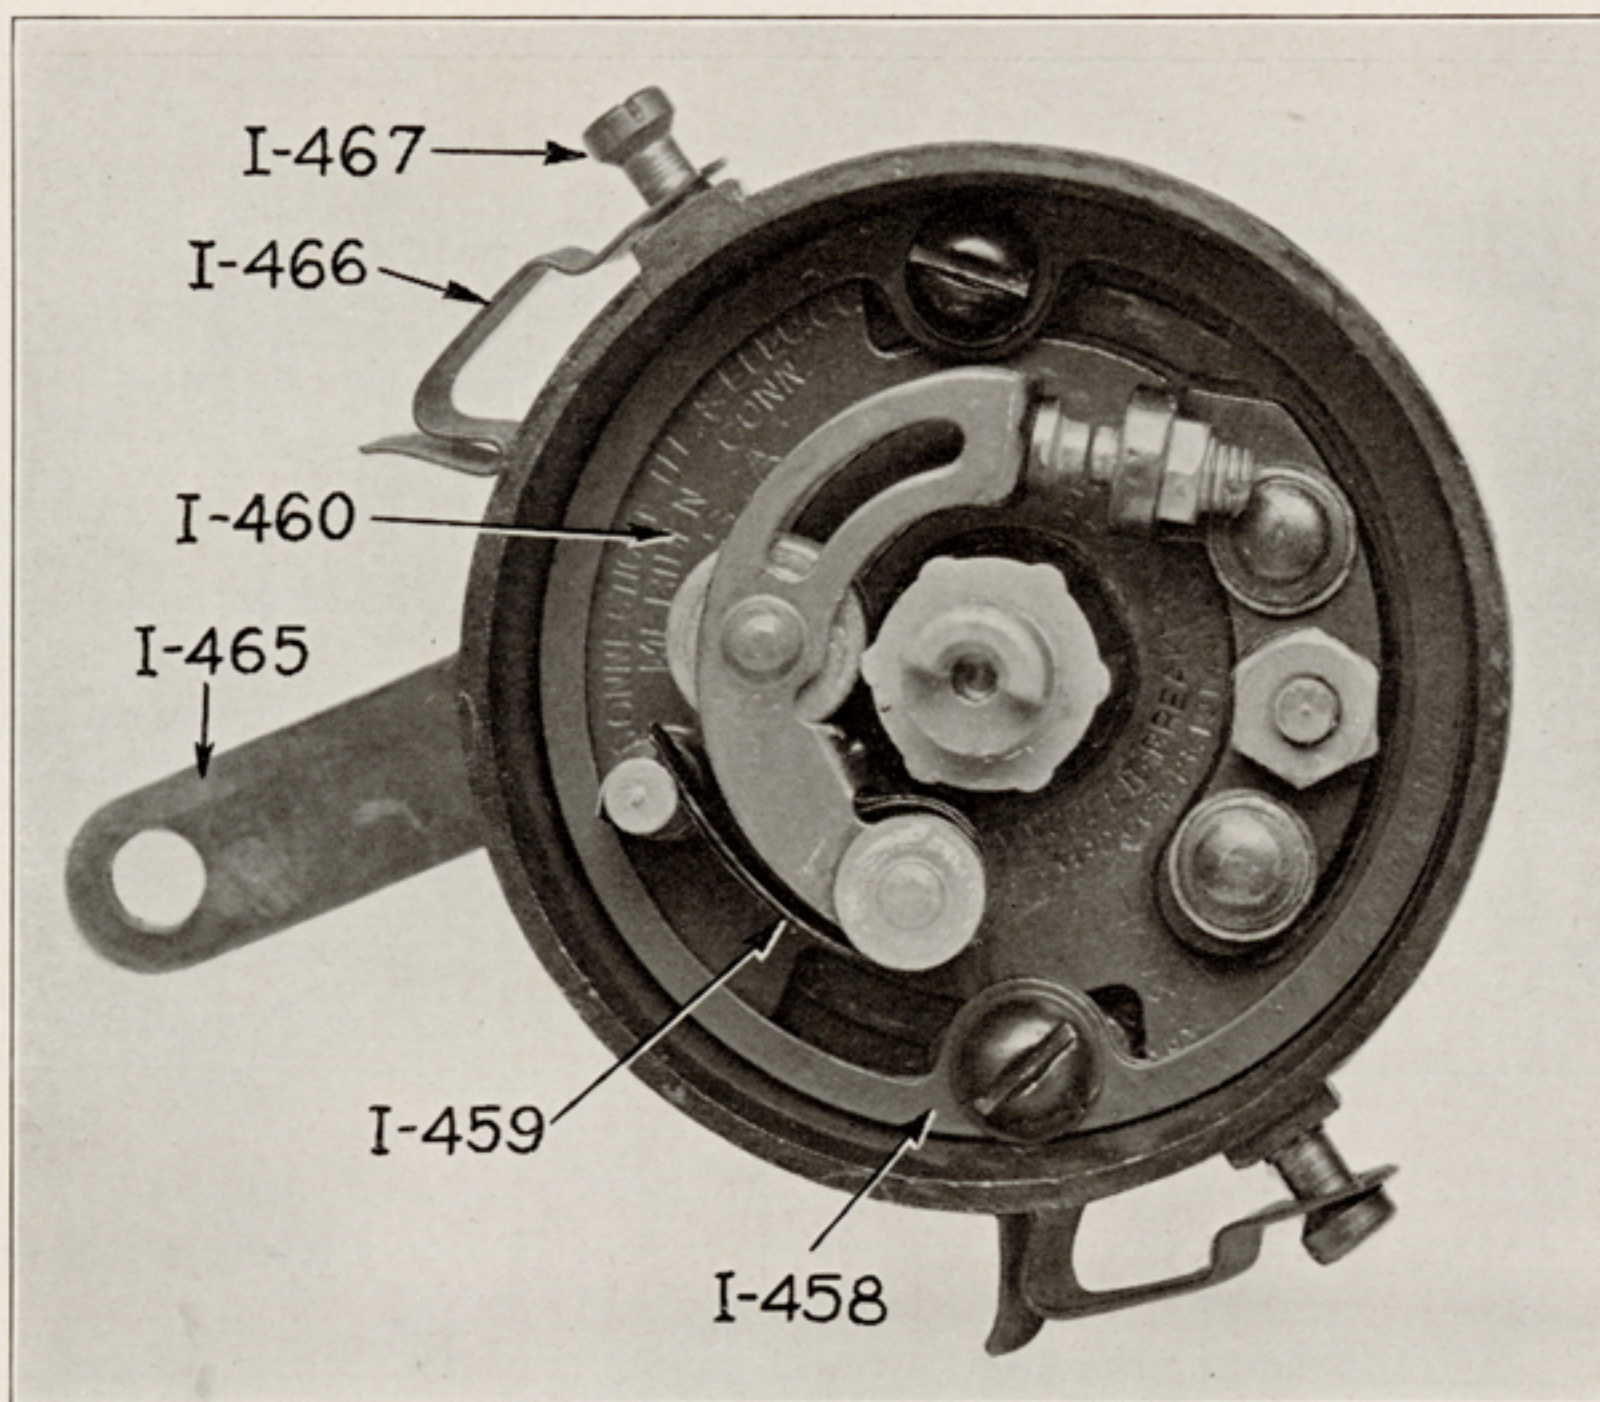

IGNITION (Continued)

Part No.	Name	No. Req.
NOTE:—I-478 to I-483 inclusive are used when ignition is fastened below the water manifold.		
I-478	Ignition cable wire No. 1, 30" long.....	1
I-479	Ignition cable wire No. 2, 31" long.....	1
I-480	Ignition cable wire No. 3, 31 $\frac{1}{4}$ " long.....	1
I-481	Ignition cable wire No. 4, 46 $\frac{1}{4}$ " long.....	1
I-482	Ignition cable wire No. 5, 45" long.....	1
I-483	Ignition cable wire No. 6, 47 $\frac{1}{4}$ " long.....	1
I-484	Distributor shaft spacer.....	1
I-485	Distributor shaft spacer pin.....	1
E-422	Distributor driven gear.....	1
E-476	Distributor bracket.....	1
E-523	Distributor bracket gasket.....	1
E-705	Distributor driven gear pin.....	1
SP-911	Distributor bracket bolt.....	2
SP-911	Distributor bracket clamp bolt.....	1

Car Number *must* be given when ordering repair parts. Order parts by number in left hand column using name of part in full. Read instructions carefully on page 3 before ordering.

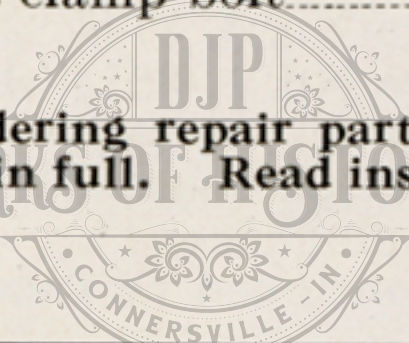


LEXINGTON SERIES "T" PARTS LIST

STEERING GEAR—SPARK AND THROTTLE GROUP

Part No.	Name	No. Req.
SG-500-A	Steering gear assembly, including the following parts:	1
SG-403	Steering hand wheel assembly, 18".....	1
SG-403	Steering hand wheel assembly, 17".....	1
SG-471	Steering gear throttle pinion gear.....	1
SG-472	Steering gear spark pinion gear.....	1
SG-473	Steering gear throttle gear, large.....	1
SG-474	Steering gear spark gear, large.....	1
SG-475	Steering gear housing.....	1
SG-476	Steering gear housing side plug.....	1
SG-477	Steering gear worm gear.....	1
SG-478	Steering gear housing bushing.....	2
SG-480	Steering gear worm.....	1
SG-481	Steering gear Woodruff key for steering gear worm.....	1
SG-482	Steering gear top plug.....	1
SG-483	Steering gear worm gear ball thrust bearings.....	2
SG-484	Steering gear top plug bushing.....	1
SG-485	Steering gear mast jacket felt oil rings.....	3
SG-486	Steering gear mast jacket bushing.....	1
SG-487	Steering gear mast jacket.....	1
SG-488	Steering gear oil hole cover.....	1
SG-489	Steering gear quadrant clamp.....	1
SG-490	Steering gear cork composition gaskets.....	4
SG-491	Steering gear steering arm.....	1
SG-492	Steering gear spark tube.....	1
SG-493	Steering gear throttle tube.....	1
SG-494	Steering gear quadrant tube.....	1
SG-495	Steering gear post.....	1
SG-496	Steering gear post nut.....	1
SG-497	Steering gear Woodruff key for hand wheel assembly.....	1
SG-498	Steering gear post bushing.....	1
SG-499	Steering gear sector.....	1
SG-501	Steering gear hand throttle lever.....	1
SG-502	Steering gear pawl.....	2
SG-503	Steering gear pawl spring.....	2
SG-504	Steering gear hand spark lever.....	1
SG-505	Steering gear hand spark lever clamp screw.....	1
SG-506	Steering gear horn button.....	1
SG-507	Steering post tube oil wick.....	1
SG-509	Steering gear horn button set screw.....	1
SP-501	Steering gear spark and throttle gear stud castle nut.....	1
SP-601	Steering gear top plug clamp bolt.....	2
SP-990	Steering gear steering arm bolt.....	1
SP-1001	Steering gear housing side plug clamp screw.....	1
SP-1002	Steering gear quadrant clamp bolts.....	2
SP-1003	Steering gear top plug clamp bolt.....	2
SP-1003	Steering gear quadrant clamp screw.....	1
SP-1003	Steering gear top plug clamp bolt.....	2

PRICES ON APPLICATION

LEXINGTON SERIES "T" PARTS LIST

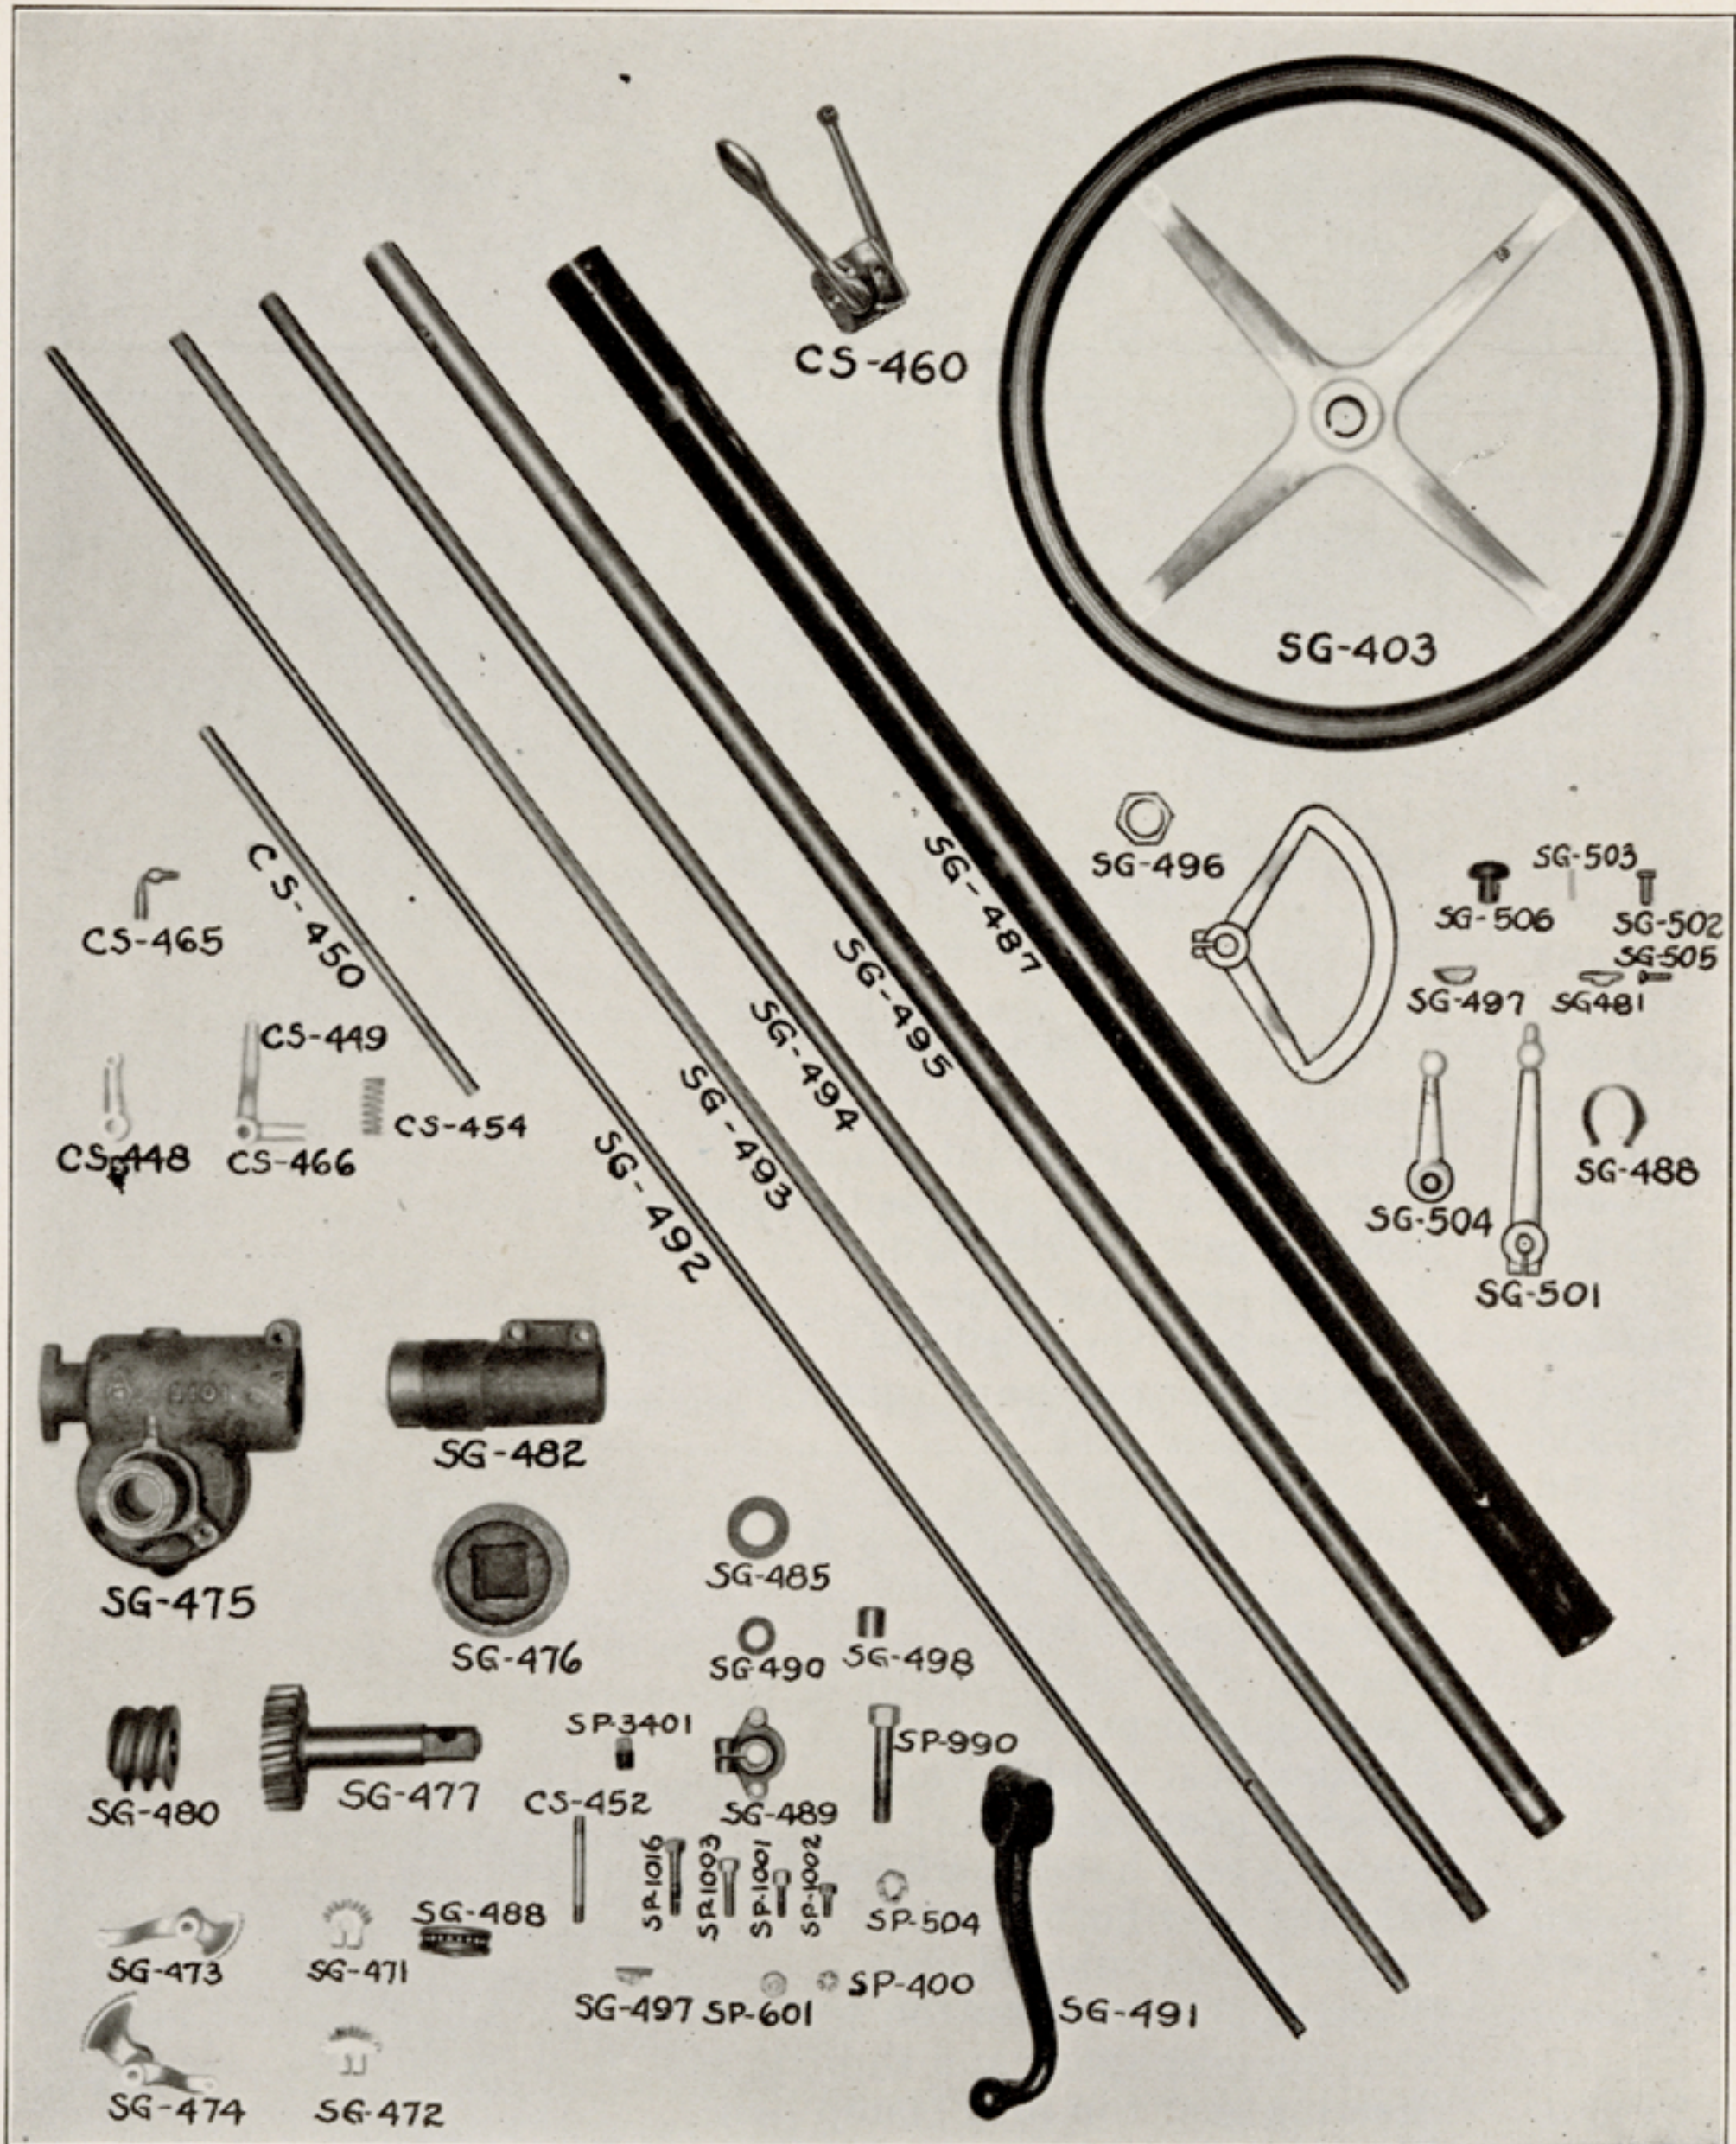

STEERING GEAR AND SPARK AND THROTTLE PARTS



LEXINGTON SERIES "T" PARTS LIST

STEERING GEAR (Continued)

Part No.	Name	No. Req.
SP-1016	Steering gear housing clamp bolt.....	1
SP-1536	Steering gear hand throttle clamp screw.....	1
SP-1536	Steering gear sector clamp screw.....	1
SP-3401	Steering gear housing top plug pipe plug.....	1
CS-452	Steering gear spark and throttle gear stud.....	1
SG-470-A	Steering gear drag link assembly.....	1
SG-175	Steering gear drag link plug.....	2
SG-176	Steering gear drag link spring.....	2
SG-177	Steering gear drag link spring plug.....	2
SG-508	Steering gear drag link tube.....	1

SPARK AND THROTTLE

CS-448	Lever for cross shaft carburetor side of engine.....	1
CS-449	Throttle bell crank.....	1
CS-450	Throttle cross shaft, $\frac{3}{8}$ x12" C. R. S.....	1
CS-453	Throttle control rod adjusting sleeve.....	1
CS-453	Spark control rod adjusting sleeve.....	1
CS-454	Spring for throttle cross shaft.....	1
CS-455	$\frac{3}{16}$ x7" rod from cross shaft to carburetor $\frac{5}{16}$ " thrd. both ends.....	1
CS-456	$\frac{3}{16}$ x16" rod from short lever of bell crank to foot throttle 10-32 thrds. one end.....	1
CS-458	$\frac{3}{16}$ x11 $\frac{1}{4}$ " rod bell crank to distributor C. R. S.....	1
CS-459-A	Foot throttle assembly, consisting of the following:.....	1
CS-460	Foot throttle pedal.....	1
CS-461	Foot throttle pedal bracket.....	1
CS-462	Foot throttle pin	1


CS-463	Throttle control rod adjustment sleeve.....	1
CS-464	Rod from cross shaft to lever on steering column $\frac{3}{16}$ " with ball joint attached.....	2
CS-465	Ball joint $\frac{1}{4}$ "-28 male thrd. both ends.....	2
CS-466	Spark bell crank.....	1
SP-400	$\frac{1}{4}$ "-28 S. A. E. hex nut.....	1
SP-708	No. 10-32 hex. machine nut, steel	3
SP-1534	Throttle pinion clamp screw.....	1
SP-1534	Spark pinion clamp screw.....	1
SP-1535	No. 10-32x $\frac{1}{2}$ " fillister head machine screw	3
SP-2301	Cross shaft taper pin.....	1
SP-2301	Throttle bell crank taper pin.....	1
SP-2306	Foot throttle pedal taper pin.....	1
SP-3401	Ball joints, male thrd. $\frac{1}{4}$ "-28, female thrd. No. 10-32.....	5

Car Number *must* be given when ordering repair parts. Order parts by number in left hand column using name of part in full. Read instructions carefully on page 3 before ordering

PRICES ON APPLICATION

LEXINGTON SERIES "T" PARTS LIST

SPEEDOMETER GROUP

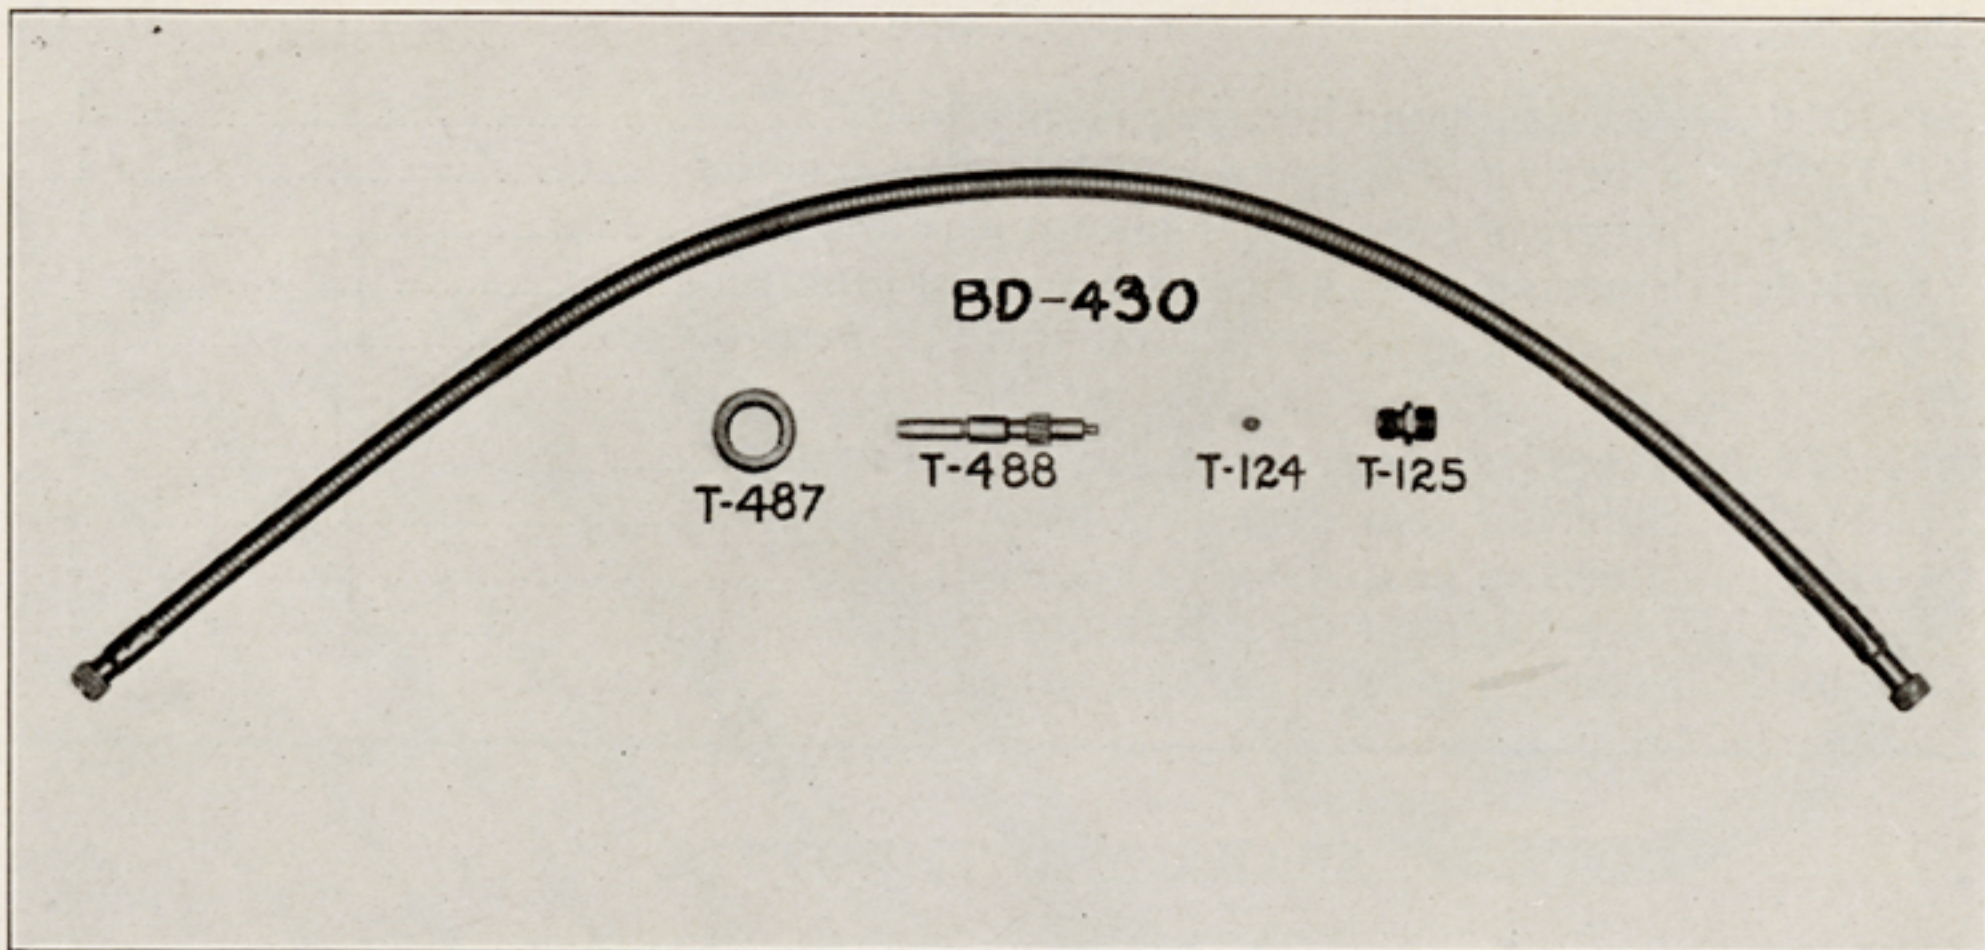


PRICES ON APPLICATION

Part No.	Name	No. Req
BD-429	Stewart speedometer No. 131 J; 75 mile calibration.....	1
BD-430	Speedometer cable, 46" long.....	1
T-124	Speedometer sleeve cable end.....	1
T-126	Speedometer driving worm gear key No. 3.....	1
T-613	Speedometer driving worm gear—6 teeth; used with 4 ⁵ / ₈ " ratio axle on Moore type touring with 33x4 ¹ / ₂ " tires, No. 12231.....	1
T-616	Speedometer driven gear and shaft—16 teeth; used with 4 ⁵ / ₈ " ratio axle on Moore type touring with 33x4 ¹ / ₂ " tires, No. 1203.....	1
T-615	Speedometer driving worm gear—4 teeth; used with 5 ¹ / ₈ " ratio axle on Staudt type touring car with 32x4 ¹ / ₂ " tires, No. 9740.....	1
T-614	Speedometer driven gear and shaft—12 teeth; used with 5 ¹ / ₈ " ratio axle on Staudt type touring car with 32x4 ¹ / ₂ " tires, No. 5379.....	1
T-615	Speedometer driving worm gear—4 teeth; used with 5 ¹ / ₈ " ratio axle on Sedan—32x4 ¹ / ₂ " tires, No. 9740.....	1
T-614	Speedometer driven gear and shaft—12 teeth; used with 5 ¹ / ₈ " ratio axle on Sedan with 32x4 ¹ / ₂ " tires, No. 5379.....	1
T-615	Speedometer driving worm gear—4 teeth; used with 5 ¹ / ₈ " ratio axle on Sedanette First and Second Series with 32x4 ¹ / ₂ " tires, No. 9740.....	1
T-614	Speedometer driven gear and shaft—12 teeth; used with 5 ¹ / ₈ " ratio axle on Sedanette First and Second Series with 32x4 ¹ / ₂ " tires, No. 5379.....	1

Car Number *must* be given when ordering repair parts. Order parts by number in *left* hand column using name of part in full. Read instructions carefully on page 3 before ordering.

LEXINGTON SERIES "T" PARTS LIST

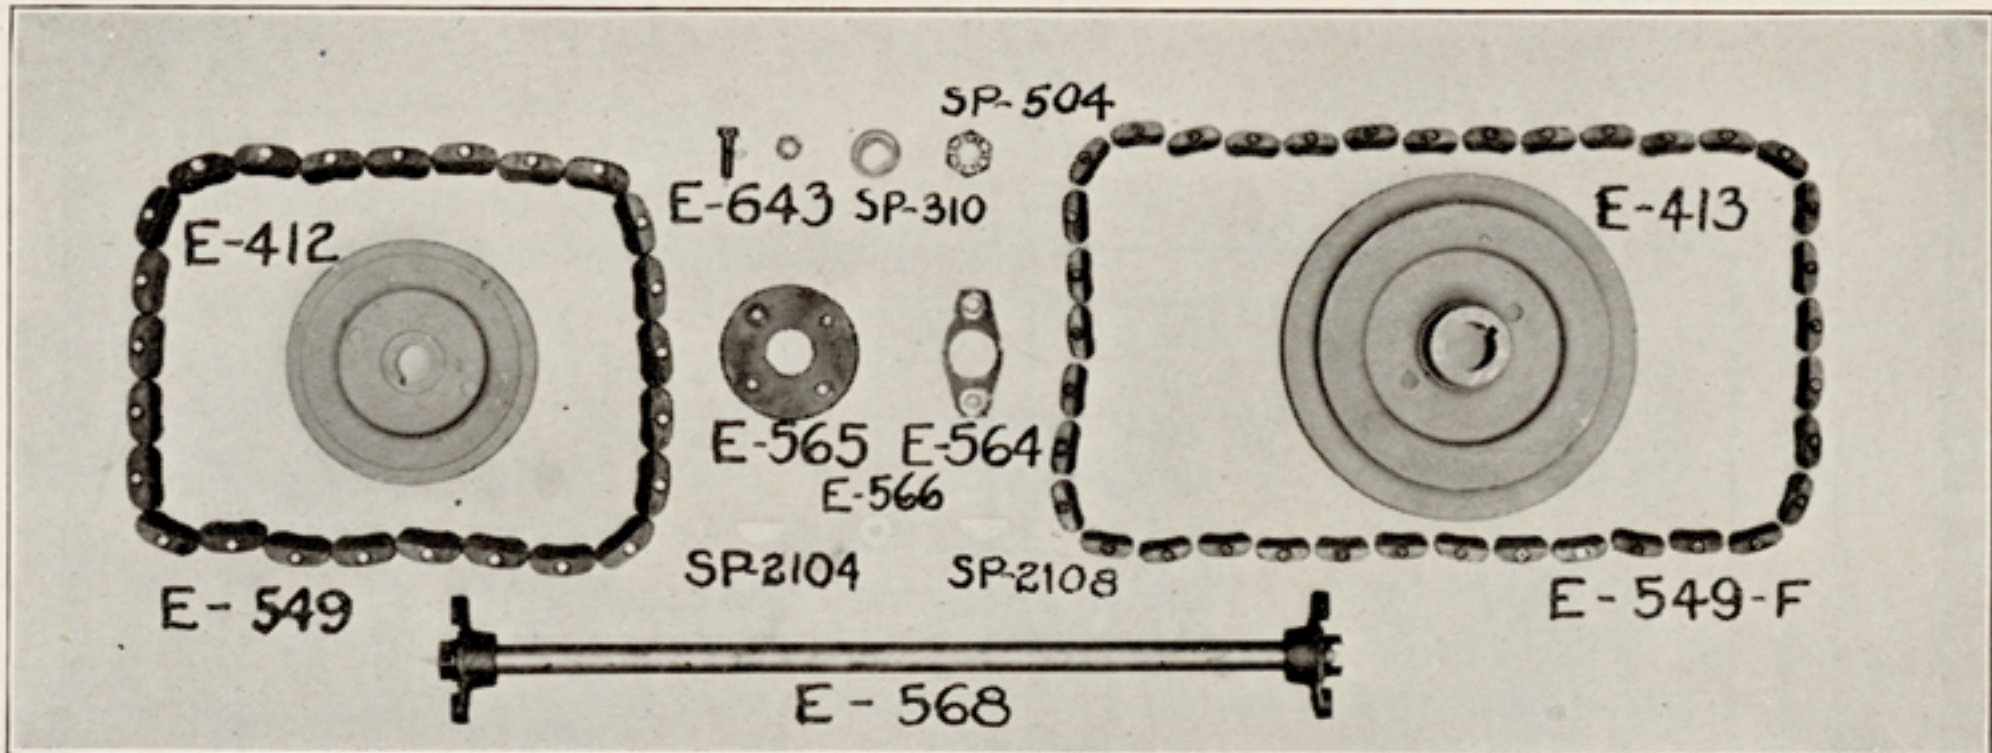

PULLEYS AND BELTS

Part No.	Name	No. Req.
E-412	Generator pulley.....	1
E-413	Fan and generator drive pulley.....	1
E-549	Generator belt.....	1
E-549-F	Fan belt.....	1
SP-310	Generator pulley castellated nut washer.....	1
SP-504	Generator pulley castellated nut.....	1
SP-2104	Fan and generator drive pulley key No. 13 Woodruff.....	1

LIGHTING GENERATOR

EL-405	5 ampere field fuse furnished with generator.....	1
EL-487	Gray & Davis generator, S. A. E. flange mounting type, No. 634.....	1
SP-403	$\frac{7}{16}$ "-20 S. A. E. hex. nuts.....	3
SP-975	$\frac{7}{16}$ "-20x1 $\frac{1}{8}$ " S. A. E. bolts, generator to engine.....	3
SP-2100	No. 3 Whitney key furnished with generator, rear end.....	1
SP-2104	No. 8 Whitney key furnished with generator, front end.....	1


STARTING MOTOR

SM-418	Gray & Davis starting motor, type No. 522.....	1
SP-1032	$\frac{3}{8}$ "-16 U. S. S. x 1" cap screws. Starting motor to engine.....	3

MISCELLANEOUS ELECTRICAL EQUIPMENT

SM-402	Clip for clipping cable to transmission.....	1
SM-404	Gray & Davis starting switch.....	1
SM-405	Starting switch escutcheon plate (furnished with switch).....	1
SM-406	Pc. No. 0 cable 15" long (ground wire for battery).....	1
SM-415	Starting switch bracket.....	1
SM-416	Pc. No. 0 cable 29" long (battery to starting switch).....	1
SM-417	Pc. No. 0 cable 19 $\frac{1}{2}$ " long (starting switch to starting motor).....	1
I-408	Battery carrier only.....	1
I-409	Battery hold down rods.....	2
I-410	Battery hold down clips.....	2
I-411-A	Battery carrier consisting of box, side straps and strap ends.....	1
I-423	Willard storage battery, 6 volt, SJRN-4, 100 A. H.....	1
I-424	Side straps $\frac{1}{8}$ "x1x13 $\frac{1}{4}$ ".....	2
I-425	Battery wing nuts, black enameled.....	2
EL-402	Sherman soldering lugs $\frac{9}{16}$ size.....	2
F-474	Battery carrier extension, L. H. angle.....	1
F-475	Battery carrier extension, R. H. angle.....	1
SP-4002	$\frac{5}{16}$ x $\frac{3}{4}$ " hex. brass cap screws, (18-U.S.S. battery grounding screw).....	1
SP-4003	$\frac{5}{16}$ "-18 U.S.S. hex. nut, brass.....	1

PRICES ON APPLICATION

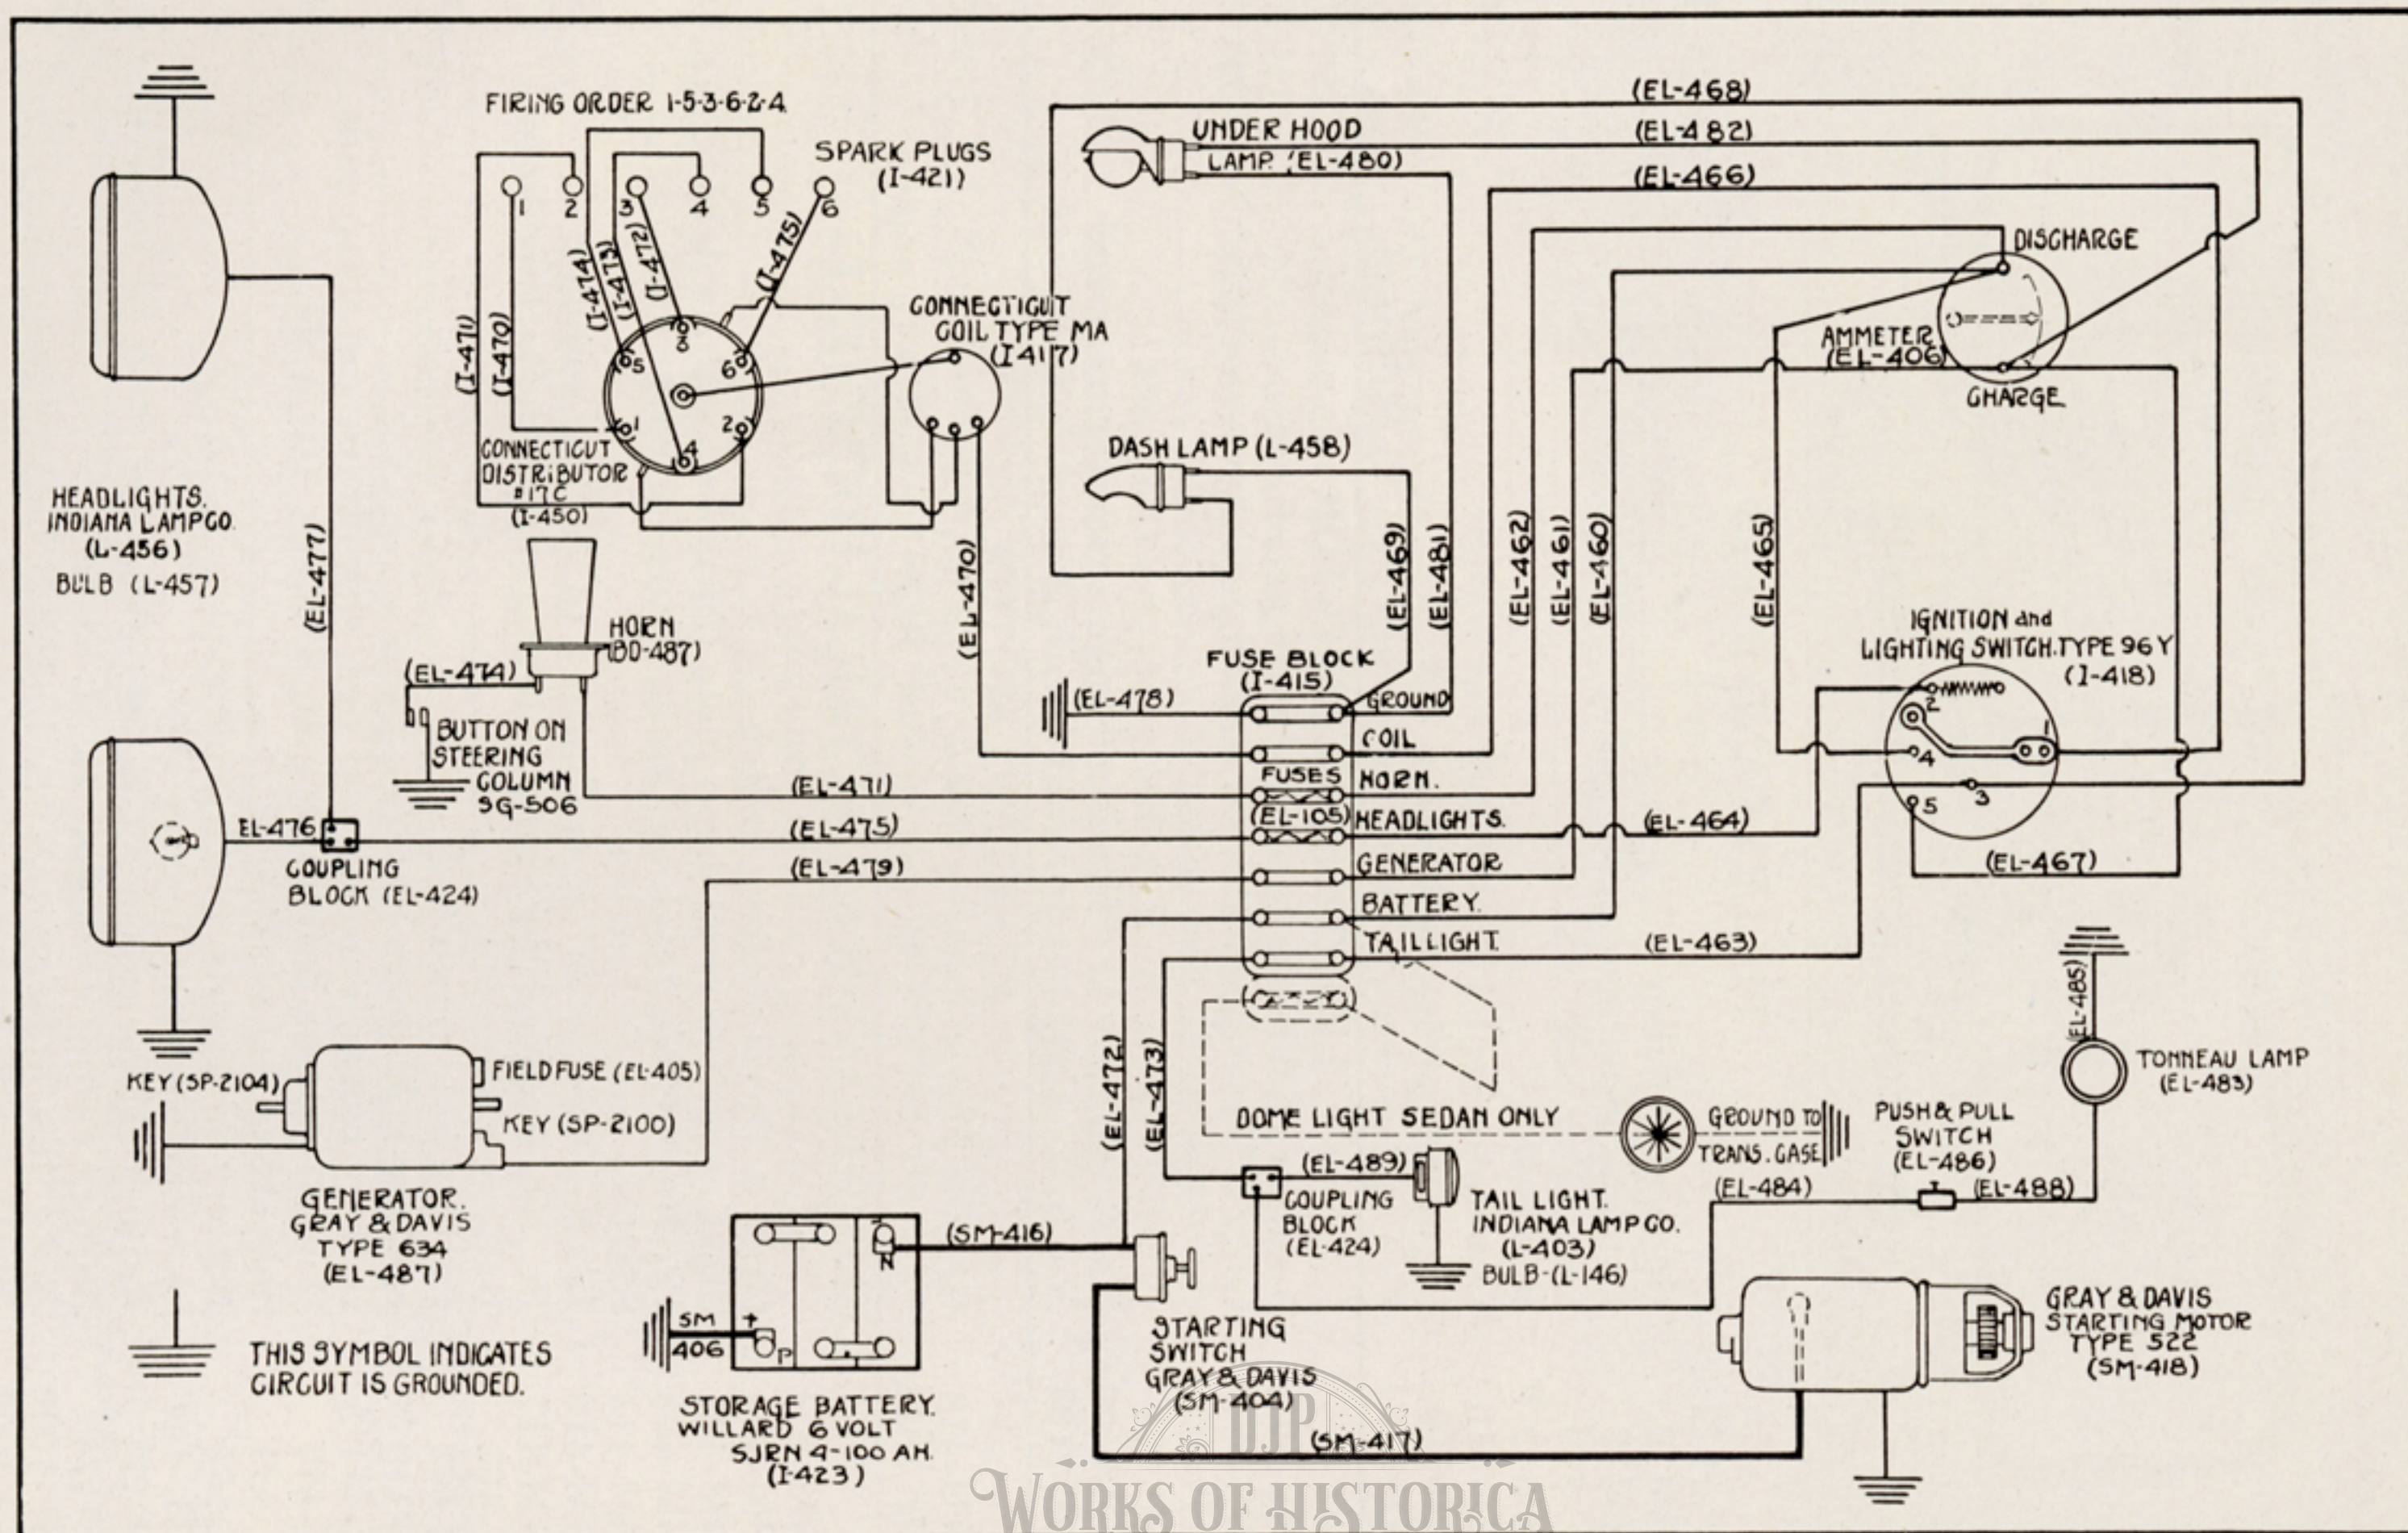

Series "T" Wiring Diagram with Part Numbers

LEXINGTON SERIES "T" PARTS LIST

WIRING


Part No.	Name	No. Req.
EL-400	Special terminals for hot line from starting switch.....	1
EL-401	Special terminals for ground wire.....	1
EL-403	Copper terminals Sherman No. 12, heavy.....	37
EL-424	Coupling block Westinghouse 3 point, No. 169249.....	1
EL-430	Coupling block bracket.....	1
EL-460	Pc. No. 10 green, ammeter to fuse block 25" long.....	1
EL-461	Pc. No. 14 black, ammeter to fuse block 23 ³ / ₄ " long.....	1
EL-462	Pc. No. 14 red, ammeter to fuse block 23 ³ / ₄ " long.....	1
EL-463	Pc. No. 14 yellow, tail light, switch to fuse block 21 ³ / ₄ " long....	1
EL-464	Pc. No. 14 green, dim on switch to fuse block, 22 ¹ / ₄ " long.....	1
EL-465	Pc. No. 14 black and tan "B" on switch to ammeter 6 ¹ / ₂ " long.....	1
EL-466	Pc. No. 14 black and tan coil on switch to fuse block 22" long.....	1
EL-467	Pc. No. 10 black, ammeter to switch, 7" long.....	1
EL-468	Pc. No. 14 dash light to switch 11 ¹ / ₄ " long.....	1
EL-469	Pc. No. 14 dash light to ground on fuse block 29 ¹ / ₂ " long.....	1
EL-470	Pc. No. 14 armored coil to fuse block 55" long.....	1
EL-471	Pc. No. 14 armored horn to fuse block, 33 ¹ / ₂ " long.....	1
EL-472	Pc. No. 10 armored starting switch to fuse block 56" long.....	1
EL-473	Pc. No. 14 armored tail lamp wire fuse block to coupling block 123" long.....	1
EL-474	Pc. No. 14 armored horn button to horn 131" long.....	1
EL-475	Pc. No. 14 armored fuse block to coupling block, 53" long.....	1
EL-476	Pc. No. 14 armored coupling block to left head lamp, 38" long.....	1
EL-477	Pc. No. 14 armored coupling block to right head lamp, 56 ¹ / ₂ " long.....	1
EL-478	Pc. No. 14 armored fuse block to ground 30" long.....	1
EL-479	Pc. No. 10 armored generator to fuse block, 65" long (first series).....	1
EL-481	Pc. No. 14 wire Underhood lamp to ground on fuse 25 ¹ / ₂ " long.....	1
EL-482	Pc. No. 14 wire Underhood lamp to ammeter, green 15" long.....	1
EL-484	Pc. No. 14 armored cable tonneau lamp to coupling block, 26" long.....	1
EL-485	Pc. No. 14 armored cable tonneau lamp to ground 23" long....	1
EL-488	Pc. No. 14 armored cable switch to tonneau lamp 4" long.....	1
EL-489	Pc. No. 14 armored coupling block to tail lamp 25 ¹ / ₂ " long.....	1
EL-490	Pc. No. 10 armored generator to fuse block 70 ¹ / ₂ " long (second series).....	1

PRICES ON APPLICATION

FUSE BLOCK

Part No.	Name	No. Req.
I-415	Fuse block with cover, 7 circuits.....	1
I-416	Wiring name plate (under fuse block).....	1
I-451	Fuse block base, only.....	1
I-452	Fuse block cover.....	1
I-486	Fuse block cover nuts.....	2
EL-105	Glass tube fuses, 15 amps.....	3

LEXINGTON SERIES "T" PARTS LIST

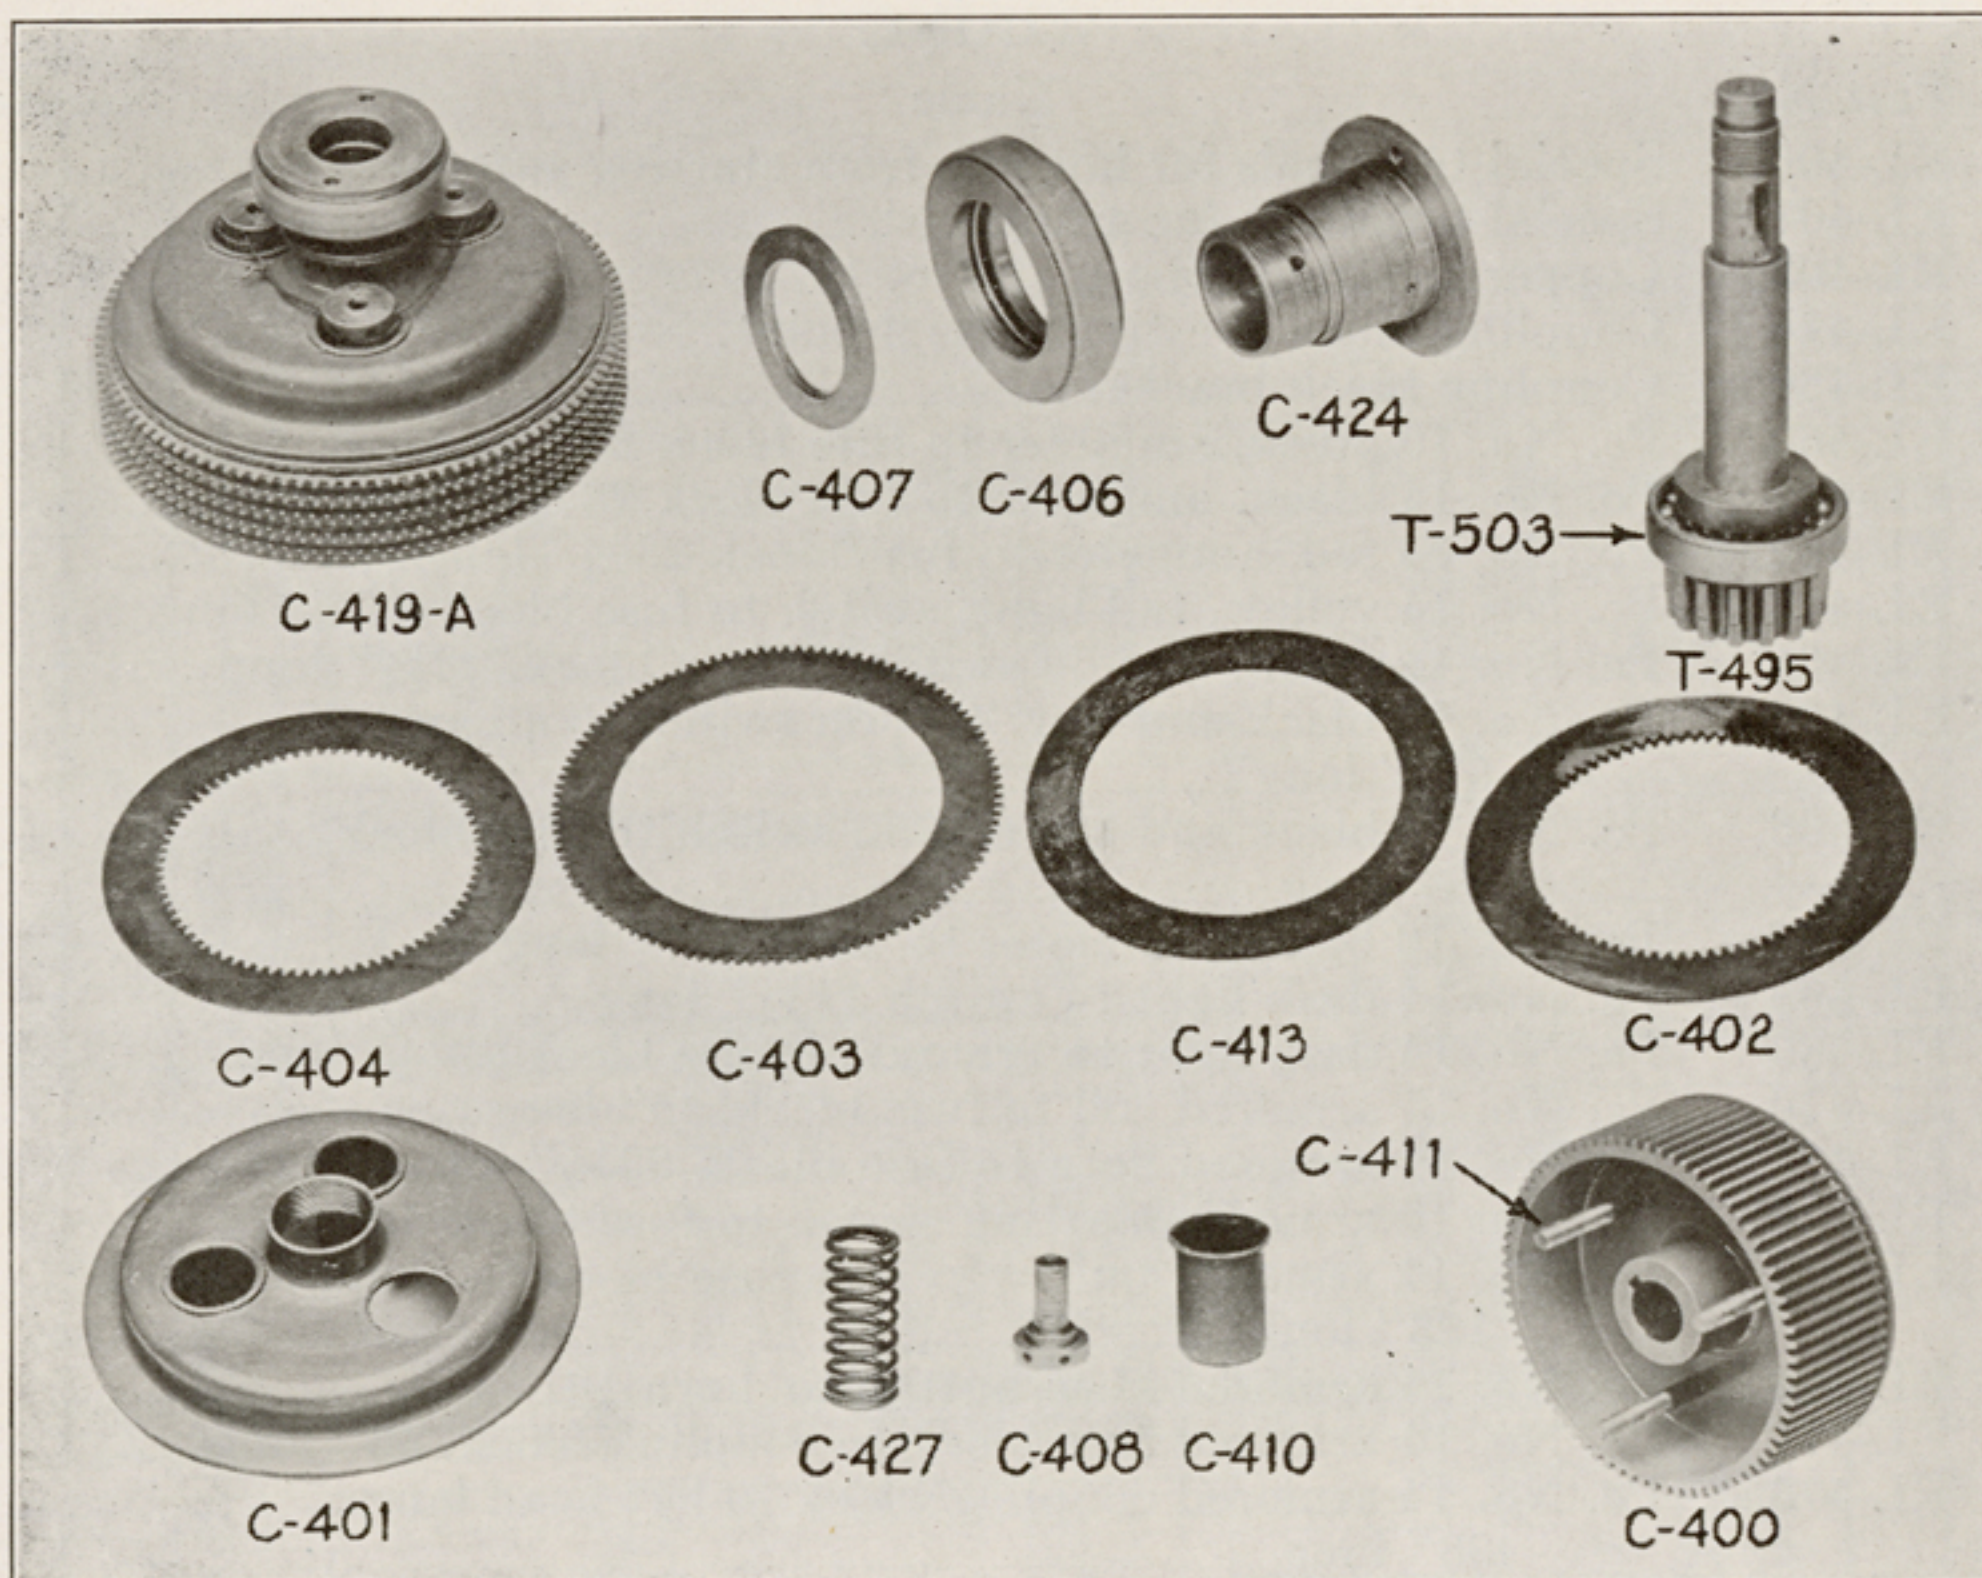

PRICES ON APPLICATION

CLUTCH GROUP

Part No.	Name	No. Req.
C-419-A	Clutch Assembly, consisting of the following:	1
C-400	Clutch driven drum.....	1
C-401	Clutch pressure plate, rear.....	1
C-402	Clutch pressure plate, front.....	1
C-403	Clutch driving disc.....	5
C-404	Clutch driven disc.....	5
C-406	Clutch bearing.....	1
C-407	Clutch spacing ring.....	1
C-408	Clutch adjusting nut.....	3
C-410	Clutch spring cup.....	3
C-411	Clutch spring stud.....	3
C-413	Clutch friction ring.....	10
C-416	Clutch drum nut.....	1
C-424	Clutch throw-out bearing sleeve.....	1
C-425	Clutch sleeve tube.....	1
C-427	Clutch spring.....	3
C-448	Pc. soft iron wire for adjusting nuts.....	1
C-449	Clutch pressure plate lock pin.....	1
C-450	Clutch pressure plate lock pin wire.....	1
C-430	Clutch throw-out yoke.....	1
C-431	Clutch throw-out yoke pins.....	2

(Continued on Page 31)

LEXINGTON SERIES "T" PARTS LIST

CLUTCH GROUP (Continued)

Part No.	Name	No. Req.
C-120	Clutch pedal.....	1
T-494	Clutch thrust washer.....	1
T-495	Main drive gear and clutch shaft for T60 transmission.....	1
T-543	Clutch pilot bearing No. 205, single row.....	1
SP-2110	No. 25 Whitney key.....	1

TRANSMISSION GROUP


T-607-A	Transmission assembly, model T-60 with gear shift, and including the following:.....	1
	Speedometer drive parts furnished and assembled in trans- mission. Fitted with clutch shaft for Lexington clutch	
T-484	Transmission clutch pedal thrust washer.....	1
T-493	Transmission main drive gear retainer, rear.....	1
T-495	Transmission main drive gear, only.....	1
T-497	Transmission brake pedal and clutch throw-out shaft.....	1
T-501-T	Transmission case.....	1
T-502	Transmission hand hole cover.....	1
T-503	Transmission hand hole cover gasket.....	1
T-504	Transmission main shaft low and reverse sliding gear.....	1
T-505	Transmission main shaft high and intermediate sliding gear.....	1
T-506	Transmission main shaft bearing, front, Hyatt No. 27992.....	1
T-507	Transmission main shaft.....	1
T-508	Transmission main shaft bearing, rear, No. 306 N. D. double row.....	1
T-509	Transmission main shaft bearing adapter.....	1
T-510	Transmission main shaft oil retainer cap.....	1
T-511	Transmission main shaft oil sling.....	1
T-512	Transmission main shaft retainer and brake hanger, rear.....	1
T-513	Transmission brake anchor pin.....	1
T-514	Transmission main shaft retainer gasket, rear.....	1
T-515	Transmission main shaft thrust washer.....	1
T-516	Transmission main shaft nut, rear.....	1
T-517	Transmission main shaft bearing clamp nut.....	1
T-518	Transmission main shaft bearing clamp nut washer.....	1
T-519	Transmission main shaft oil retainer washer, rear.....	1
T-520	Transmission main shaft washer, rear.....	1
T-521	Transmission main shaft retainer hex. cap head screw to case $\frac{3}{8}$ "x1 $\frac{1}{2}$ ", short.....	4
T-522	Transmission main shaft retainer, rear, hex. head cap screw $\frac{3}{8}$ "x2", long.....	3
T-523	Transmission shift fork lock screw.....	4
T-524	Transmission shift fork.....	2
T-525	Transmission high and intermediate shift rail.....	1
T-526	Transmission low and reverse shift rail.....	1

PRICES ON APPLICATION

(Continued on Page 33)

Car Number *must* be given when ordering repair parts. Order parts by number in left hand column using name of part in full. Read instructions carefully on page 3 before ordering.

LEXINGTON SERIES "T" PARTS LIST

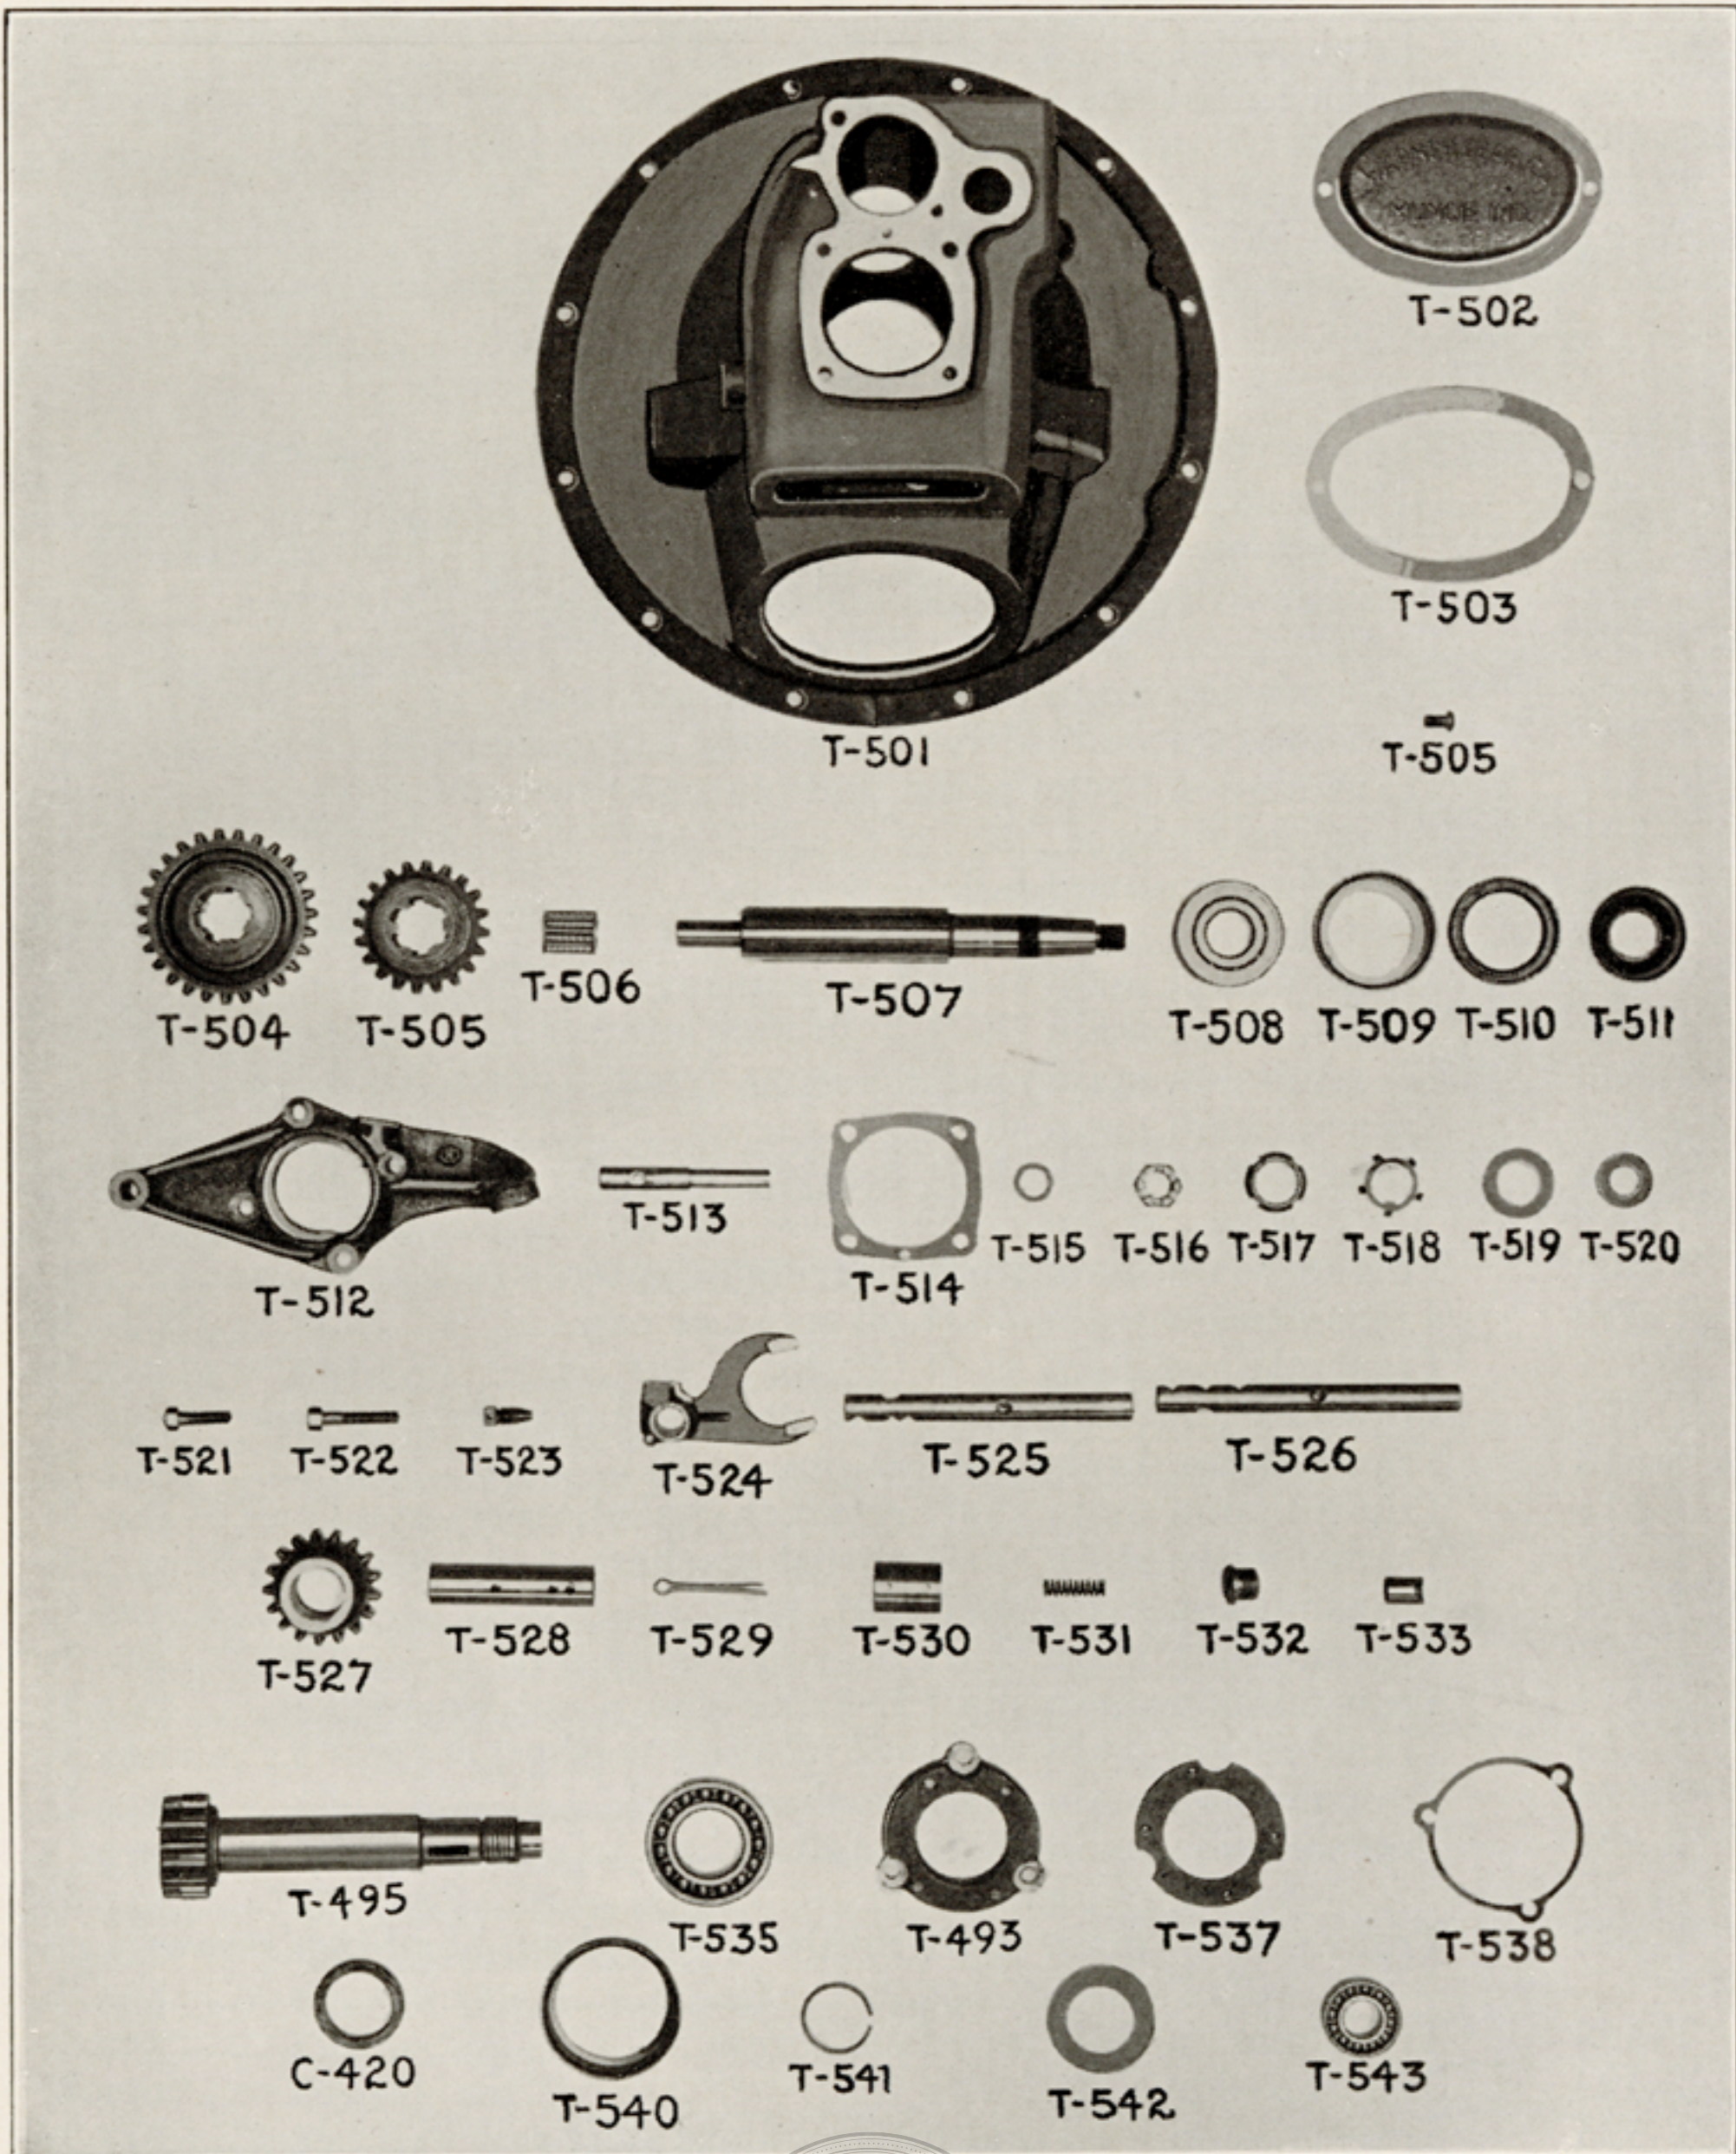

TRANSMISSION CASE AND PARTS

LEXINGTON SERIES "T" PARTS LIST


TRANSMISSION (Continued)

Part No.	Name	No. Req.
T-527	Transmission reverse idler gear.....	1
T-528	Transmission reverse idler gear shaft.....	1
T-529	Transmission reverse idler gear shaft cotter pin, 1/4"x3".....	1
T-530	Transmission reverse idler gear bushing.....	1
T-531	Transmission interlock spring.....	2
T-532	Transmission plunger spring nut.....	1
T-533	Transmission interlock.....	1
T-535	Transmission main drive gear bearing, rear, No. 1209 N. D.....	1
T-537	Transmission clutch brake.....	1
T-538	Transmission main drive gear retainer gasket.....	1
T-540	Transmission main drive gear bearing adapter.....	1
T-541	Transmission main drive shaft ring.....	1
T-542	Transmission main drive gear bearing oil sling.....	1
T-543	Transmission main drive gear bearing, front No. 1205 N. D.....	1
T-544	Transmission countershaft only.....	1
T-545	Transmission countershaft drive gear.....	1
T-546	Transmission countershaft intermediate gear.....	1
T-547	Transmission countershaft low and reverse gear.....	1
T-548	Transmission countershaft bearing adapter.....	2
T-549	Transmission countershaft bearing Hyatt, No. 17012.....	2
T-550	Transmission countershaft retainer, rear.....	1
T-551	Transmission countershaft retainer, front.....	1
T-552	Transmission countershaft retainer gasket, front.....	1
T-553	Transmission countershaft retainer gasket, rear.....	1
T-554	Transmission countershaft spacer.....	1
T-555	Transmission countershaft bearing lock screw, front.....	1
T-556	Transmission countershaft bearing lock screw, rear.....	1
T-557	Transmission countershaft gear, Woodruff key.....	4
T-558	Transmission countershaft retainer cap screw 3/8"x1".....	2
T-559	Transmission interlock for control shift rods.....	2
T-560	Transmission shift rail lock screw.....	2
T-561	Transmission 3/8"x1" hex. head cap screw control bracket to case.....	4
T-562	Transmission control bracket gasket.....	1
T-621	Transmission control bracket.....	1
T-619	Transmission control lever.....	1
T-565	Transmission control bracket cover spring.....	1
T-620	Transmission control lever spring thimble.....	1
T-618	Transmission control bracket cover.....	1
T-568	Transmission control lever ball handle.....	1
T-570	Transmission control bracket pin.....	1
T-617	Transmission control lever thimble lock nut.....	1
T-571	Transmission emergency brake hand lever assembly complete..	1
T-572	Transmission emergency brake hand lever, only.....	1
T-573	Transmission emergency brake lever latch and rod.....	1
T-574	Transmission emergency brake lever thumb button.....	1
T-575	Transmission emergency brake lever latch and rod spring.....	1
T-576	Transmission emergency brake lever latch and rod bolts.....	2
T-577	Transmission emergency brake sector.....	1
T-578	Transmission emergency brake lever latch and rod bolts nut..	2


(Continued on Page 35)

PRICES ON APPLICATION

LEXINGTON SERIES "T" PARTS LIST

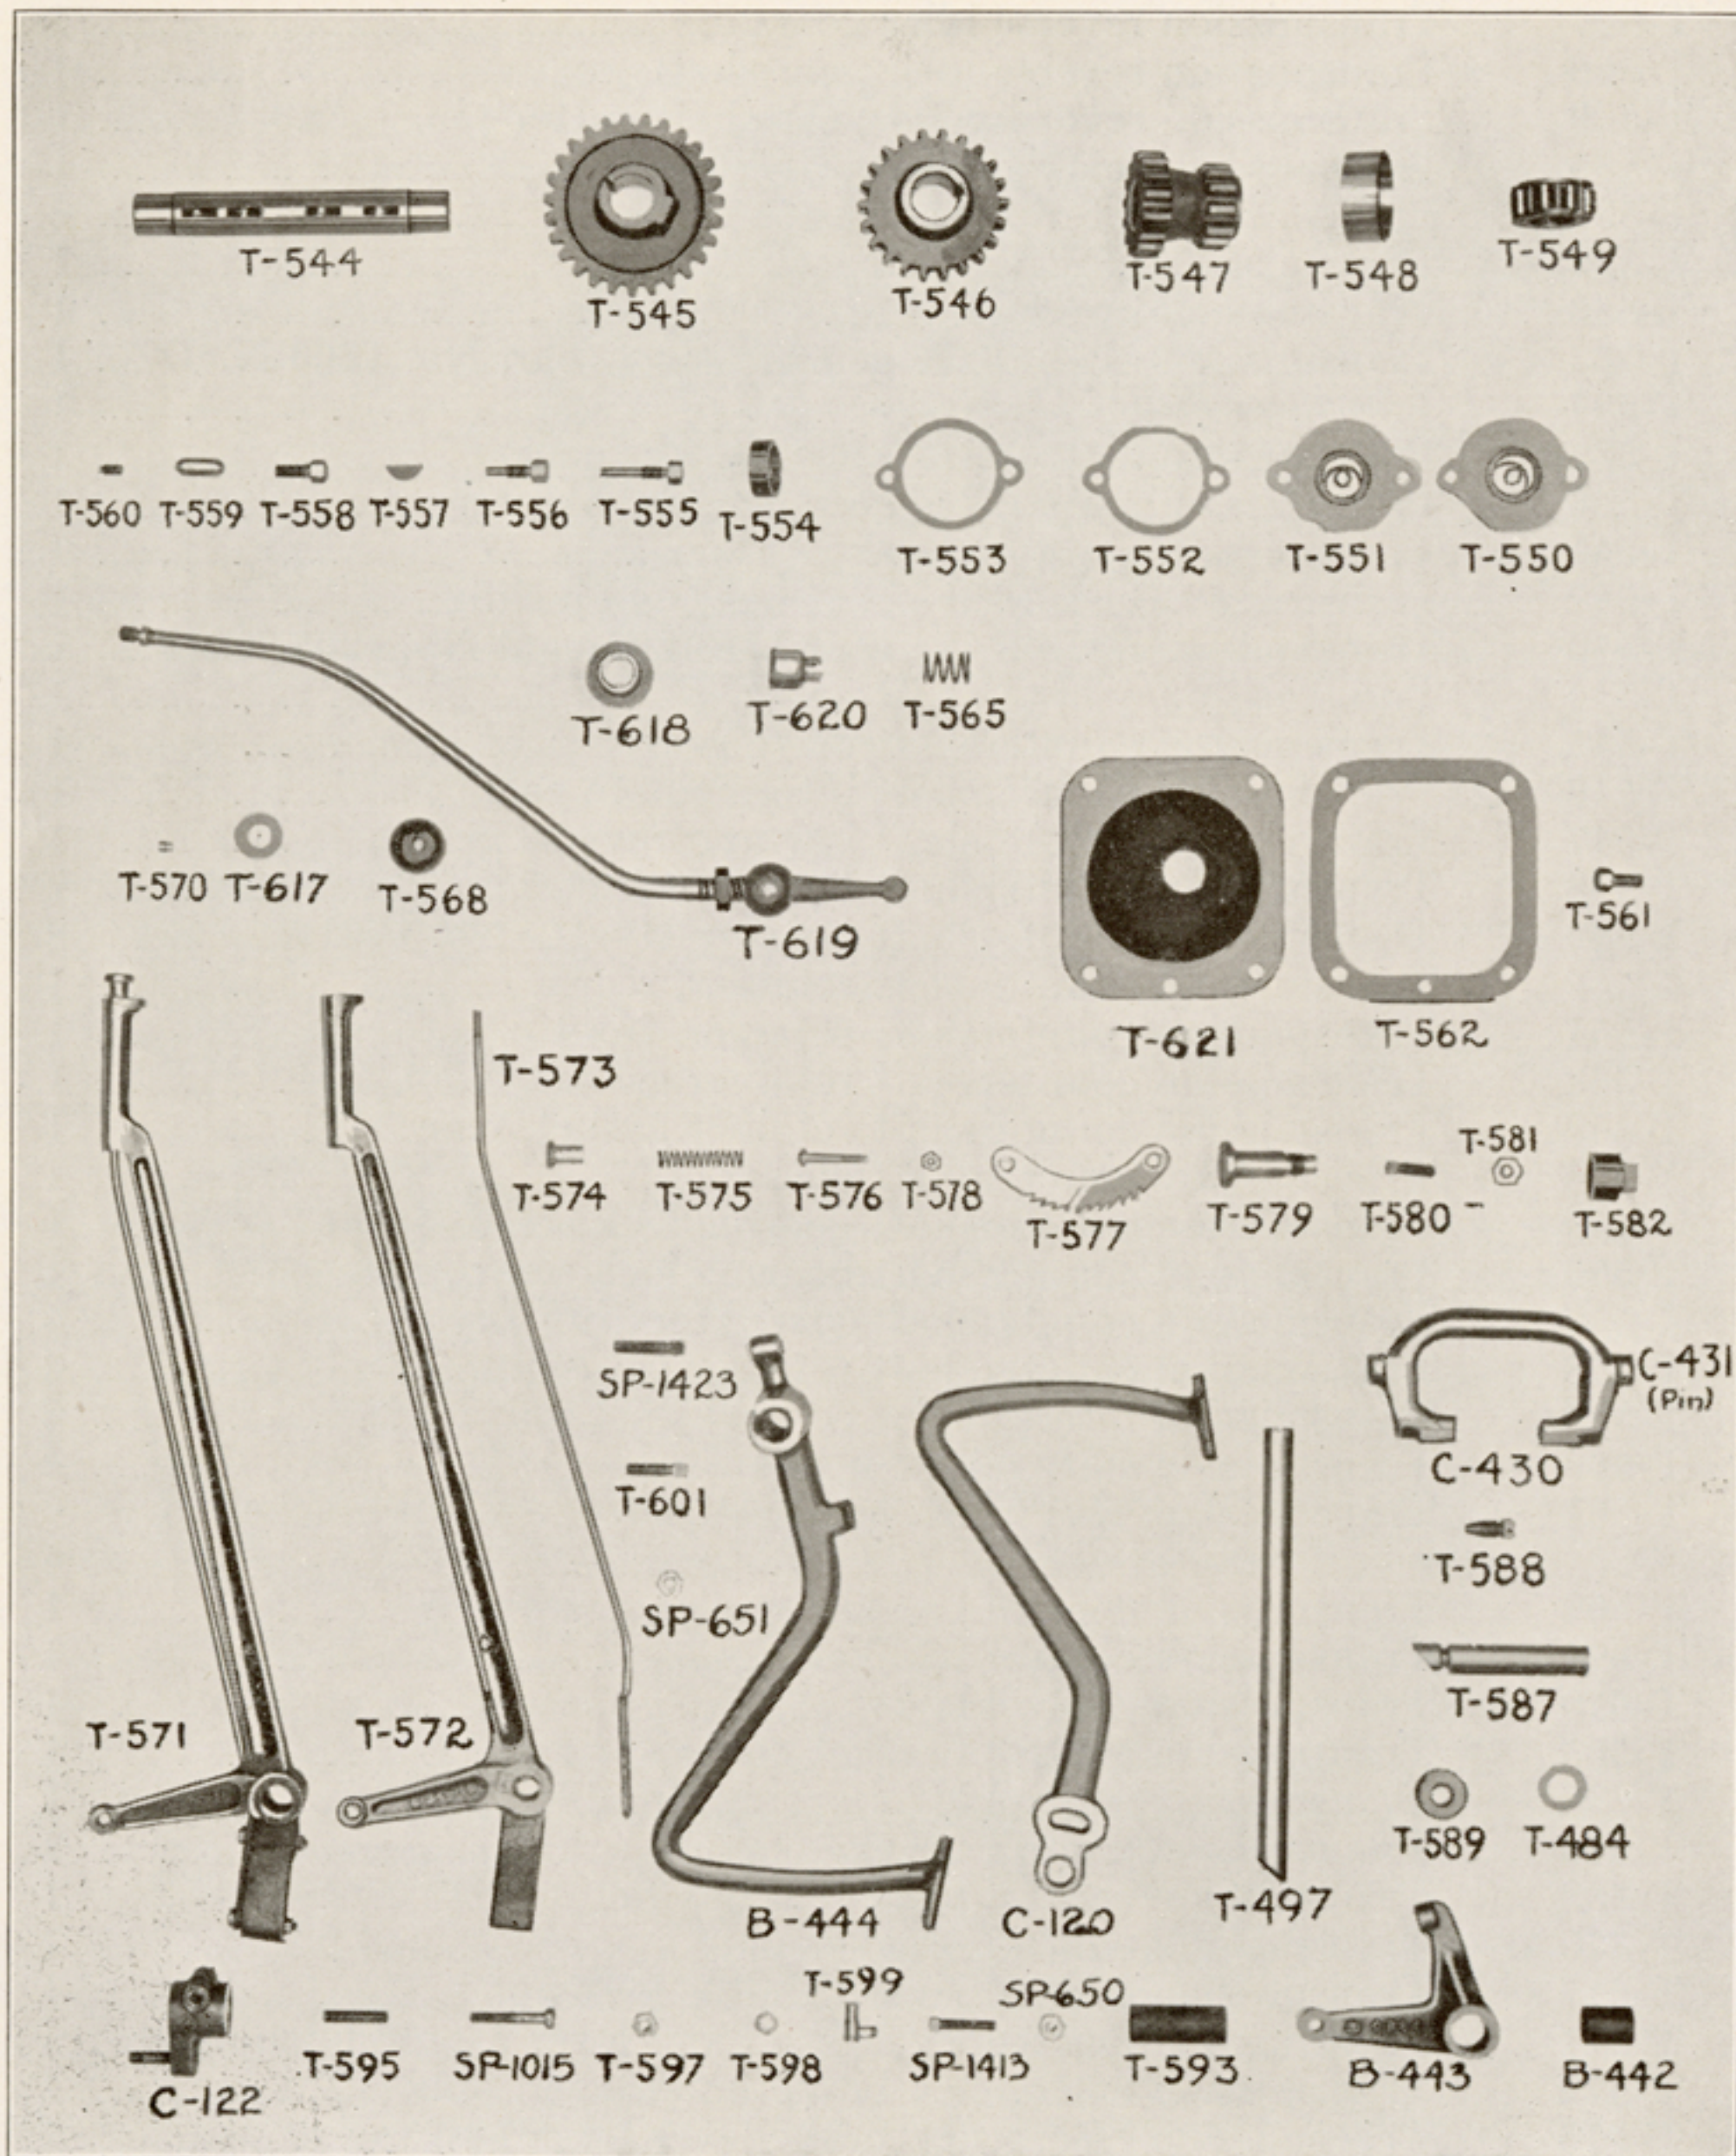

CONTROL LEVERS AND VARIOUS TRANSMISSION PARTS

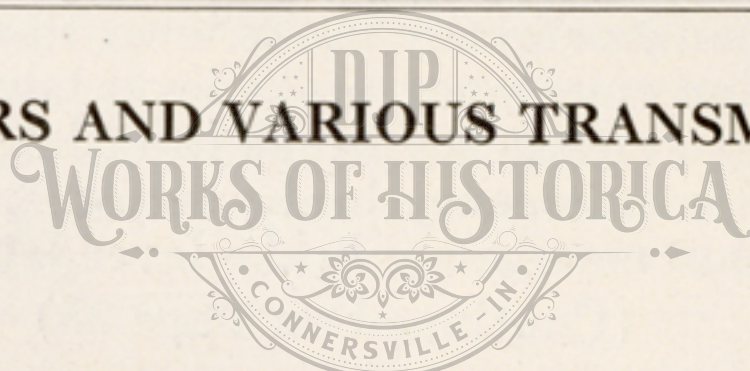

LEXINGTON SERIES "T" PARTS LIST

TRANSMISSION (Continued)

Part No.	Name	No. Req.
T-579	Transmission emergency brake lever fulcrum pin.....	1
T-580	Transmission emergency brake lever fulcrum pin set screw.....	1
T-581	Transmission emergency brake lever fulcrum pin set screw lock nut.....	1
T-582	Transmission case oil drain or filler plug.....	2
T-587	Transmission clutch throw-out shaft, short.....	1
T-588	Transmission clutch throw-out set screw.....	2
T-589	Transmission brake pedal spacer.....	1
T-593	Transmission brake pedal bushing.....	1
T-595	Transmission clutch pedal adjusting hub stud.....	1
T-597	Transmission clutch pedal adjusting hub clamp bolt nut.....	1
T-598	Transmission clutch pedal adjusting hub clamp bolt nut lockwashers.....	2
T-599	Transmission throw-out shaft elbow oiler.....	2
T-601	Transmission brake pedal set screw, cup point.....	1
T-605	Transmission hand hole cover screw.....	2
T-606	Transmission pedal shaft brace.....	1
T-612-A	Transmission control lever assembly, including lever, bracket, cover, thimble, spring and thimble nut.....	1
B-442	Transmission brake pedal bell crank bushing.....	1
B-443	Transmission brake pedal bell crank.....	1
B-444	Transmission brake pedal.....	1
C-120	Transmission clutch pedal.....	1
C-122	Transmission clutch pedal adjusting hub.....	1
C-420	Transmission main drive gear bearing spacer.....	1
C-430	Transmission clutch throw-out yoke.....	1
SP-650	Transmission clutch pedal adjusting screw check nut.....	1
SP-651	Transmission brake pedal set screw check nut.....	2
SP-651	Transmission brake pedal bell crank set screw check nut.....	1
SP-1015	Transmission clutch pedal adjusting hub clamp bolt.....	1
SP-1033	$\frac{3}{8} \times 1\frac{1}{4}$ " hex. head cap screw, 16-U. S. S. transmission to engine.....	11
SP-1423	Transmission brake pedal set screw, long.....	1
SP-1413	Transmission clutch pedal cup point set screw.....	1
SP-2231	No. 5, $1\frac{1}{4}$ " taper pin.....	2


PRICES ON APPLICATION

ALL PRICES ON APPLICATION

Car Number *must* be given when ordering repair parts. Order parts by number in *left* hand column using name of part in full. Read instructions carefully on page 3 before ordering.



LEXINGTON SERIES "T" PARTS LIST

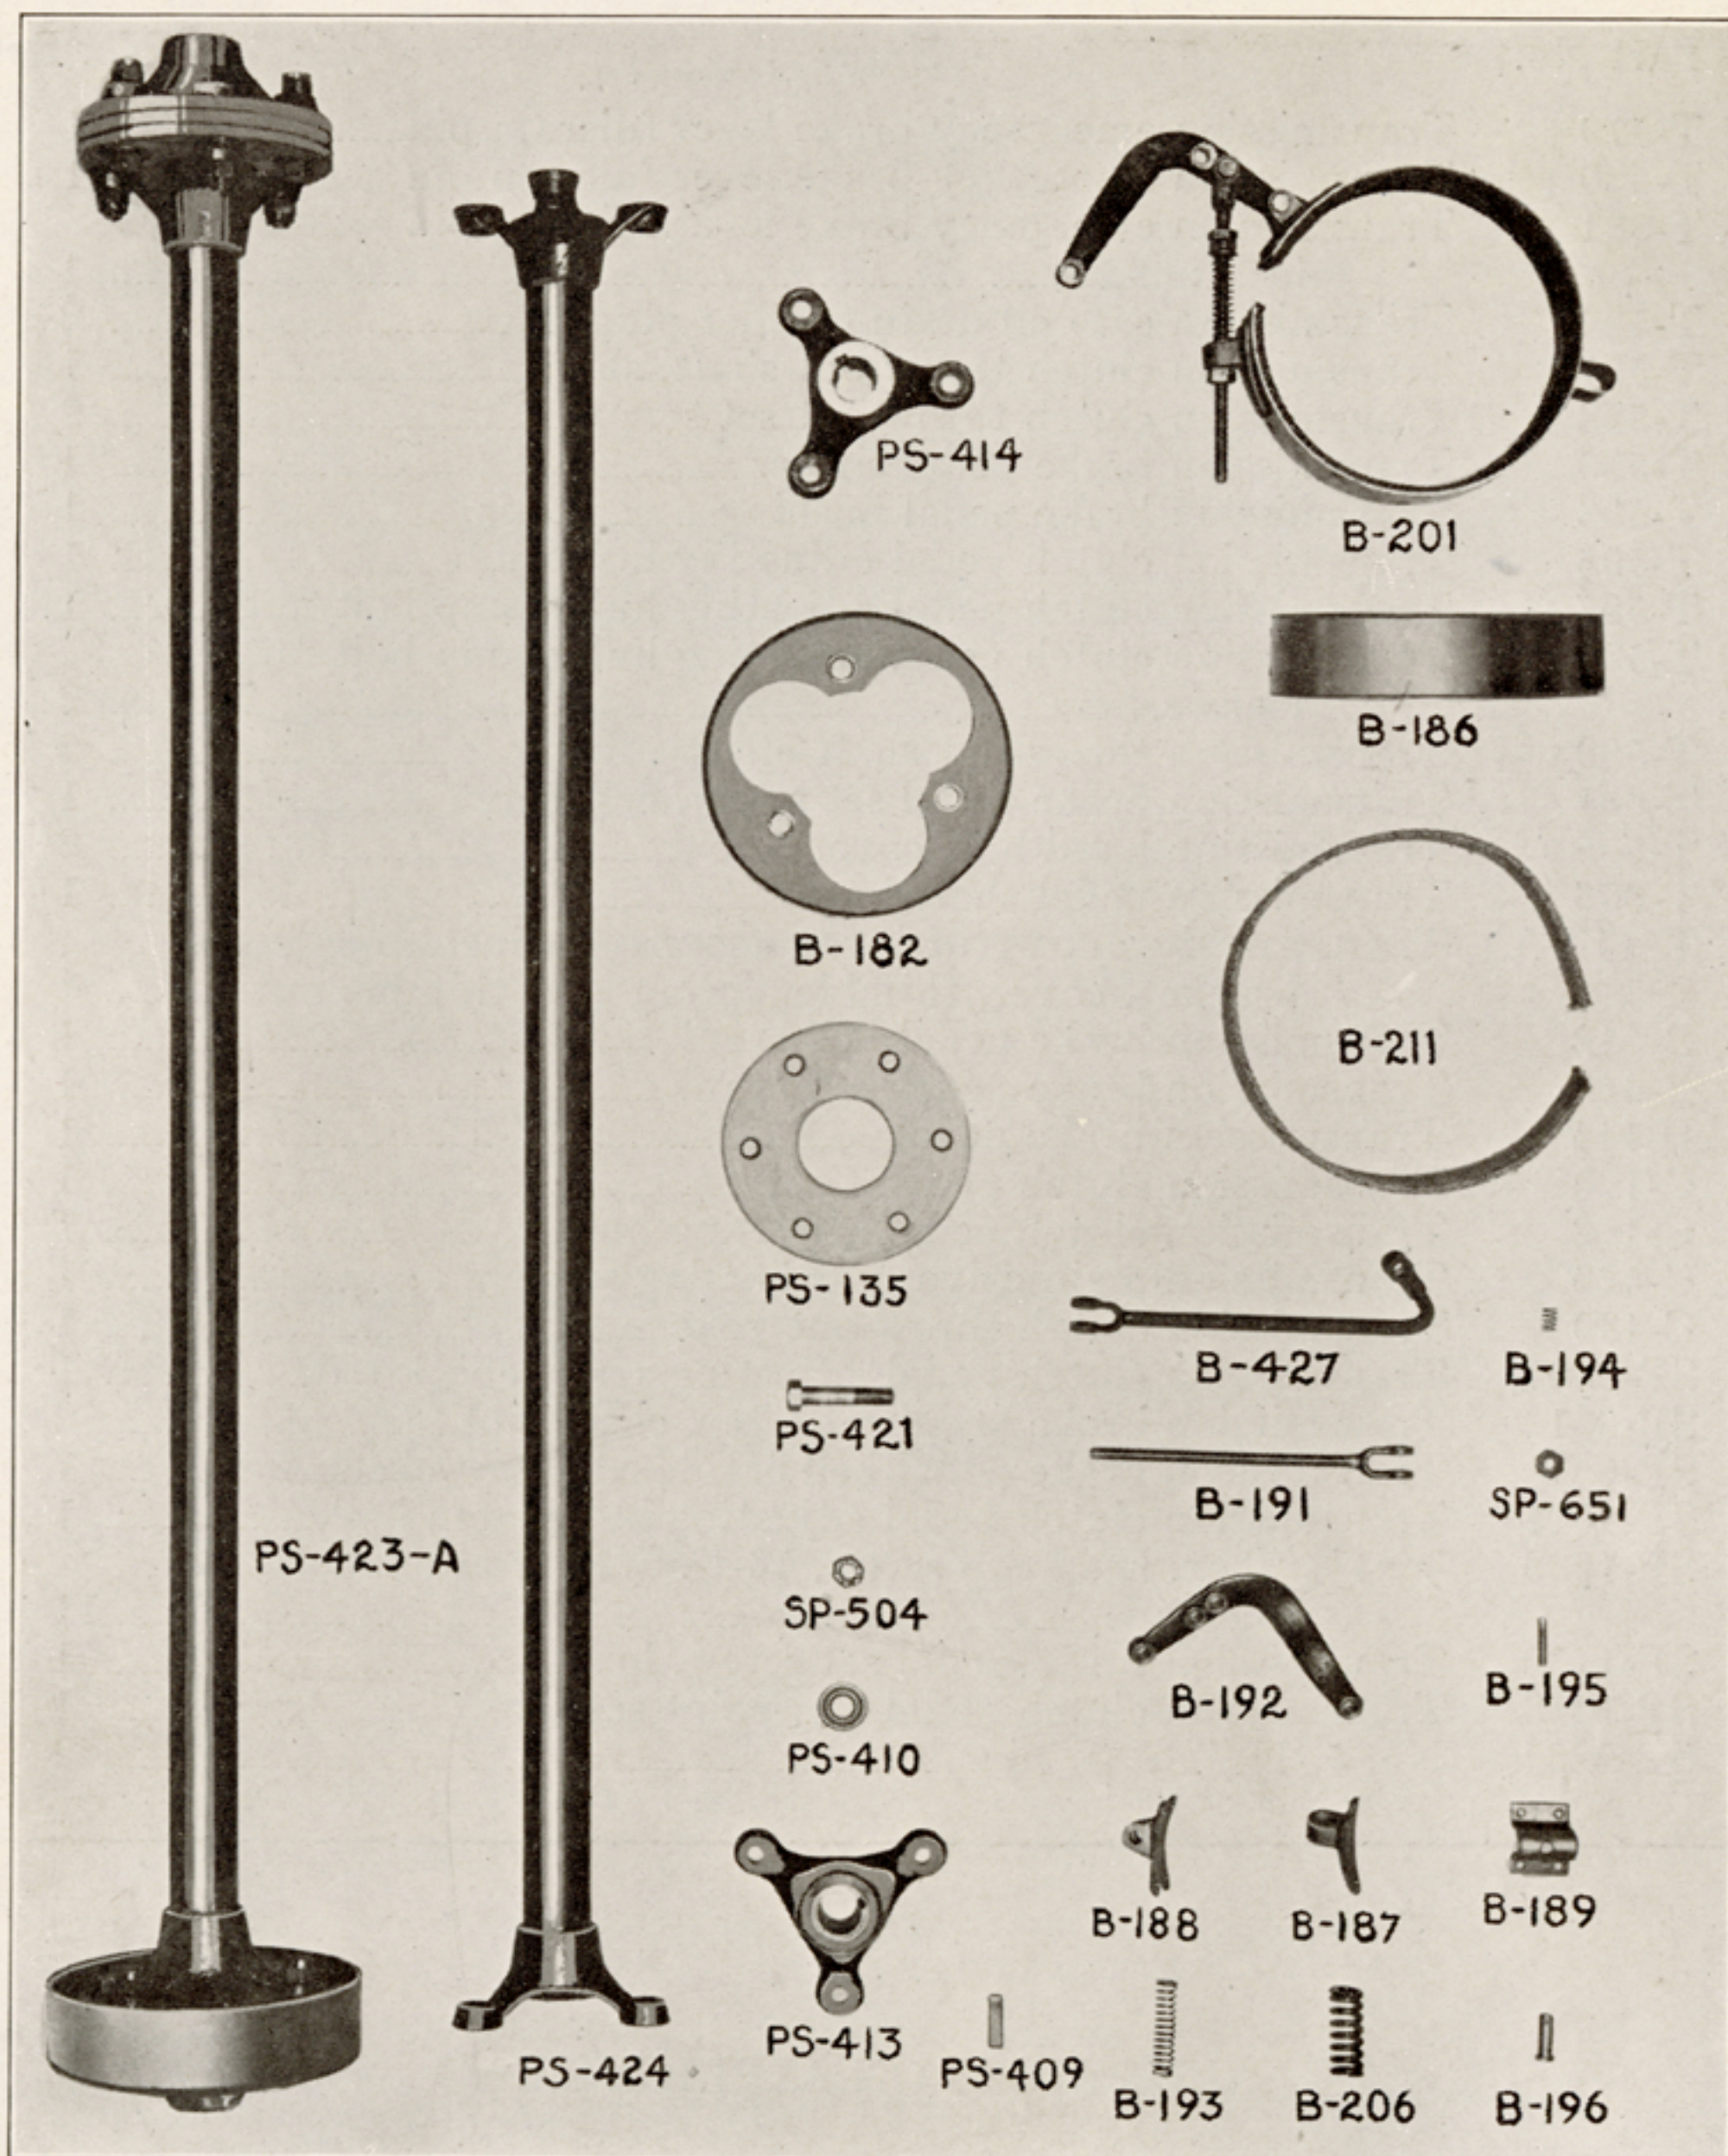

PROPELLER SHAFT AND EMERGENCY BRAKE PARTS

Note:—Part No. PS-424 should be changed to No. PS-426

LEXINGTON SERIES "T" PARTS LIST

EMERGENCY BRAKE AND PROPELLER SHAFT GROUP.

Part No.	Name	No. Req.
B-201	Emergency brake band assembly consisting of the following....	1
B-182	Emergency brake drum, 8" diameter.....	1
B-187	Emergency brake band end bracket upper (mall).....	1
B-188	Emergency brake band end bracket lower (mall).....	1
B-189	Emergency brake band anchor clip, pressed steel.....	1
B-191	Emergency brake eye bolt.....	1
B-192	Emergency brake operating lever.....	1
B-193	Emergency brake band expanding spring.....	1
B-194	Emergency brake band releasing spring.....	1
B-195	Emergency brake band headless set screw.....	1
B-196	Emergency brake yoke end pin.....	4
B-211	Emergency brake band lining.....	1
B-186	Emergency brake band only, steel $\frac{1}{16} \times 2 \times 24\frac{1}{2}$ ".....	1
B-206	Emergency brake cushion spring.....	1
B-427	Emergency brake rod.....	1
SP-602	$\frac{3}{8}$ "-16-U. S. S. hex. nuts.....	2
SP-651	$\frac{3}{8}$ "-16--Y. S. S. check nuts.....	2
PS-423-A	Propeller shaft assembly with flanges finished $1\frac{1}{8}$ " S. A. E. tape both ends $60\frac{3}{4}$ " over all, consisting of the following parts.....	1
PS-426	Propeller shaft only, flanges attached (Shown as PS-424 on Page 36)	1
PS-135	Propeller shaft thermoid disc.....	6
PS-409	Propeller shaft flange key.....	2
PS-410	Propeller shaft disc spacing washer.....	36
PS-413	Propeller shaft flange transmission end.....	1
PS-414	Propeller shaft flange axle end.....	1
PS-421	Propeller shaft disc bolt, long.....	3
PS-422	Propeller shaft disc bolt, short.....	9
SP-504	Propeller shaft disc bolt castle nut.....	12

PRICES ON APPLICATION


SERVICE BRAKE GROUP

Part No.	Name	No. Req.
B-421	Brake equalizer.....	1
B-422	Brake equalizer yoke end pin, special.....	2
B-423	Brake equalizer housing.....	1
B-458	Brake cable assembly complete.....	1
B-444	Service brake pedal.....	1
B-445	Brake anchor bracket brace.....	1
T-606	Service brake pedal shaft brace.....	1

(Continued on Page 39)

Car Number *must* be given when ordering repair parts. Order parts by number in left hand column using name of part in full. Read instructions carefully on page 3 before ordering.

LEXINGTON SERIES "T" PARTS LIST

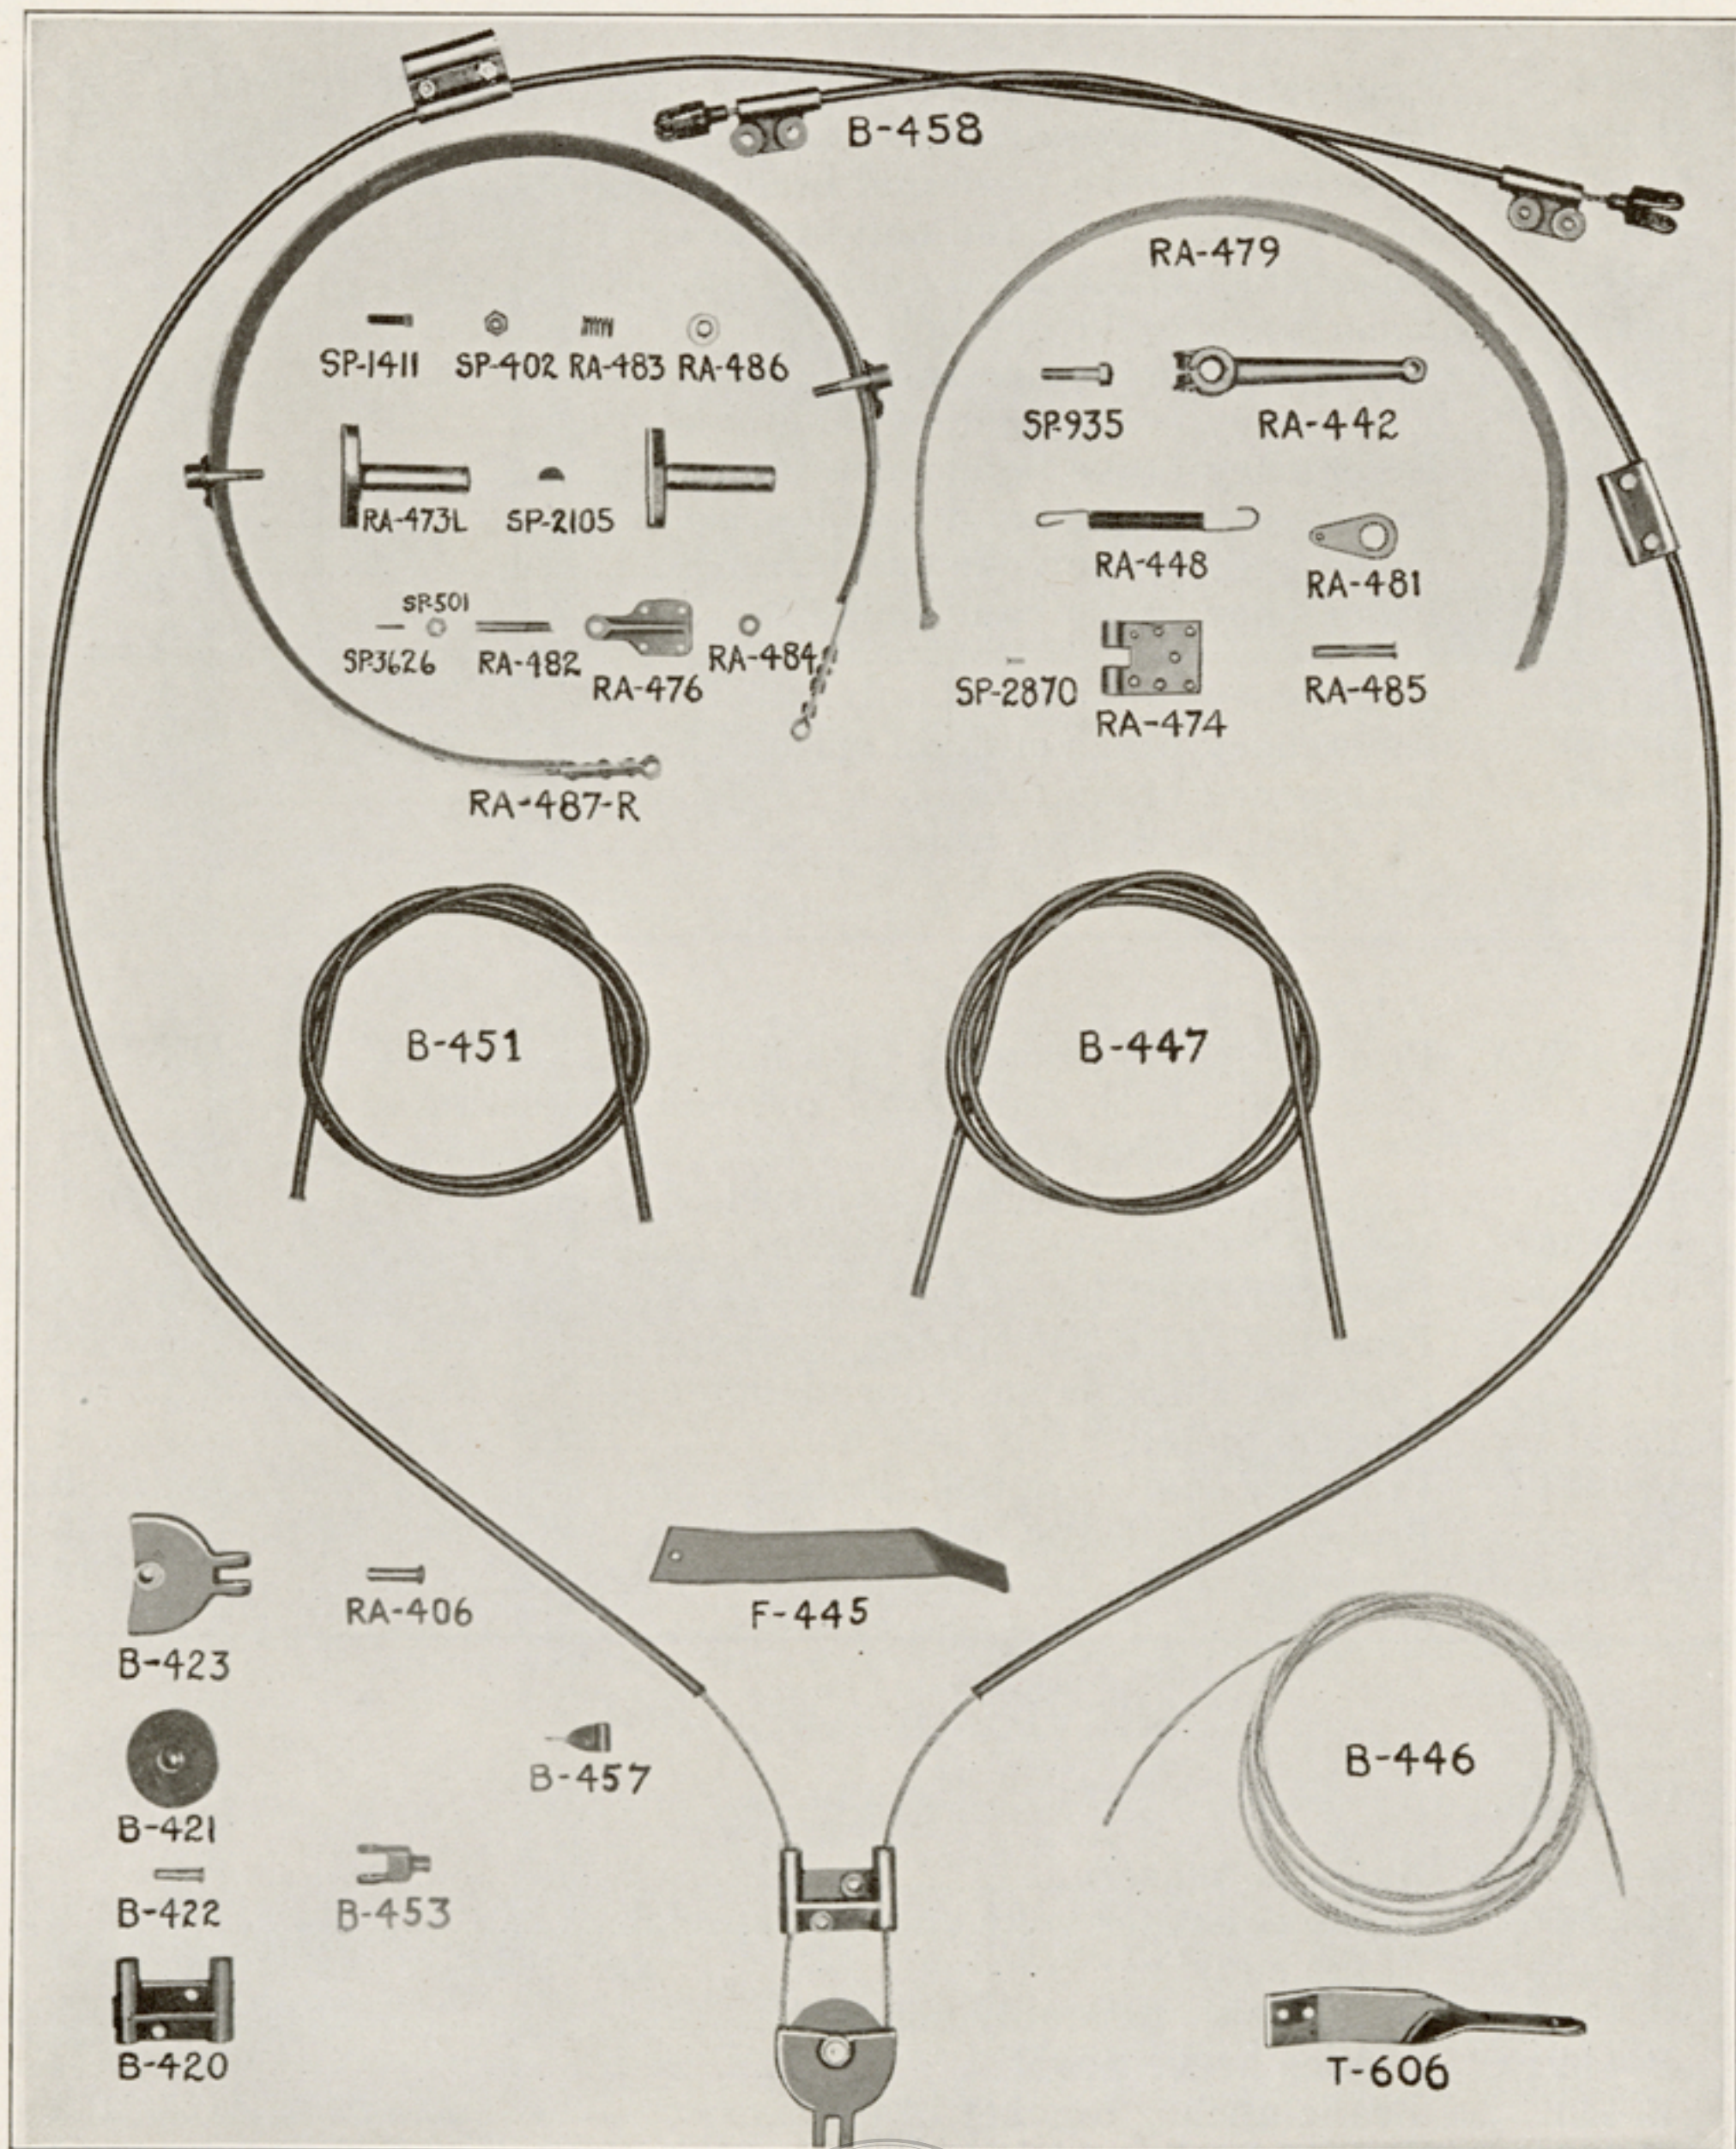

SERVICE BRAKE PARTS

WORKS OF HISTORICA
CONNEERSVILLE - IN


LEXINGTON SERIES "T" PARTS LIST

SERVICE BRAKE (Continued)

Part No.	Name	No. Req.
B-446	Brake cable 201 $\frac{5}{8}$ " long	1
B-447	Brake cable housing, 64 $\frac{1}{2}$ " long	1
B-449-R	Brake cable anchor for rear of housing, right	1
B-449-L	Brake cable anchor for rear of housing, left	1
B-450	Brake cable housing leather boot, rear	2
B-451	Brake cable housing, 55 $\frac{1}{4}$ " long	1
B-452	Brake cable adjusting sleeve	2
B-453	Brake cable yokes	2
B-454	Brake cable adjusting wing nuts	4
B-456	Brake cable housing leather boot, front	1
B-457	Brake cable special twisted clip	4
RA-406	Yoke end pin, special, $\frac{5}{16}$ "	2
RA-442	Service brake lever, long, outer	2
RA-473-R	Brake band shaft, right hand	1
RA-473-L	Brake band shaft, left hand	1
RA-474	Brake band end, stamping (for 33x4 $\frac{1}{2}$ " wheel)	4
RA-506	Brake band end, casting (for 32x4 $\frac{1}{2}$ " wheel)	4
RA-475	Service brake band only	2
RA-476	Service brake band guide bracket	6
RA-479	Service brake band lining	2
RA-481	Service brake spring anchor plate	2
RA-482	Service brake band guide pin	6
RA-483	Service brake band guide spring	6
RA-484	Service brake band guide collar	6
RA-485	Service brake band end pin (for 33x4 $\frac{1}{2}$ " wheels)	4
RA-507	Service brake band end pin (special)	4
RA-486	Service brake lever bushing	2
RA-487-R	Service brake band assembly, right hand	1
RA-487-L	Service brake band assembly, left hand	1
RA-488	Service brake release spring	1
RA-493	Brake band guide bracket, lower	2
SP-401	$\frac{5}{16}$ " S. A. E. nuts for brake cable housing to anchor bracket bolt	2
SP-402	Service brake lever clamp bolt nut $\frac{3}{8}$ " 24, S. A. E.	6
SP-501	Service brake band guide pin nut, $\frac{5}{16}$ " 24, S. A. E. castle	6
SP-650	Service brake adjusting screw lock nuts, $\frac{5}{16}$ " 18 hex. U. S. S.	2
SP-911	Brake cable rear housing anchor bolts	4
SP-912	$\frac{5}{16}$ x1" S. A. E. brake cable housing to anchor bracket bolt	4
SP-935	Service brake lever clamp bolt, $\frac{3}{8}$ "-24-1 $\frac{3}{4}$ " hex. cap screw	2
SP-1411	Service brake lever adjusting screw, $\frac{5}{16}$ "-18x1", square head flat	2
SP-2105	Service brake lever, Woodruff key No. 9	2
SP-2811	Service brake band guide bracket rivets, $\frac{3}{16}$ x $\frac{1}{2}$ "	12
SP-2813	Service band end rivets, $\frac{3}{16}$ x $\frac{3}{8}$ "	28
SP-2814	Service brake band guide plate rivets, $\frac{3}{16}$ x $\frac{3}{8}$ " csk., head soft iron	24
SP-2870	Service brake band rivets, $\frac{1}{8}$ x $\frac{5}{16}$ "	50
SP-3626	Service brake band guide lock pin	4

PRICES ON APPLICATION

LEXINGTON SERIES "T" PARTS LIST

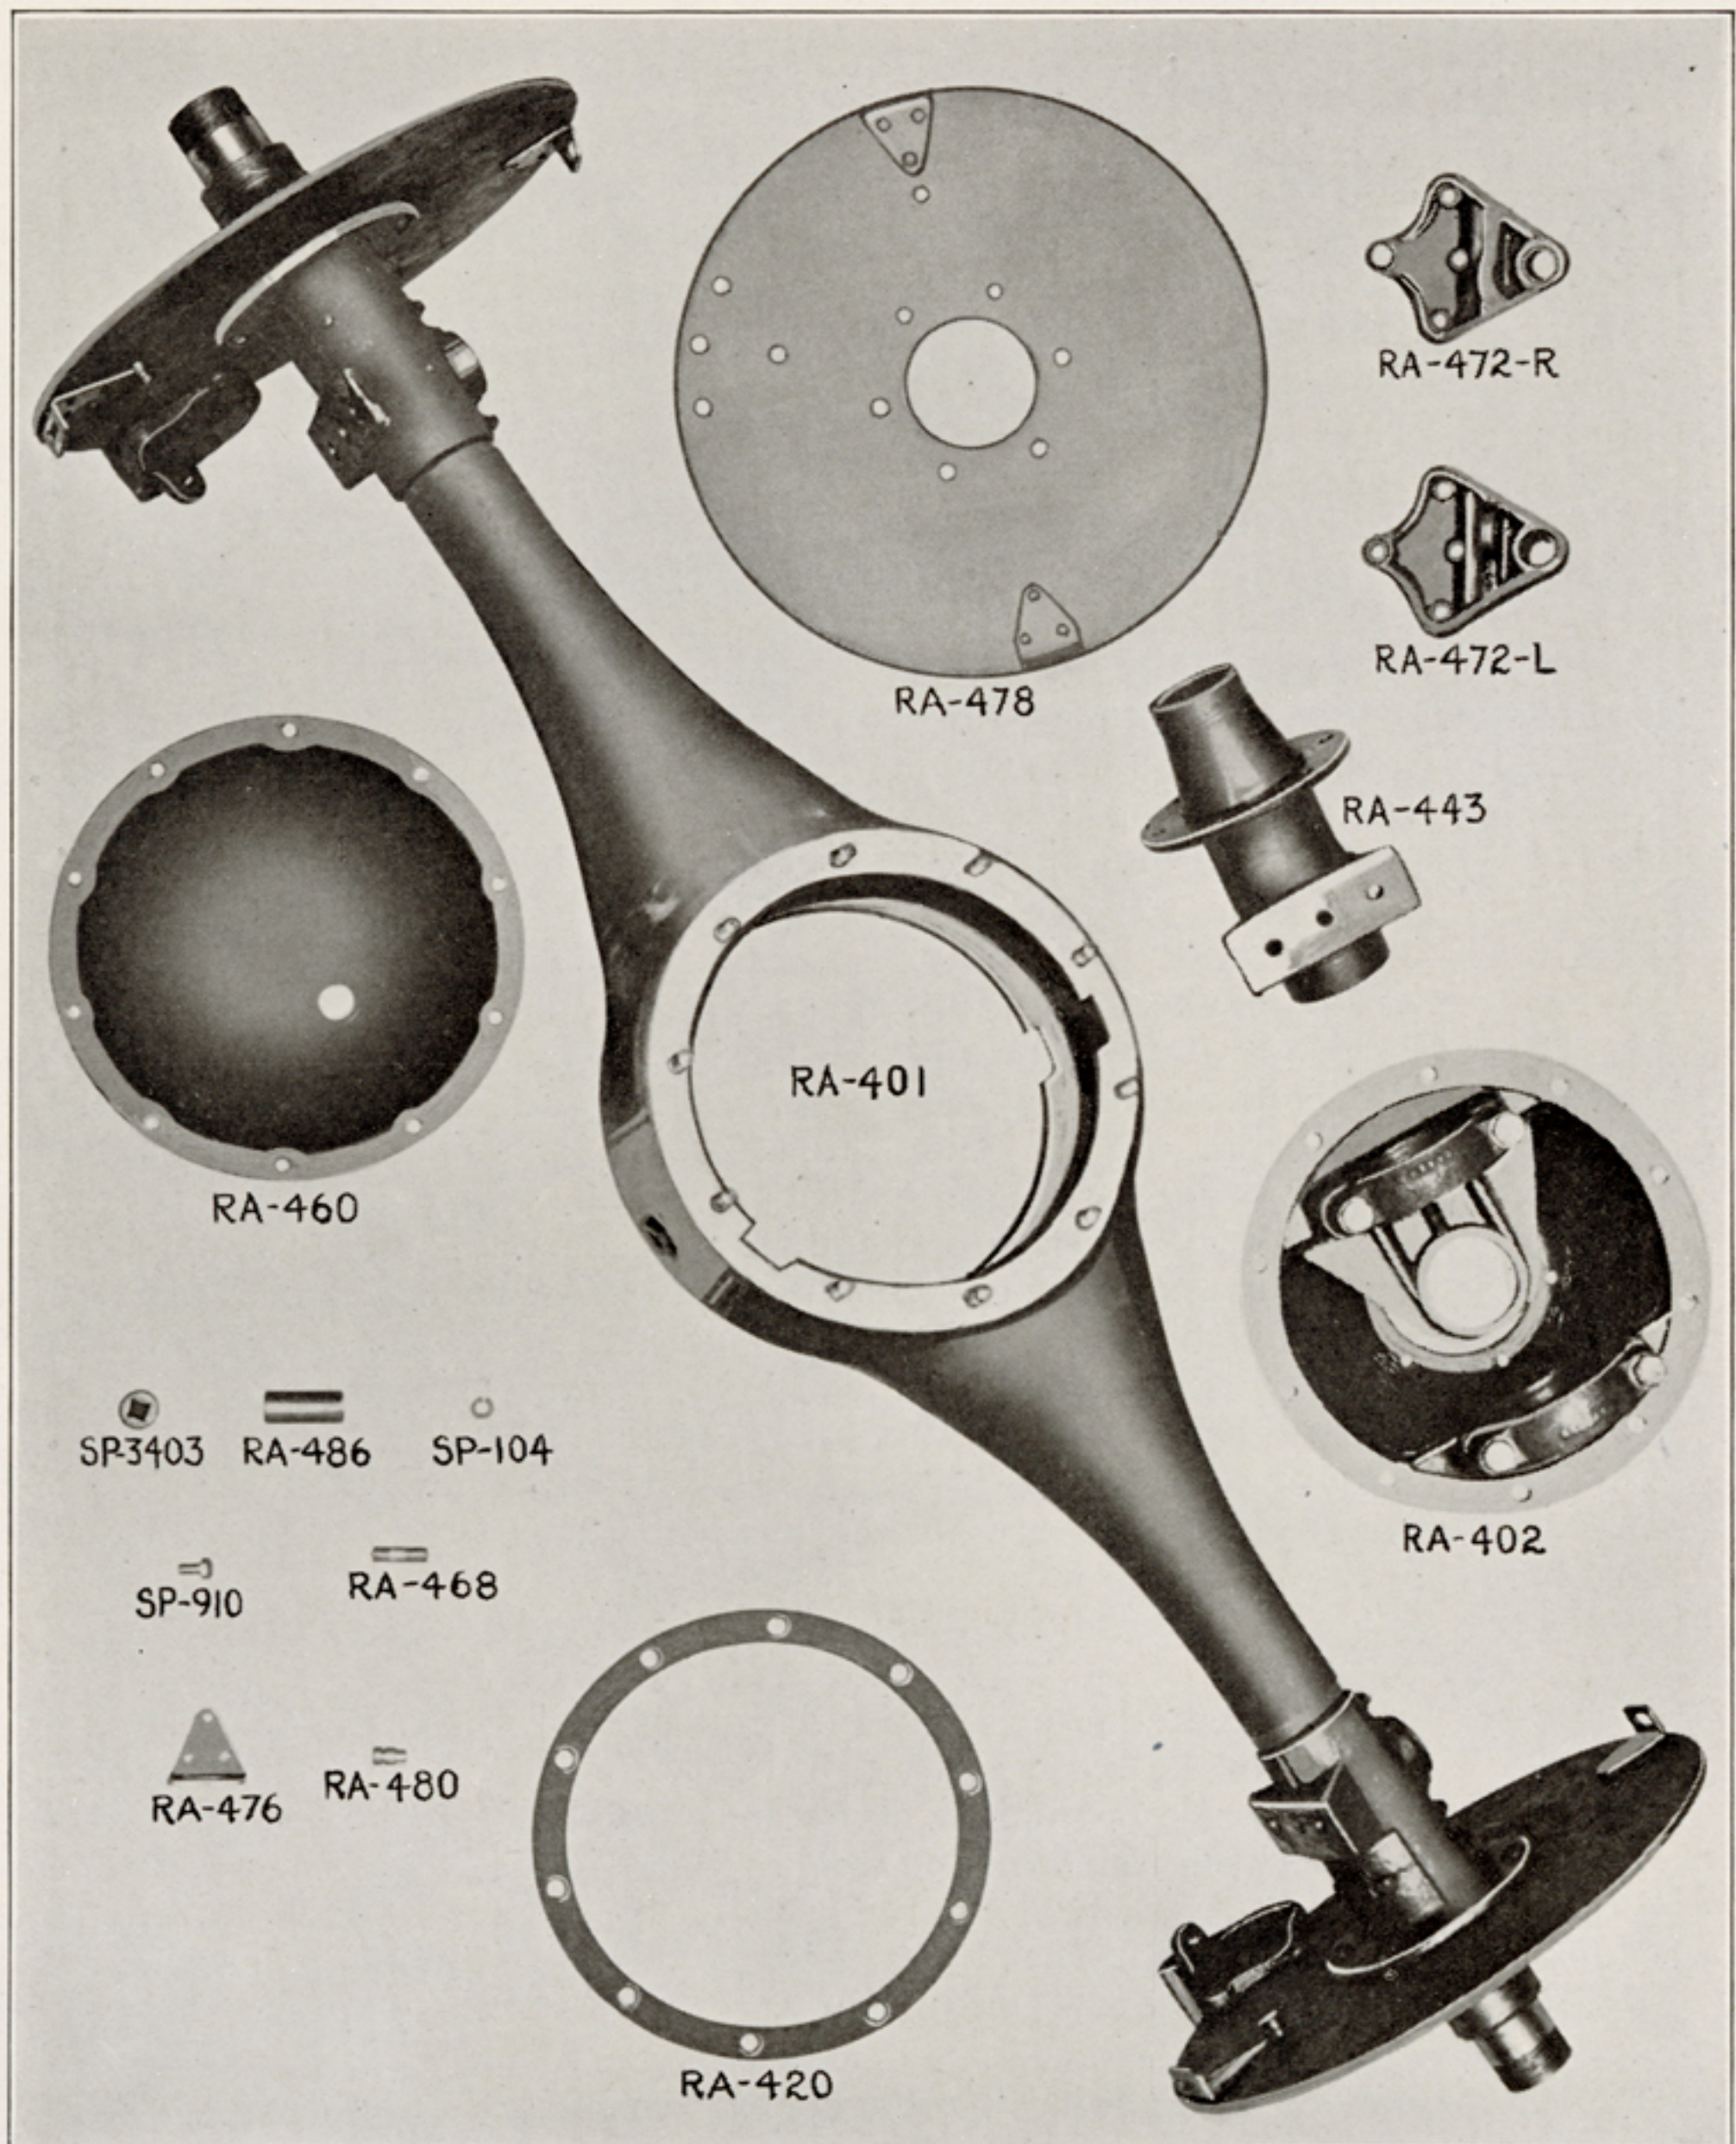

REAR AXLE HOUSING AND PARTS

WORKS OF HISTORICA
CONNEERSVILLE - IN

LEXINGTON SERIES "T" PARTS LIST

REAR AXLE GROUP


Part No.	Name	No. Req.
RA-400-A	Rear axle assembly complete.....	1
RA-401	Rear axle housing.....	1
RA-495-A	Differential front cap assembly (specify gear ratio).....	1
RA-402	Differential carrier.....	1
RA-420	Differential carrier gasket, large.....	1
RA-420	Rear axle housing, rear cap gasket.....	1
RA-443	Rear axle spring bracket.....	2
RA-460	Rear axle housing rear cap.....	1
RA-468	Differential carrier stud.....	10
RA-472-L	Service brake support bracket, left hand.....	1
RA-472-R	Service brake support bracket, right hand.....	1
RA-477	Service brake band guide plate.....	6
RA-478	Service brake support disc.....	2
RA-480	Service brake release spring anchor pin.....	2
RA-486	Brake lever bushing.....	2
SP-910	Rear axle rear cap screw $\frac{5}{16}$ "x24x $\frac{3}{4}$ " hex. S. A. E.	10
SP-3403	Rear axle housing oil drain plug $\frac{3}{4}$ " pipe.....	1
SP-3403	Rear axle housing oil filler plug $\frac{3}{4}$ " pipe.....	1

(Continued on Page 43)


PRICES ON APPLICATION

IMPORTANT

IT IS ABSOLUTELY NECESSARY THAT WE
HAVE NUMBER OF CAR FOR WHICH
AXLE PARTS ARE WANTED

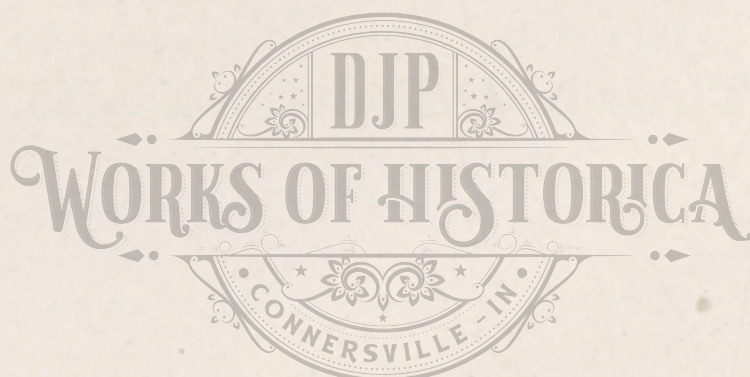

LEXINGTON SERIES "T" PARTS LIST

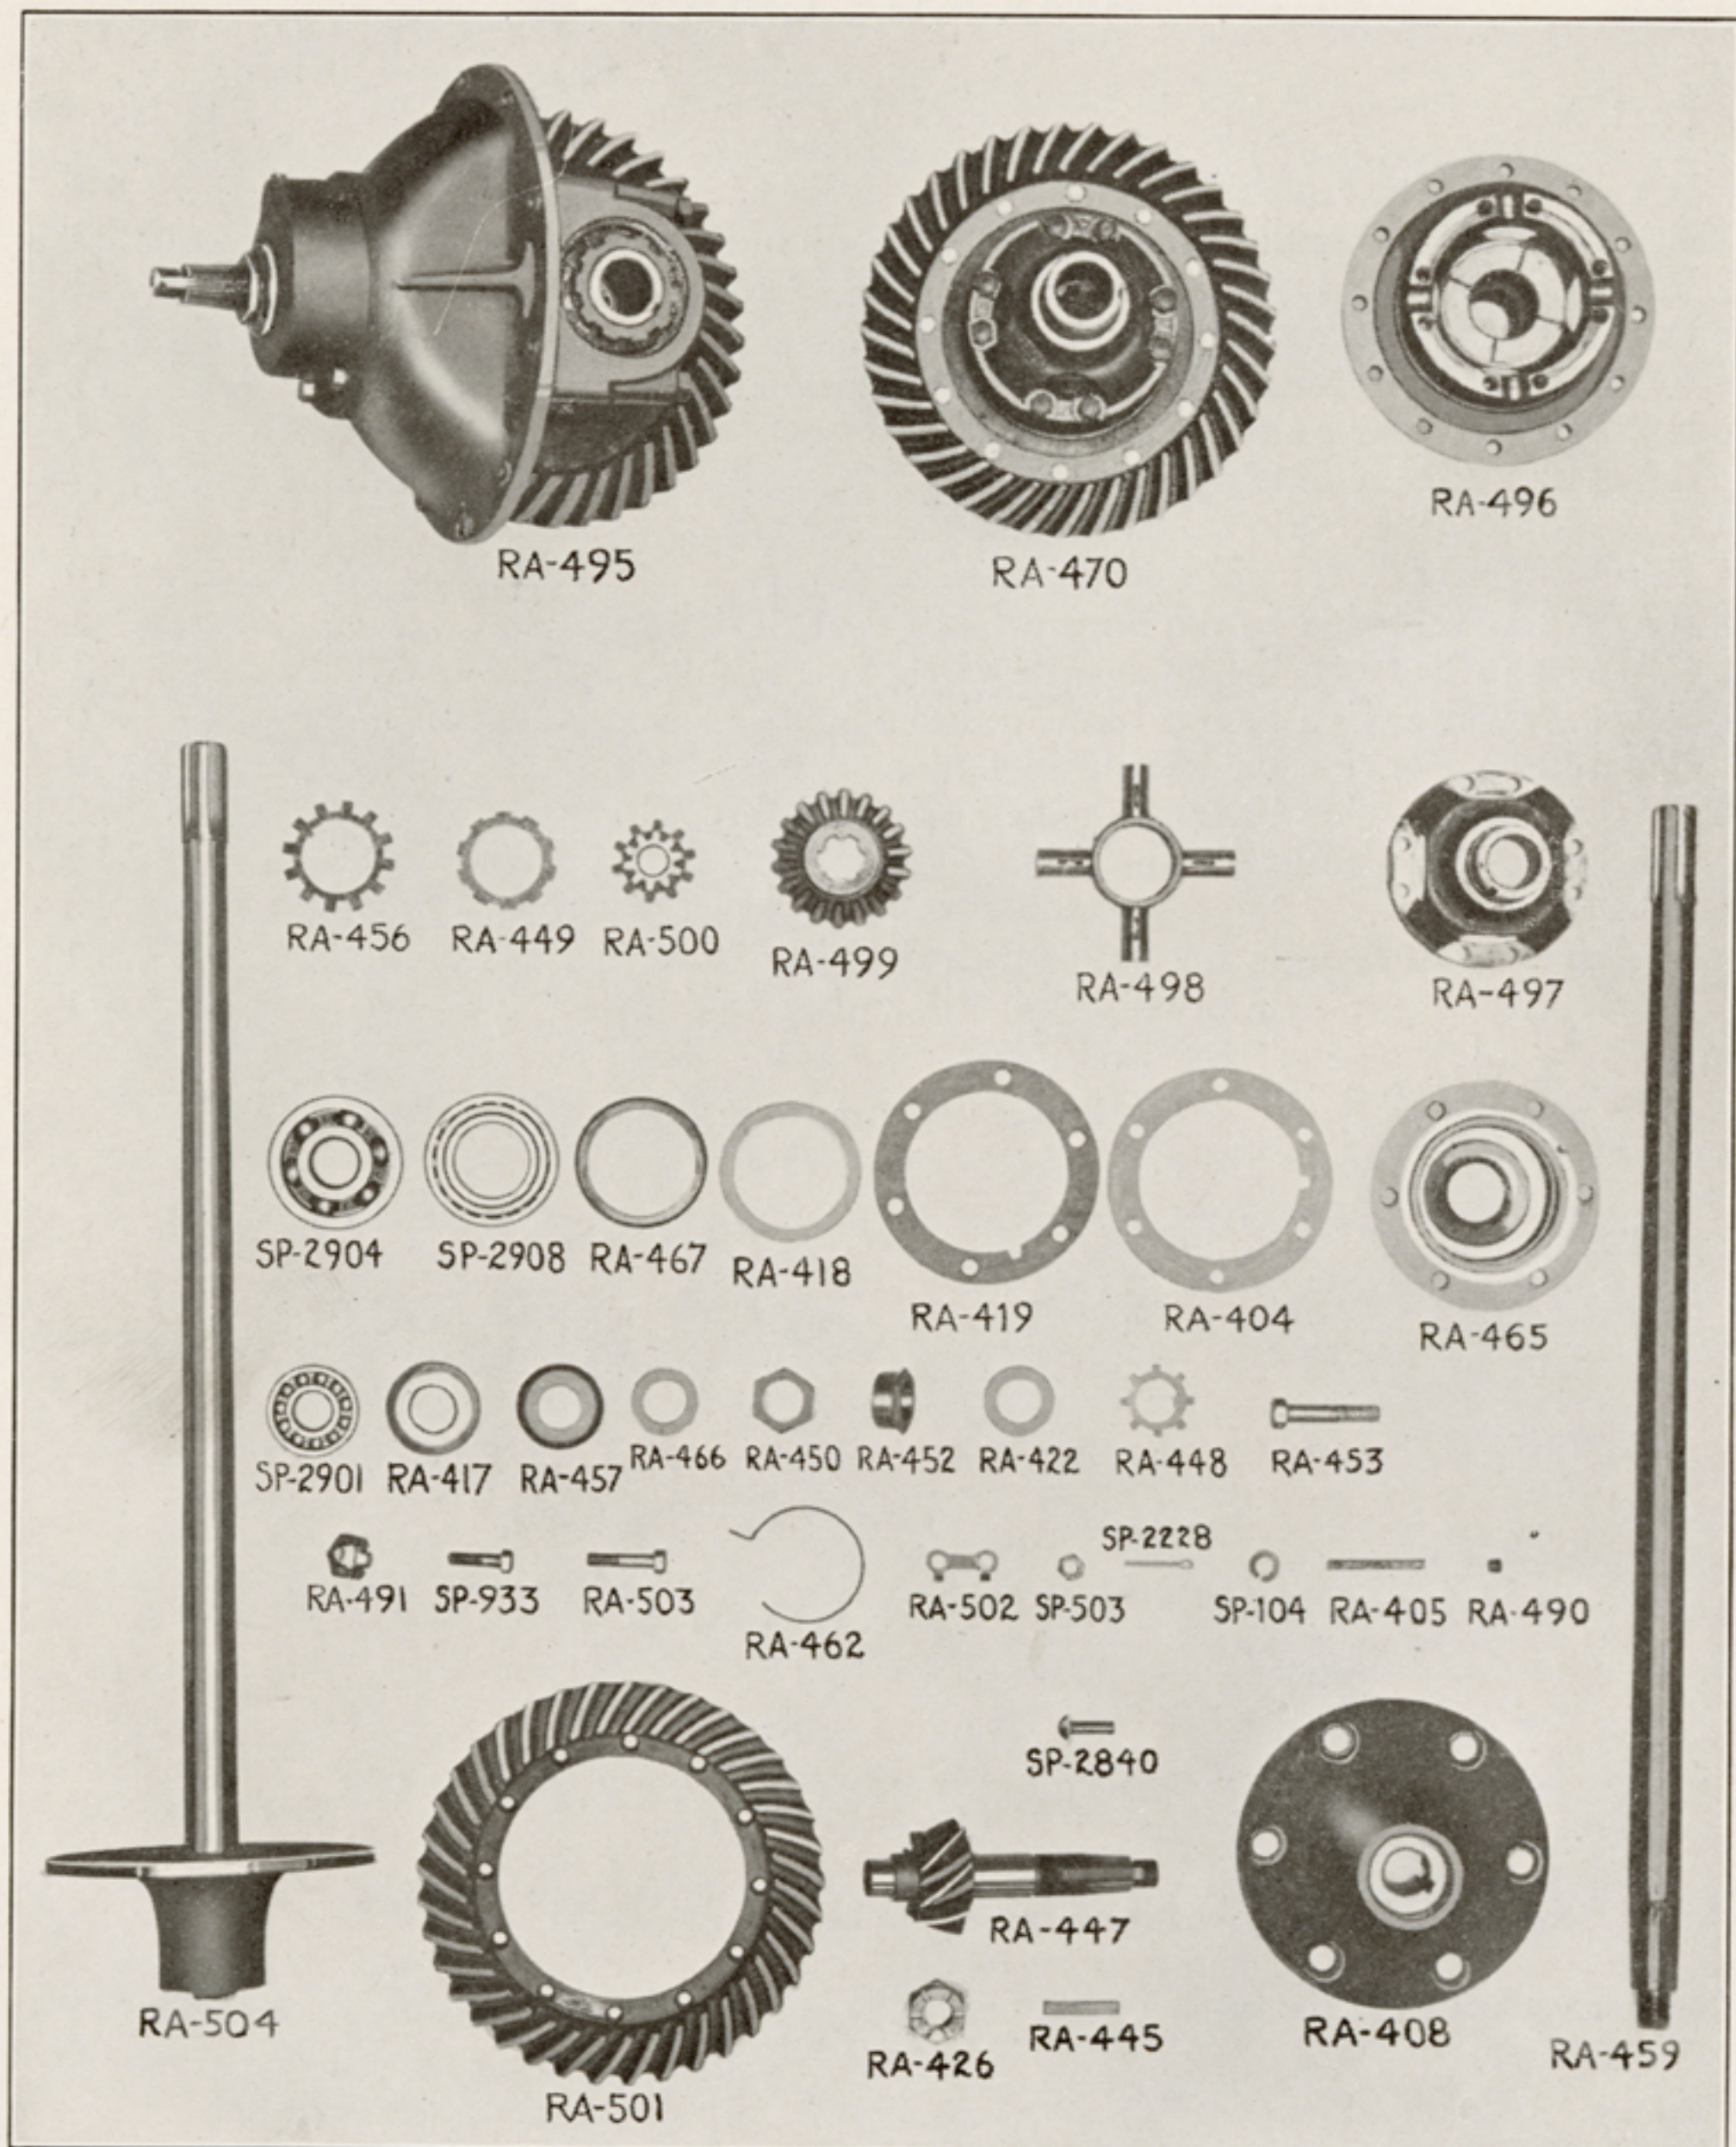

DIFFERENTIAL AND VARIOUS AXLE PARTS

WORKS OF HISTORICA
CONNEVILLE - IN.

LEXINGTON SERIES "T" PARTS LIST

REAR AXLE GROUP (Continued)

Part No.	Name	No. Req.
(In ordering ring gears or pinions give car number.)		
RA-404	Pinion bearing retainer shim.....	3
RA-405	Rear axle spring bracket key.....	2
RA-408	Rear axle drive flange.....	2
RA-416	Pinion shaft spacer shim.....	14
RA-417	Pinion shaft bearing oil thrower.....	1
RA-418	Pinion bearing retainer ring.....	1
RA-419	Pinion bearing retainer gasket.....	1
RA-422	Pinion shaft spacer washer.....	1
RA-426	Axle drive shaft nut, 1 $\frac{7}{16}$ " hex. castle special.....	2
RA-445	Axle drive shaft key.....	2
RA-447	B. L. pinion shaft and pinion integral, 37-8 ratio.....	1
RA-447	Warner pinion shaft and pinion integral, 37-8 ratio.....	1
RA-447	Warner pinion shaft and pinion integral, 41-8 ratio.....	1
RA-448	Pinion shaft bearing lock washer.....	1
RA-449	Differential bearing retainer nut.....	2
RA-450	Pinion shaft bearing lock nut.....	1
RA-452	Pinion shaft bearing nut.....	1
RA-453	Differential carrier bearing cap bolt, 1/2x20", special.....	4
RA-456	Differential bearing retainer nut lock washer.....	2
RA-457	Pinion shaft bearing nut dust shield.....	1
RA-459	Rear axle drive shaft.....	2
RA-462	Pinion bearing retainer ring lock wire.....	1
RA-465	Pinion bearing retainer.....	1
RA-466	Pinion shaft bearing spacer sleeve.....	1
RA-467	Pinion bearing spacer ring.....	1
RA-470	B. L. differential assembly, 37-8 ratio.....	1
RA-470	Warner differential assembly, 37-8 ratio.....	1
RA-470	Warner differential assembly, 41-8 ratio.....	1
RA-490	Pinion bearing retainer pipe plug.....	1
RA-491	Pinion shaft nut, propeller shaft end.....	1
RA-492	Rear axle drive flange gasket.....	2
RA-496	Warner differential case flange side.....	1
RA-496	B. L. differential case flange side.....	1
RA-497	Warner differential case plain side.....	1
RA-497	B. L. differential case plain side.....	1
RA-498	Warner differential spider.....	1
RA-498	B. L. differential spider.....	1
RA-499	Warner differential side gear.....	2
RA-499	B. L. differential side gear.....	2
RA-500	Warner differential side pinion.....	4
RA-500	B. L. differential side pinion.....	4
RA-501	B. L. differential ring gear, 37-8 ratio.....	1
RA-501	Warner differential ring gear, 37-8 ratio.....	1
RA-501	Warner differential ring gear, 41-8 ratio.....	1
RA-502	Warner differential case bolt lock.....	5
RA-502	B. L. differential case bolt lock.....	5

PRICES ON APPLICATION

(Continued on Page 44)

LEXINGTON SERIES "T" PARTS LIST

REAR AXLE GROUP (Continued)


Part No.	Name	No. Req.
RA-503	Warner differential case bolt.....	10
RA-503	B. L. differential case bolt.....	10
RA-504	Axle shaft with flange attached.....	2
SP-503	Differential carrier stud nut $\frac{7}{16}$ " 20 hex.....	10
SP-933	Pinion shaft bearing retainer to differential carrier cap screw $\frac{3}{8}$ " No. 24 S. A. E. hex., 1" long.....	6
SP-2828	Axle drive shaft cotter, $\frac{1}{8}$ x $1\frac{1}{2}$ ".....	2
SP-2901	Pinion shaft bearing, inner, No. 305 Gurney (single row).....	1
SP-2904	Pinion shaft bearing, outer, No. 406 Gurney (single row) RDT.....	1
SP-2908	Differential bearing, right or left, No. 210 Gurney RT (single row).....	2
SP-2840	Differential ring gear rivet.....	
SP-2836	Rear axle spring bracket rivets, $\frac{5}{16}$ "x $1\frac{1}{8}$ ".....	12
T-484	Plain washer for pinion shaft.....	1

FRONT AXLE GROUP

A-400	Front axle assembly.....	1
A-401	Front axle bed.....	1
A-402-R	Steering knuckle, right.....	1
A-402-L	Steering knuckle, left.....	1
A-434	Steering knuckle king pin.....	2
A-404	Steering knuckle thrust washer.....	2
A-405	Steering knuckle thrust washer pin.....	2
A-406	Steering knuckle thrust washer dust cap.....	2
A-407	Steering knuckle king pin lock pin.....	2
A-408	Steering knuckle king pin bushing, upper.....	2
A-409	Steering knuckle king pin bushing, lower.....	2
A-411	Steering knuckle steering arm, left, double.....	1
A-412	Steering knuckle steering arm, right, single.....	1
A-413	Steering knuckle steering arm ball.....	1
A-414	Front axle tie rod yoke.....	2
A-415	Front axle tie rod pin.....	2
A-416	Tie rod pin bushing.....	2
A-417	Front axle tie rod, only.....	1
A-422	Steering knuckle felt retainer.....	2
A-424	Front wheel bearing spacer.....	2
A-425	Steering knuckle nut washer, outer.....	2
A-426	Steering knuckle nut washer, inner.....	2
A-428	Steering knuckle steering arm nut.....	2
A-428	Steering spindle nut.....	2
A-429	Steering knuckle steering arm bolt ball nut.....	1
A-430	Front axle tie rod yoke clamp bolt.....	2
A-431	Front axle tie rod pin lockwasher.....	2
A-442-A	Front axle tie rod assembly.....	1
A-435	Steering knuckle king pin dust cap.....	2
A-436	Blooming king pin oil cup.....	2
SP-401	Steering knuckle king pin lock pin nut.....	2
SP-502	Front axle tie rod yoke clamp bolt nut.....	2
SP-504	Front axle tie rod yoke pin nut.....	2
SP-651	Front axle steering arm adjusting screw lock nut.....	2
SP-915	Front axle king pin dust cap bolt.....	2
SP-1421	Front axle steering arm adjusting screw.....	2
SP-2106	Front axle steering arm, No. 11 Woodruff.....	2


PRICES ON APPLICATION

LEXINGTON SERIES "T" PARTS LIST

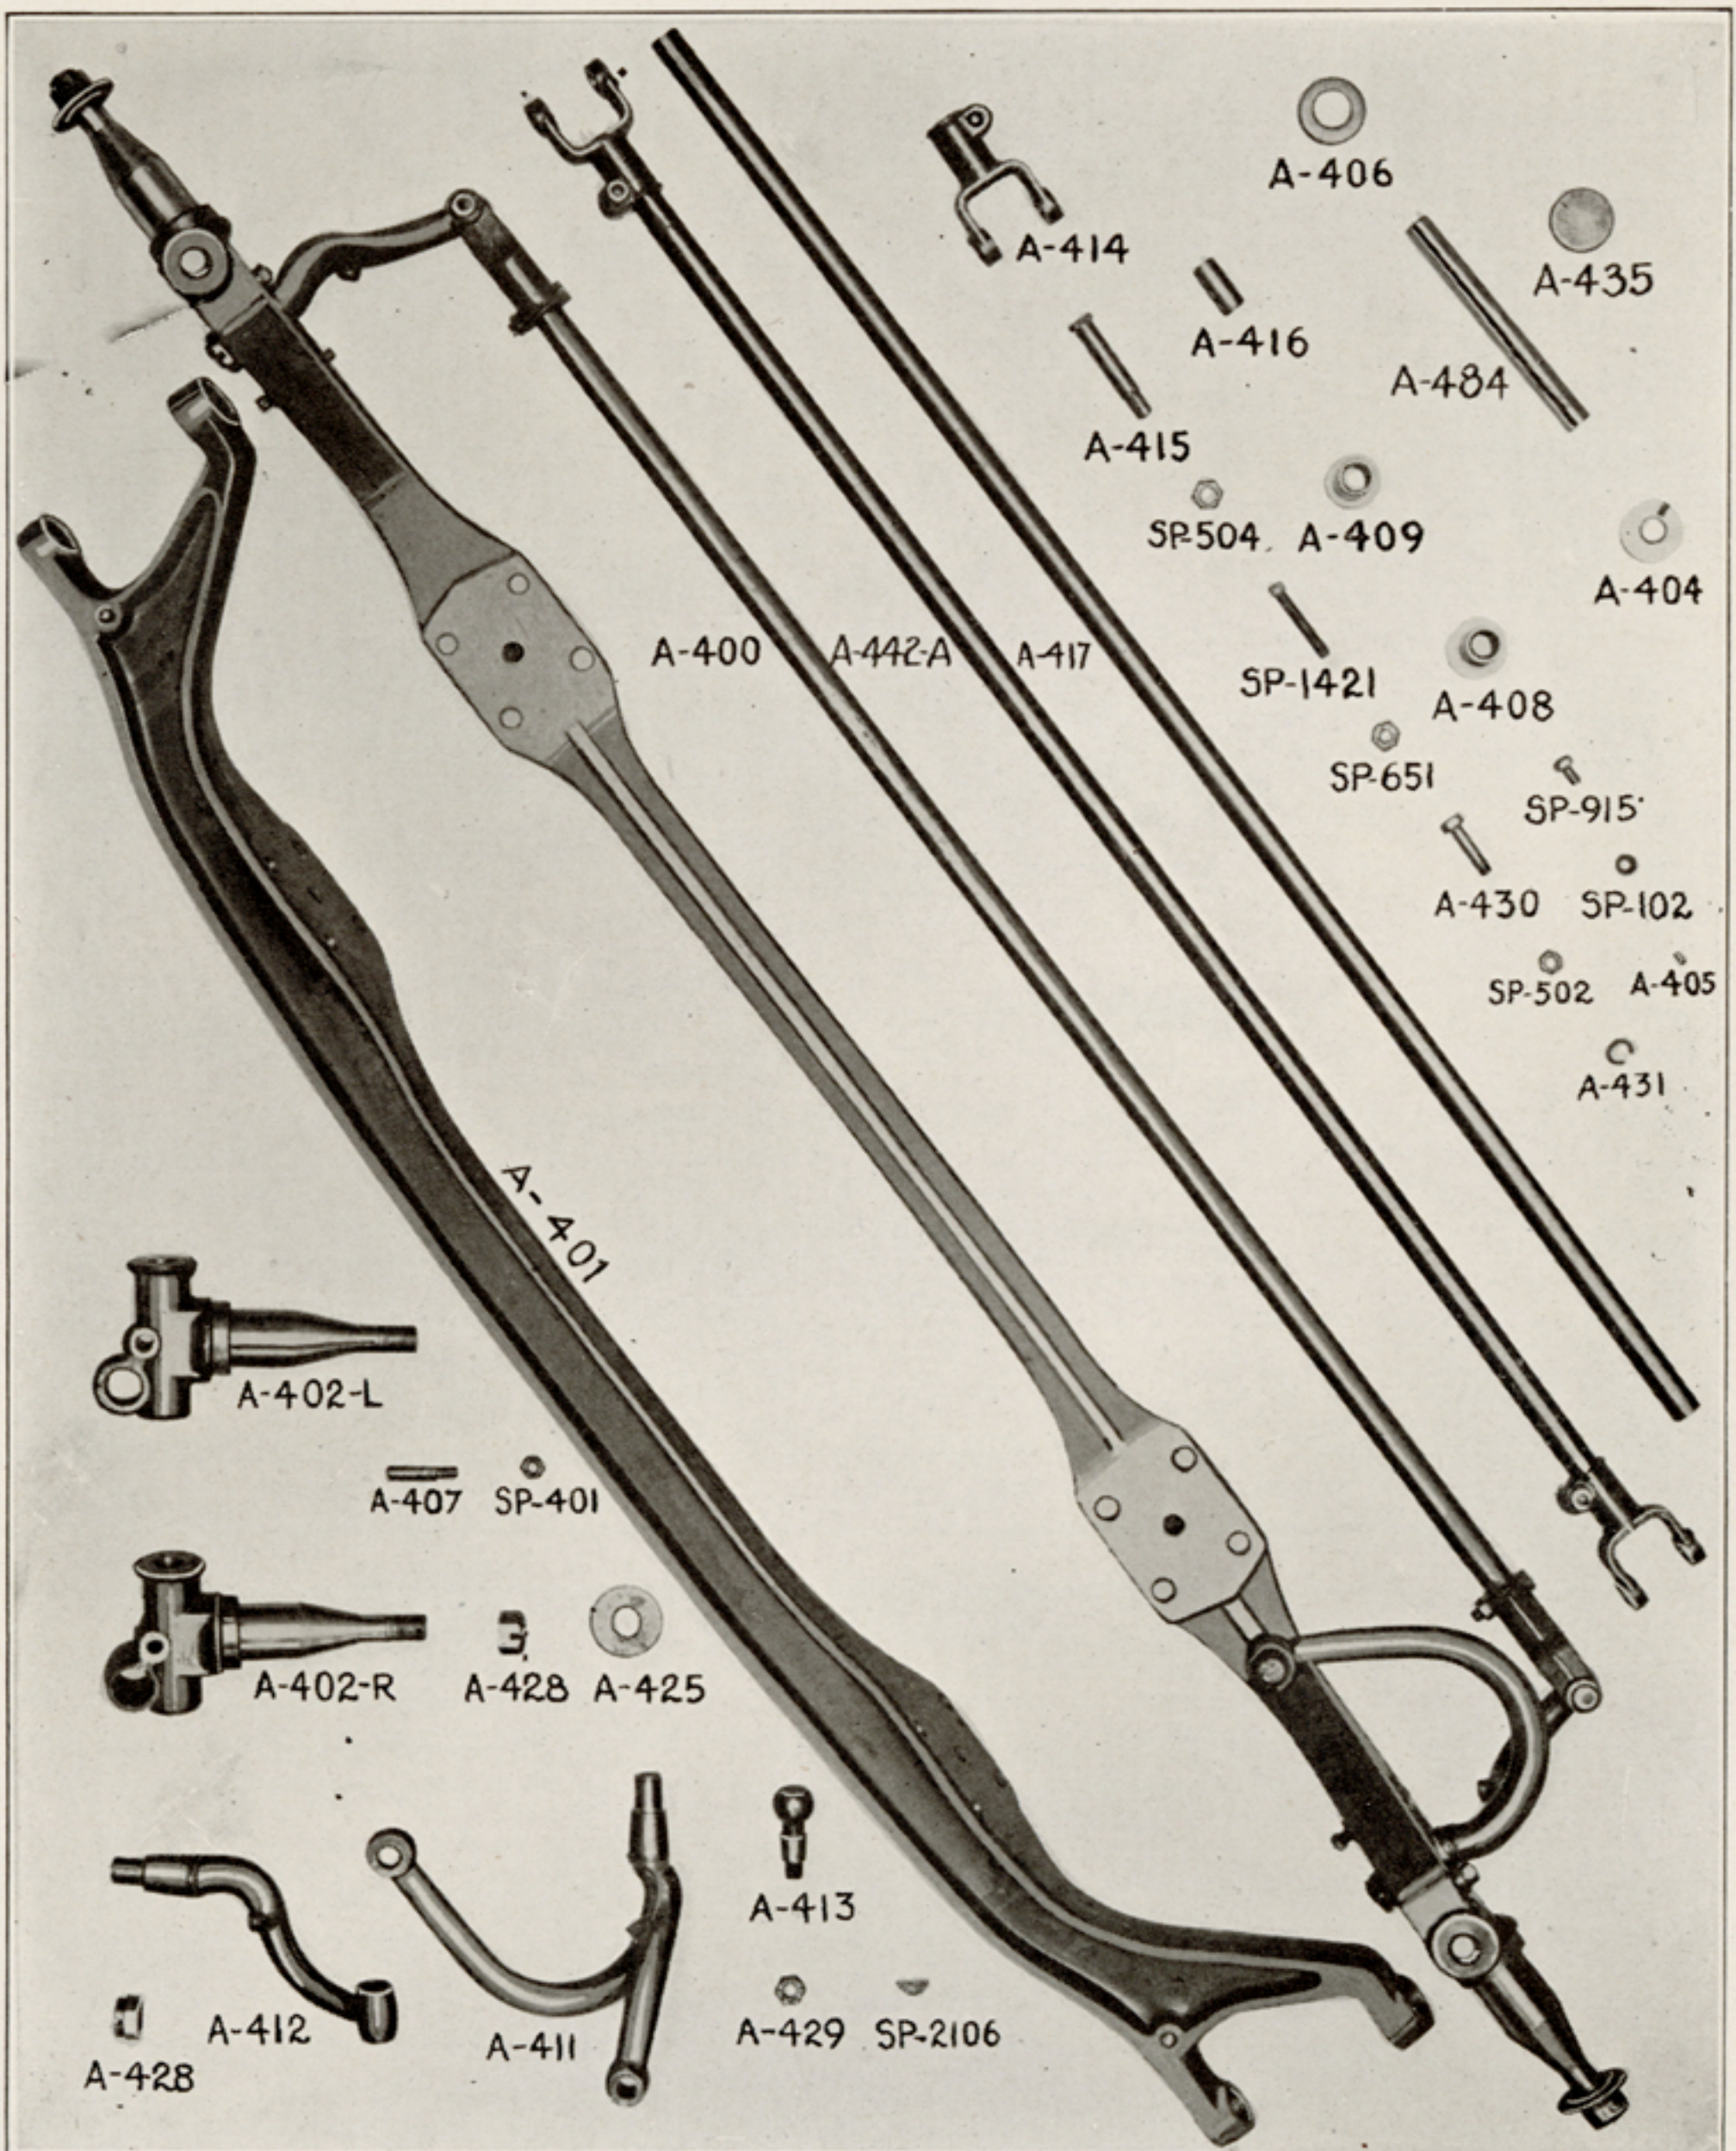

FRONT AXLE PARTS
WORKS OF HISTORICA
CONNERSVILLE - IN

LEXINGTON SERIES "T" PARTS LIST

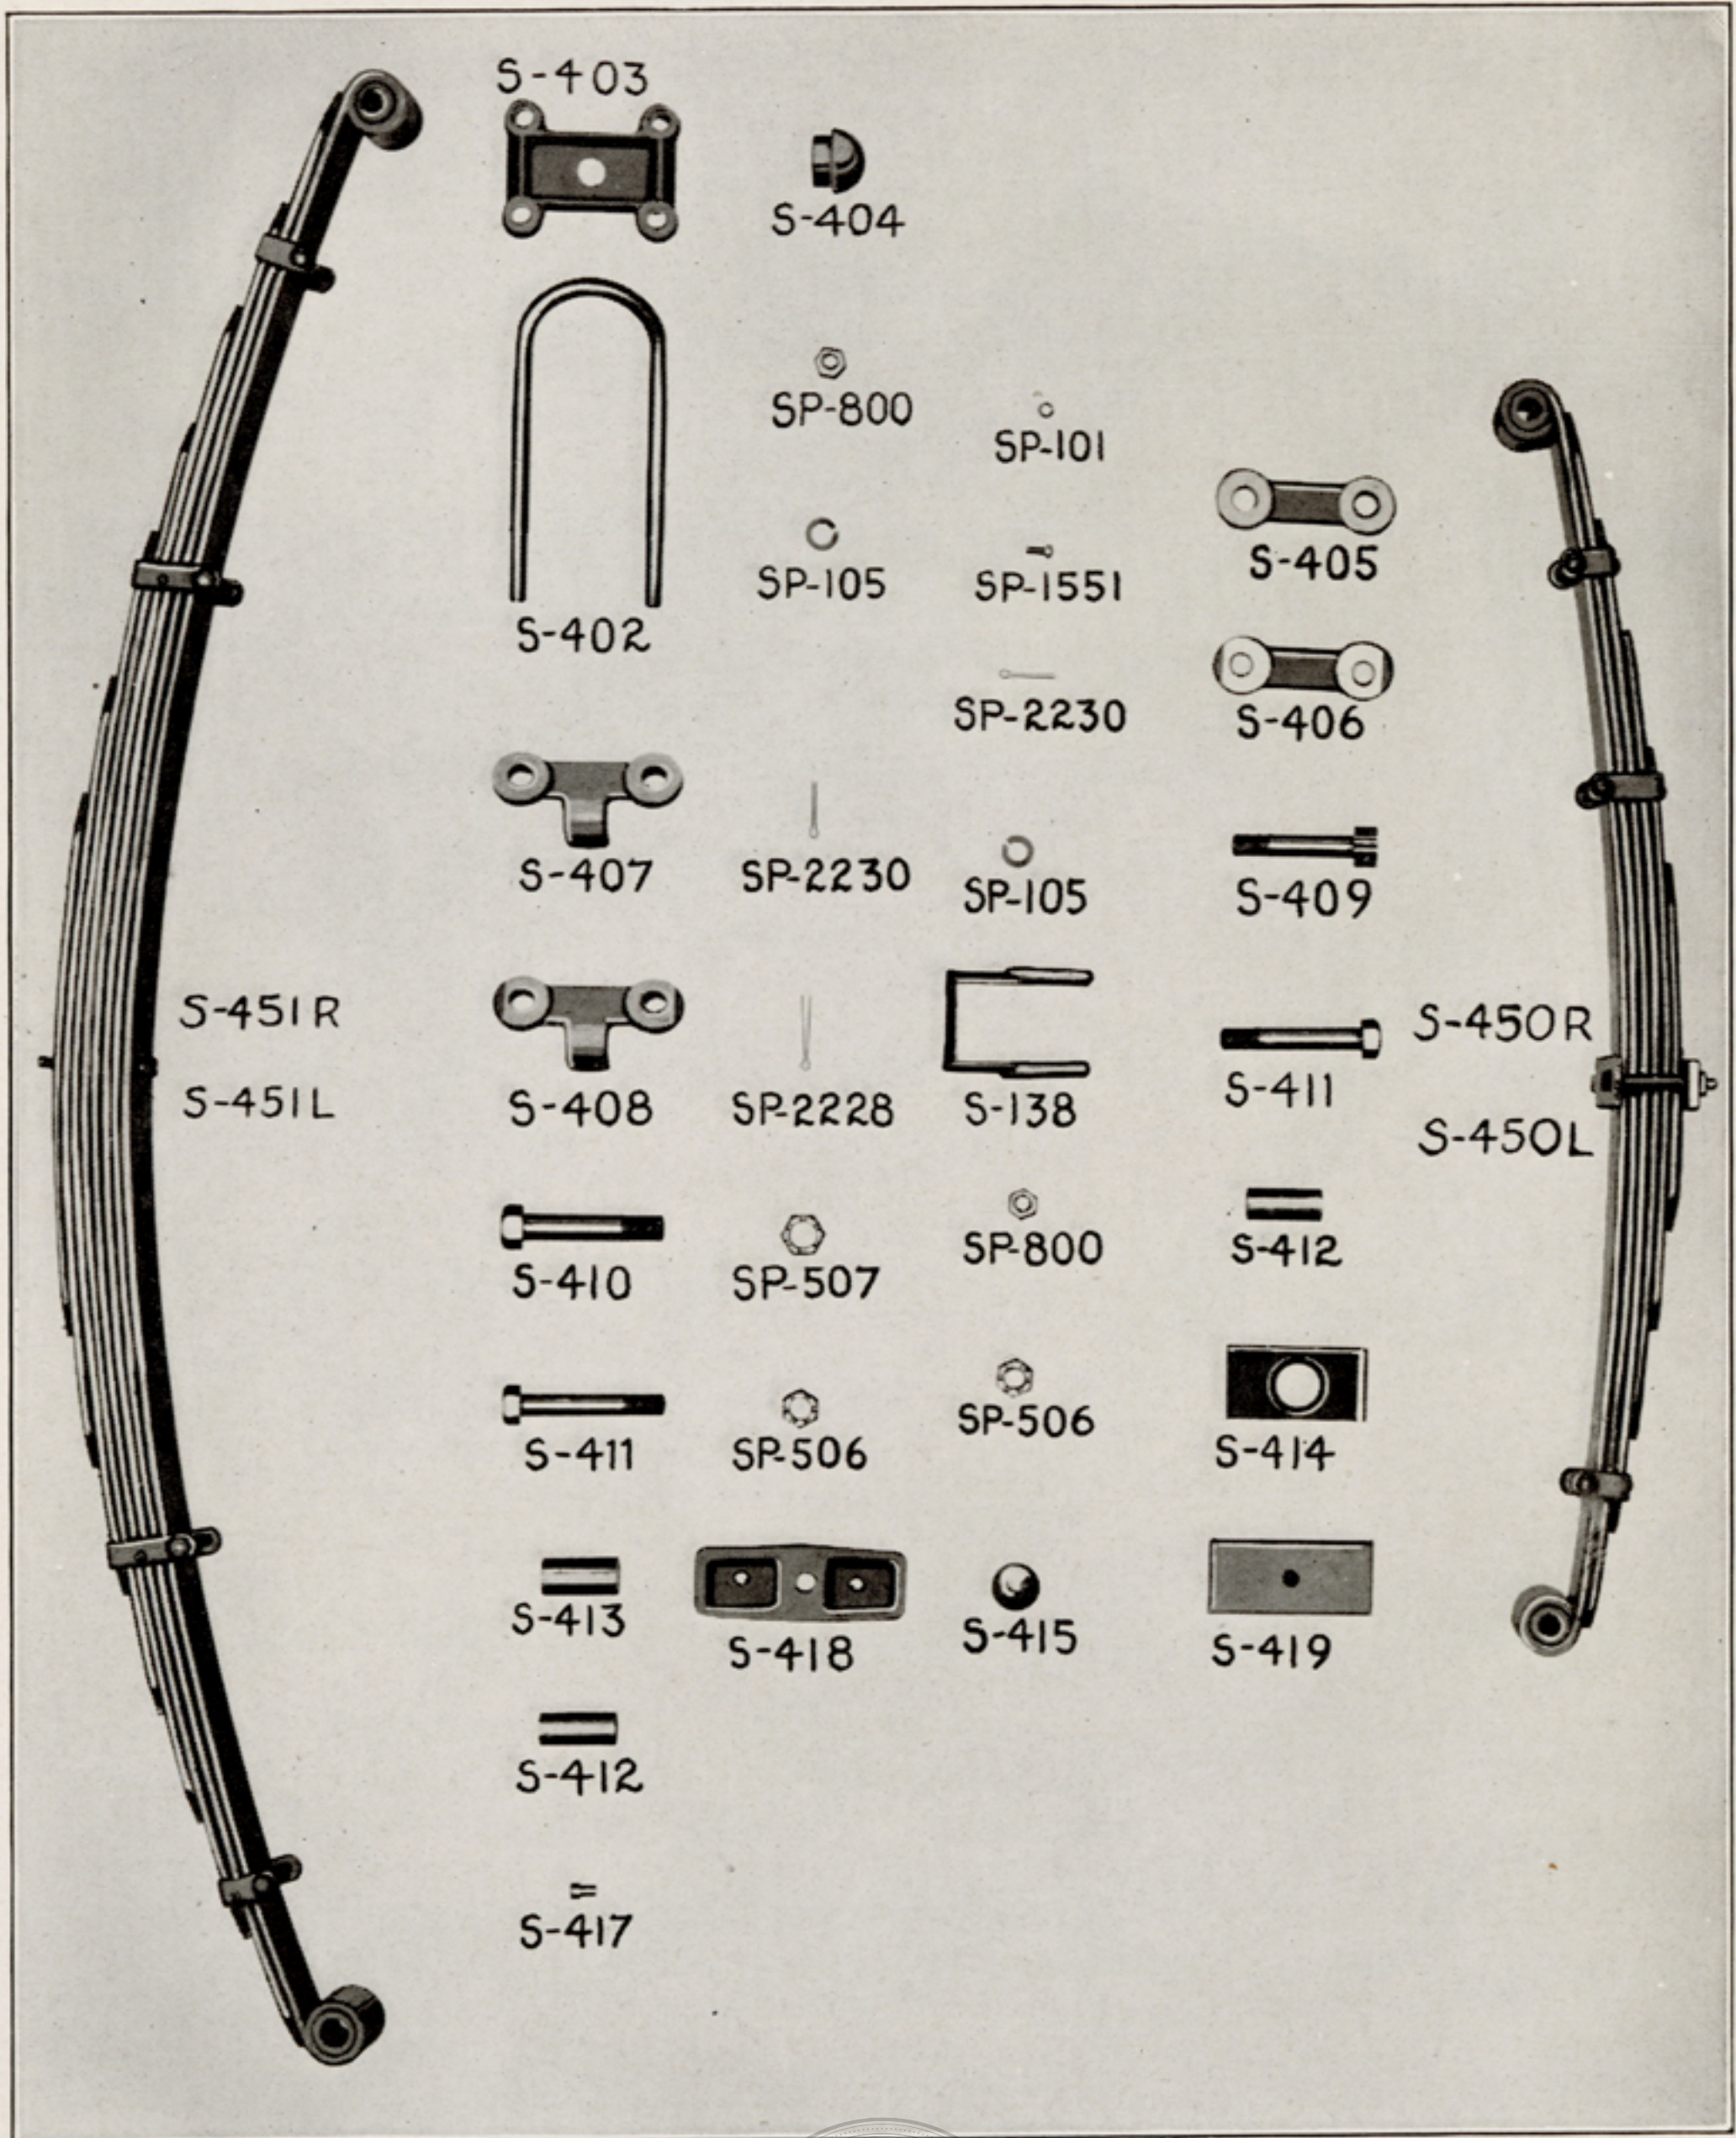

DIP
SPRINGS AND PARTS
WORKS OF HISTORICAL
CONNERSVILLE - IN.

LEXINGTON SERIES "T" PARTS LIST

SPRING GROUP

Part No.	Name	No. Req.
S-451-R	Rear spring assembly, right.....	1
S-451-L	Rear spring assembly, left.....	1
S-450-R	Front spring assembly, right.....	1
S-450-L	Front spring assembly, left.....	1
S-138	Front spring clip.....	4
S-458	Rear spring U clip (Shown as S-402 on Page 46).....	4
S-403	Rear spring U clip plate.....	2
S-404	Rear spring rubber bumper.....	2
S-405	Front spring shackle link, inner.....	2
S-406	Front spring shackle link, outer.....	2
S-407	Rear spring shackle link, inner.....	2
S-408	Rear spring shackle link, outer.....	2
S-409	Front of front spring bolt, $\frac{5}{8} \times 3\frac{3}{16}$ ".....	2
S-410	Front of rear spring bolt, $\frac{3}{4} \times 3\frac{5}{8}$ ".....	2
S-411	Rear of rear spring bolt, $\frac{5}{8} \times 3\frac{11}{16}$ ".....	4
S-411	Front spring bolt, rear $\frac{5}{8} \times 3\frac{9}{16}$ ".....	4
S-412	Rear spring bushing rear, $\frac{5}{8}$ " I. D. x $\frac{7}{8}$ " O. D.....	4
S-412	Front spring bushing $\frac{5}{8}$ " I. D. x $\frac{7}{8}$ " O. D.....	6
S-413	Rear spring bushing, front $\frac{3}{4}$ " I. D. 1" O. D. x 2".....	2
S-414	Front spring rubber bumper plate.....	2
S-415	Front spring rubber bumper.....	2
S-417	Rear spring wedge pin.....	2
S-418	Rear spring wedge.....	2
S-419	Front spring clip plate.....	2
S-454	Rear spring main leaf with bushings.....	2
S-455	Rear spring short leaf.....	2
S-456	Front spring main leaf with bushings.....	2
S-457	Front spring short leaf.....	2
SP-506	Castellated hexagon nut, $\frac{5}{8}$ "-18 S. A. E.....	10
SP-507	Castellated hexagon nut, $\frac{3}{4}$ "-16 S. A. E.....	2
SP-800	Front spring clip nut.....	16
SP-800	Rear spring clip nut.....	16
SP-1551	Fillister head machine screw, 14-20.....	2


WHEEL GROUP

W-400	Rear wheel with hub and brake drum, $33 \times 4\frac{1}{2}$ ".....	2
W-500	Rear wheel with hub and brake drum, $32 \times 4\frac{1}{2}$ ".....	2
W-400-A	Rear wheel, less hub and brake drum, $33 \times 4\frac{1}{2}$ ".....	2
W-513	Rear wheel, less hub and brake drum, $32 \times 4\frac{1}{2}$ ".....	2
W-401	Front wheel with hub and flange $33 \times 4\frac{1}{2}$ ".....	2
W-507	Front wheel with hub and flange $32 \times 4\frac{1}{2}$ ".....	2
W-401-A	Front wheel, less hub and flange $33 \times 4\frac{1}{2}$ ".....	2
W-508	Front wheel, less hub and flange $32 \times 4\frac{1}{2}$ ".....	2
W-403	Wheel felloe band $33 \times 4\frac{1}{2}$ ".....	4
W-405	Rim lug bolt for $33 \times 4\frac{1}{2}$ " only.....	48
W-406	Rim lugs and nut for $33 \times 4\frac{1}{2}$ " only.....	48
W-409	Demountable rims $33 \times 4\frac{1}{2}$ ".....	5
W-514	Demountable rims $32 \times 4\frac{1}{2}$ ".....	5
W-412	Rim nut wrench.....	1
W-501	Steel felloe band punched for $32 \times 4\frac{1}{2}$ ".....	2
W-502	Rim lug bolt for $32 \times 4\frac{1}{2}$ " only.....	24

(Continued on Page 49)

PRICES ON APPLICATION

LEXINGTON SERIES "T" PARTS LIST

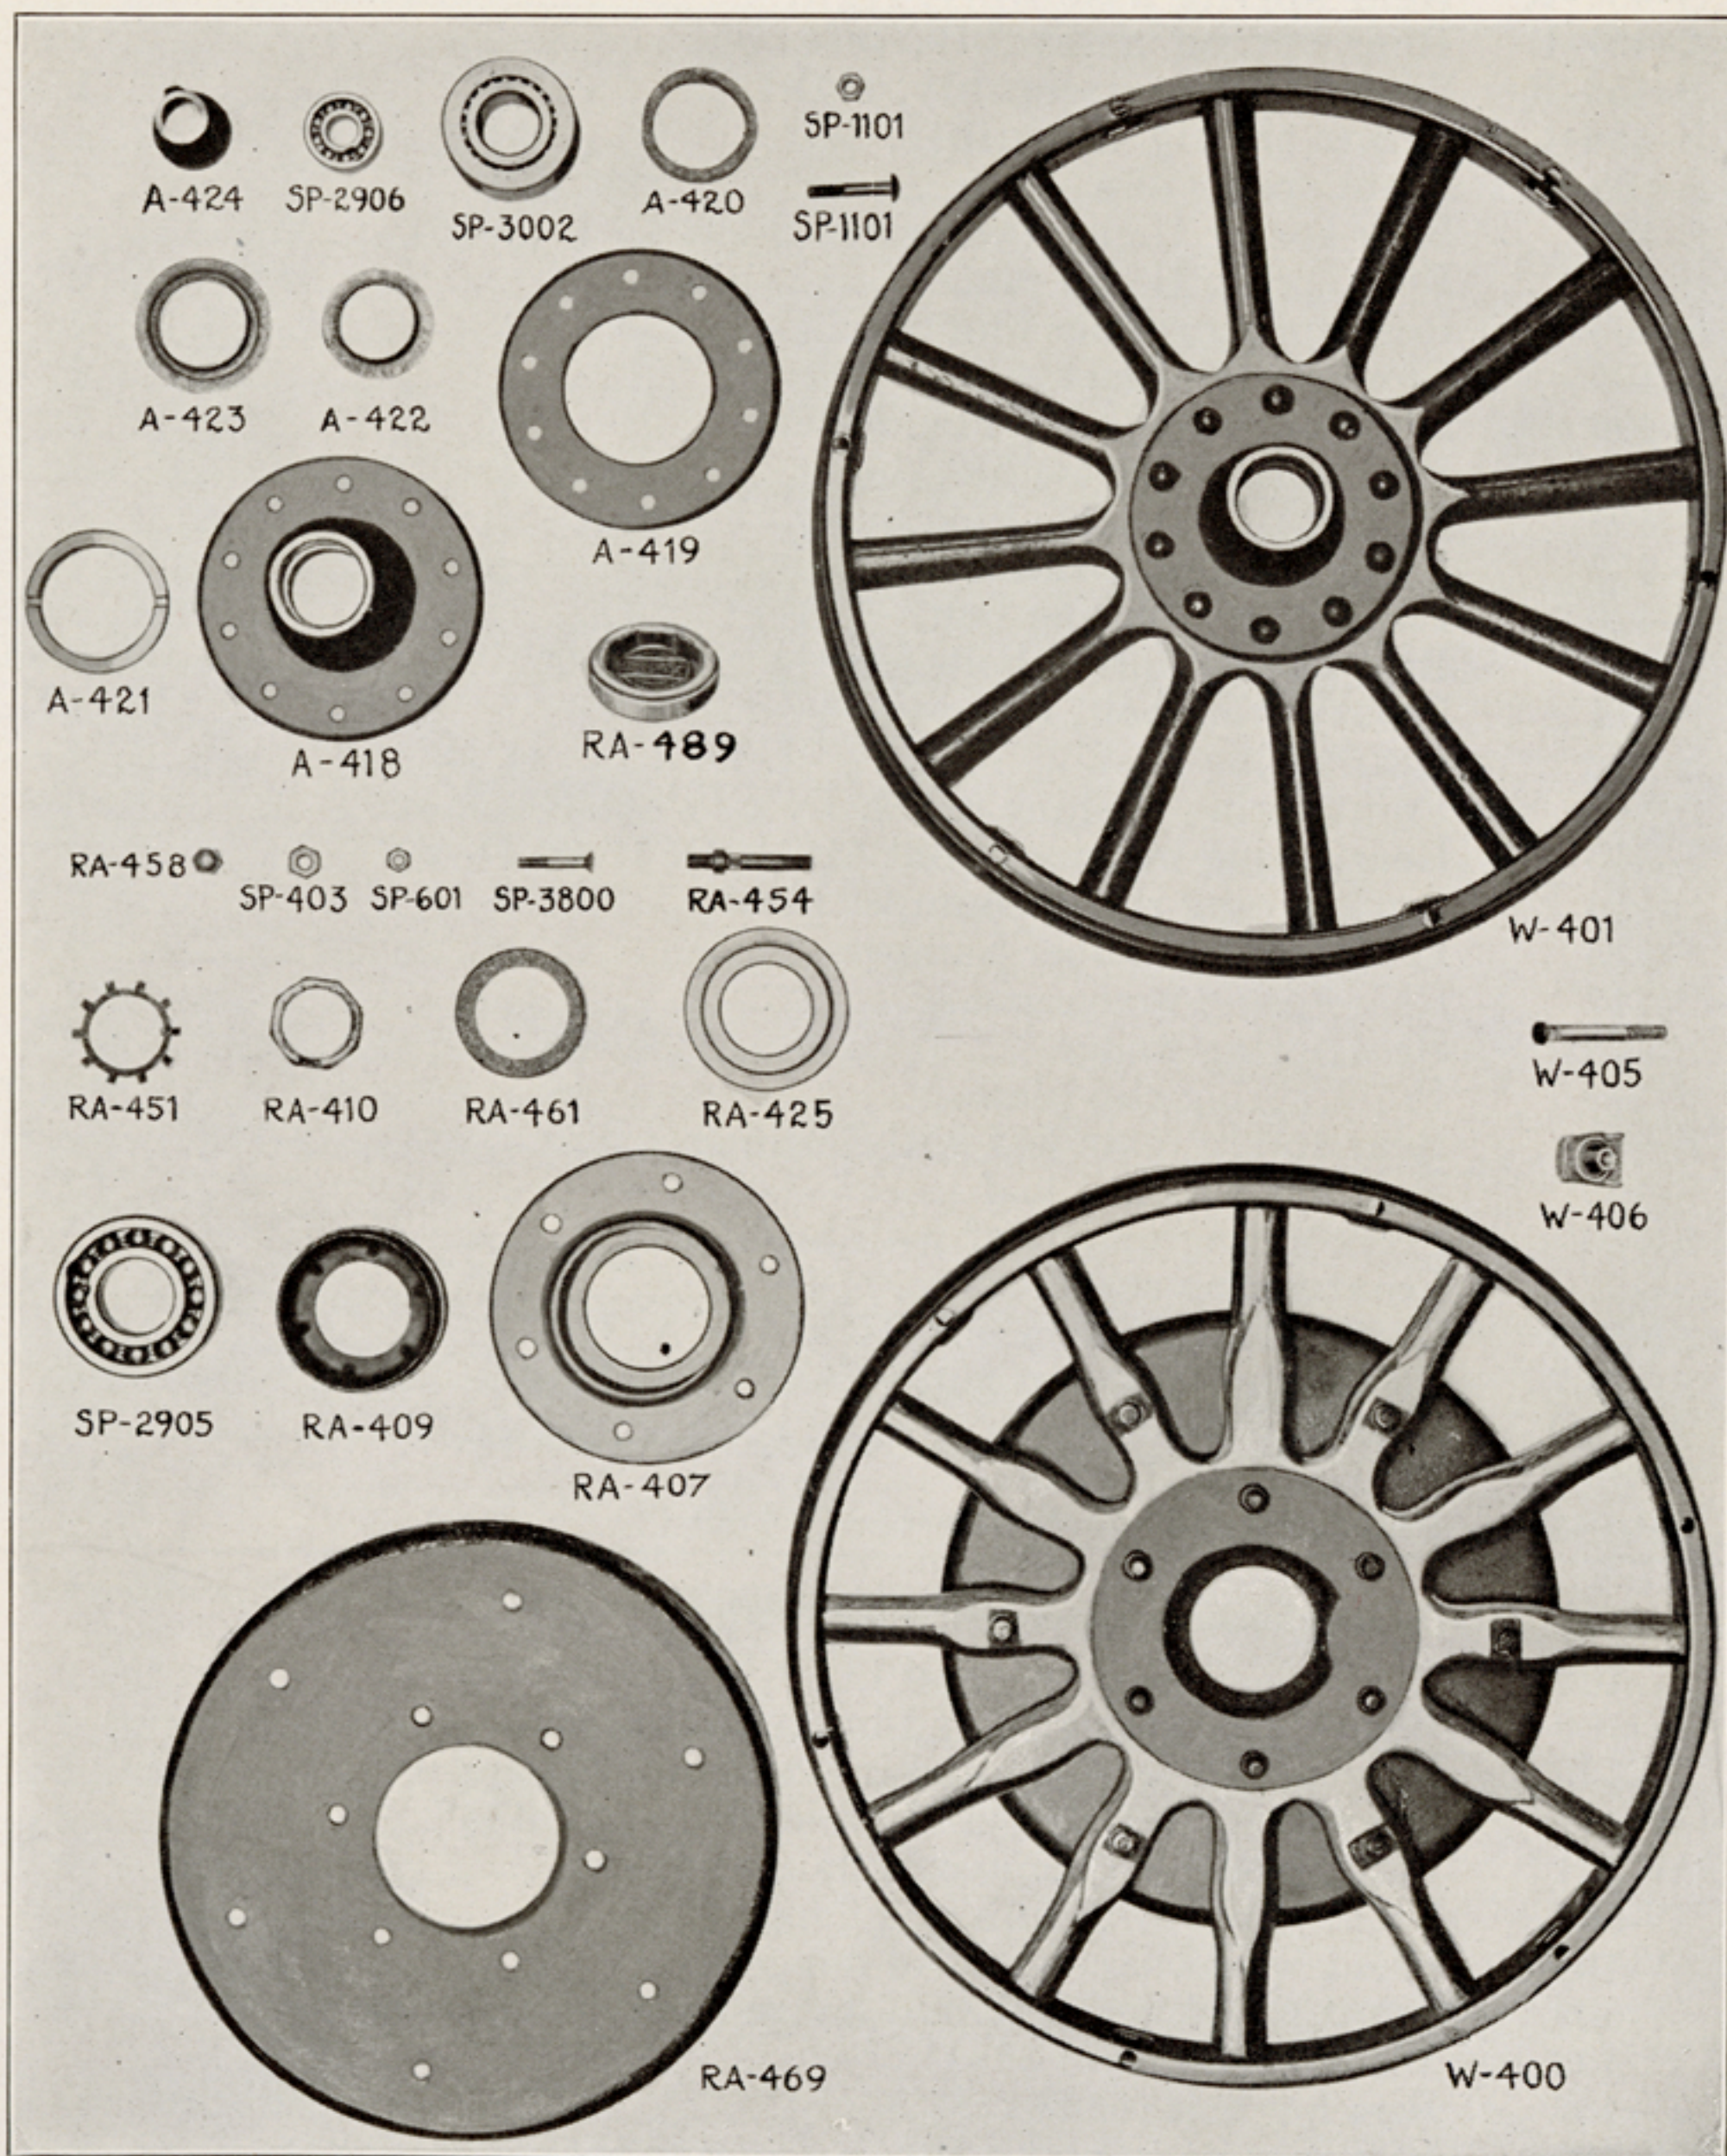

WHEELS AND PARTS
 WORKS OF HISTORICA
 CONNERSVILLE - IN.

LEXINGTON SERIES "T" PARTS LIST

WHEEL GROUP (Continued)

Part No.	Name	No. Req.
W-503	Rim lug only for 32x4 $\frac{1}{2}$ "	24
W-505	Rim lug bolt nuts 32x4 $\frac{1}{2}$ " only	24
W-506	Rim clamping ring 32x4 $\frac{1}{2}$ " only	9
RA-407	Rear wheel hub	2
RA-409	Rear wheel bearing retainer ring	2
RA-410	Rear wheel bearing nut	2
RA-425	Rear wheel bearing oil gasket retainer	2
RA-451	Rear wheel bearing nut lockwasher	2
RA-454	Rear wheel driving stud	12
RA-458	Rear wheel driving stud acorn nut, outer	12
RA-461	Rear wheel bearing oil gasket, cork	12
RA-469	Brake drums 16" dia. x 2 $\frac{13}{16}$ " wide	2
RA-489	Hub cap, for wood wheel	4
A-418	Front hubs	2
A-419	Front hub flanges	2
A-420	Front wheel bearing, felt	2
A-421	Front wheel inner bearing retainer	2
A-422	Front wheel spindle felt retainer, inner	2
A-423	Front wheel bearing felt retainer, inner	2
A-424	Front wheel bearing spacer	2
SP-403	$\frac{1}{2}$ "-20 S. A. E. hex. nuts	12
SP-403	Rear wheel driving stud nut, inner $\frac{7}{16}$ "-20	12
SP-601	$\frac{5}{16}$ " hex. nuts	12
SP-1101	Front wheel hub flange bolt and nut, $\frac{3}{8}$ x2 $\frac{1}{4}$ ", button head	20
SP-2905	Rear wheel bearing, No. 310 S. R. B. single row, Gurney radial	2
SP-2906	Front wheel bearing, outer, No. 304, Gurney	2
SP-3002	Front wheel bearing, inner, No. 308 N.D. double row or S.R.B.	2
SP-3800	$\frac{5}{16}$ x2" C. S. hd. cap screws	12

HOUK WIRE WHEELS

W-435	Complete set Houk 32"x4" wire wheels with all fittings	1
W-436	Wire wheel only (Houk)	5
W-437	Right side front hub	1
W-438	Left side front hub	1
W-439	Right side rear hub	1
W-440	Left side rear hub	1
W-441	Rear hub mountings	2
W-442	Mounting bolts	12
W-443	Right side flush hub caps assembled	2
W-444	Left side flush hub caps assembled	2
W-445	Lexington flush name-plate	4
W-446	Flush hub cap wrench	1
W-447	Nipple wrench	1
W-448	Front drive pins	12
W-449	Pipe plugs	4
W-450	Rear drive pins	12
W-451	Mounting bolt nuts	12
W-452	Mounting cone nuts	12
W-453	Mounting lockwashers	12
W-454	S. S. Stan. rim rings	5
W-455	Outer spokes	120
W-456	Center spokes	

(Continued on Page 50)

PRICES ON APPLICATION

LEXINGTON SERIES "T" PARTS LIST

HOUK WIRE WHEELS (Continued)

Part No.	Name	No. Req.
W-457	Inner spokes.....	120
W-458	Spoke nipples.....	360
W-459	Lock rings.....	5
W-460	Lock ring keys.....	5
W-461	Right side locking latches.....	2
W-462	Left side locking latches.....	2
W-463	Latch springs.....	4

DISTEEL WHEELS

W-474	Complete set Disteel wheels, 32"x4", with fittings.....	1
W-475	Disteel wheels, only.....	5
W-476	Front hub, right or left.....	2
W-477	Front hub flange.....	2
W-478	Rear hub, right or left.....	2
W-479	Rear hub flange.....	2
W-480	Rim bolt.....	40
W-481	Rim bolt nut.....	40
W-482	Hub flange lock nut.....	20
W-483	Hub flange lock nut washer.....	20
W-484	Wheel driving stud.....	20
W-485	Socket wrench.....	1

WOOD WHEEL TIRE CARRIER


F-412-A	Tire carrier assembly 33x4 $\frac{1}{2}$ " (Specify color).....	1
F-487-A	Tire carrier assembly 32x4 $\frac{1}{2}$ " (Specify color).....	1
F-196	Tire carrier hub.....	1
F-200	Tire carrier name plate.....	1
F-427	Tire carrier felloe band 33x4 $\frac{1}{2}$ ".....	1
W-511	Tire carrier felloe band 32x4 $\frac{1}{2}$ ".....	1
F-429	Tire carrier hub bolt nut, $\frac{3}{8}$ "-16 U. S. S. Acorn N. B.	3
W409	Demountable rim 33x4 $\frac{1}{2}$ ".....	5
W-514	Demountable rim, 32x4 $\frac{1}{2}$ ".....	5
W-422	Tire carrier spokes, 32x4" (Specify color).....	3
W-512	Tire carrier spokes, 32x4 $\frac{1}{2}$ " (Specify color).....	3
SP--1907	Tire carrier mounting cap screw.....	3
SP-1300	Tire carrier lug bolt nut.....	2
SP-1919	Tire carrier hub bolt, $\frac{3}{8}$ x2", flat head cap screw, $\frac{3}{16}$ "-16.....	3
SP-3900	Tire carrier lug bolt.....	2

DISTEEL WHEEL TIRE CARRIER

F-469	Disteel wheel carrier assembly.....	1
F-473	Disteel wheel carrier filler block (used on Thorobred only).....	1
F-470	Disteel wheel carrier plate.....	1
F-471	Disteel wheel carrier collar and stud.....	1
F-472	Disteel wheel carrier plate nuts (nickel plated).....	3
SP-1907	Disteel wheel carrier cap screw, $\frac{3}{8}$ x1 $\frac{1}{4}$ ".....	3

Car Number *must* be given when ordering repair parts. Order parts by number in left hand column using name of part in full. Read instructions carefully on page 3 before ordering.

LEXINGTON SERIES "T" PARTS LIST

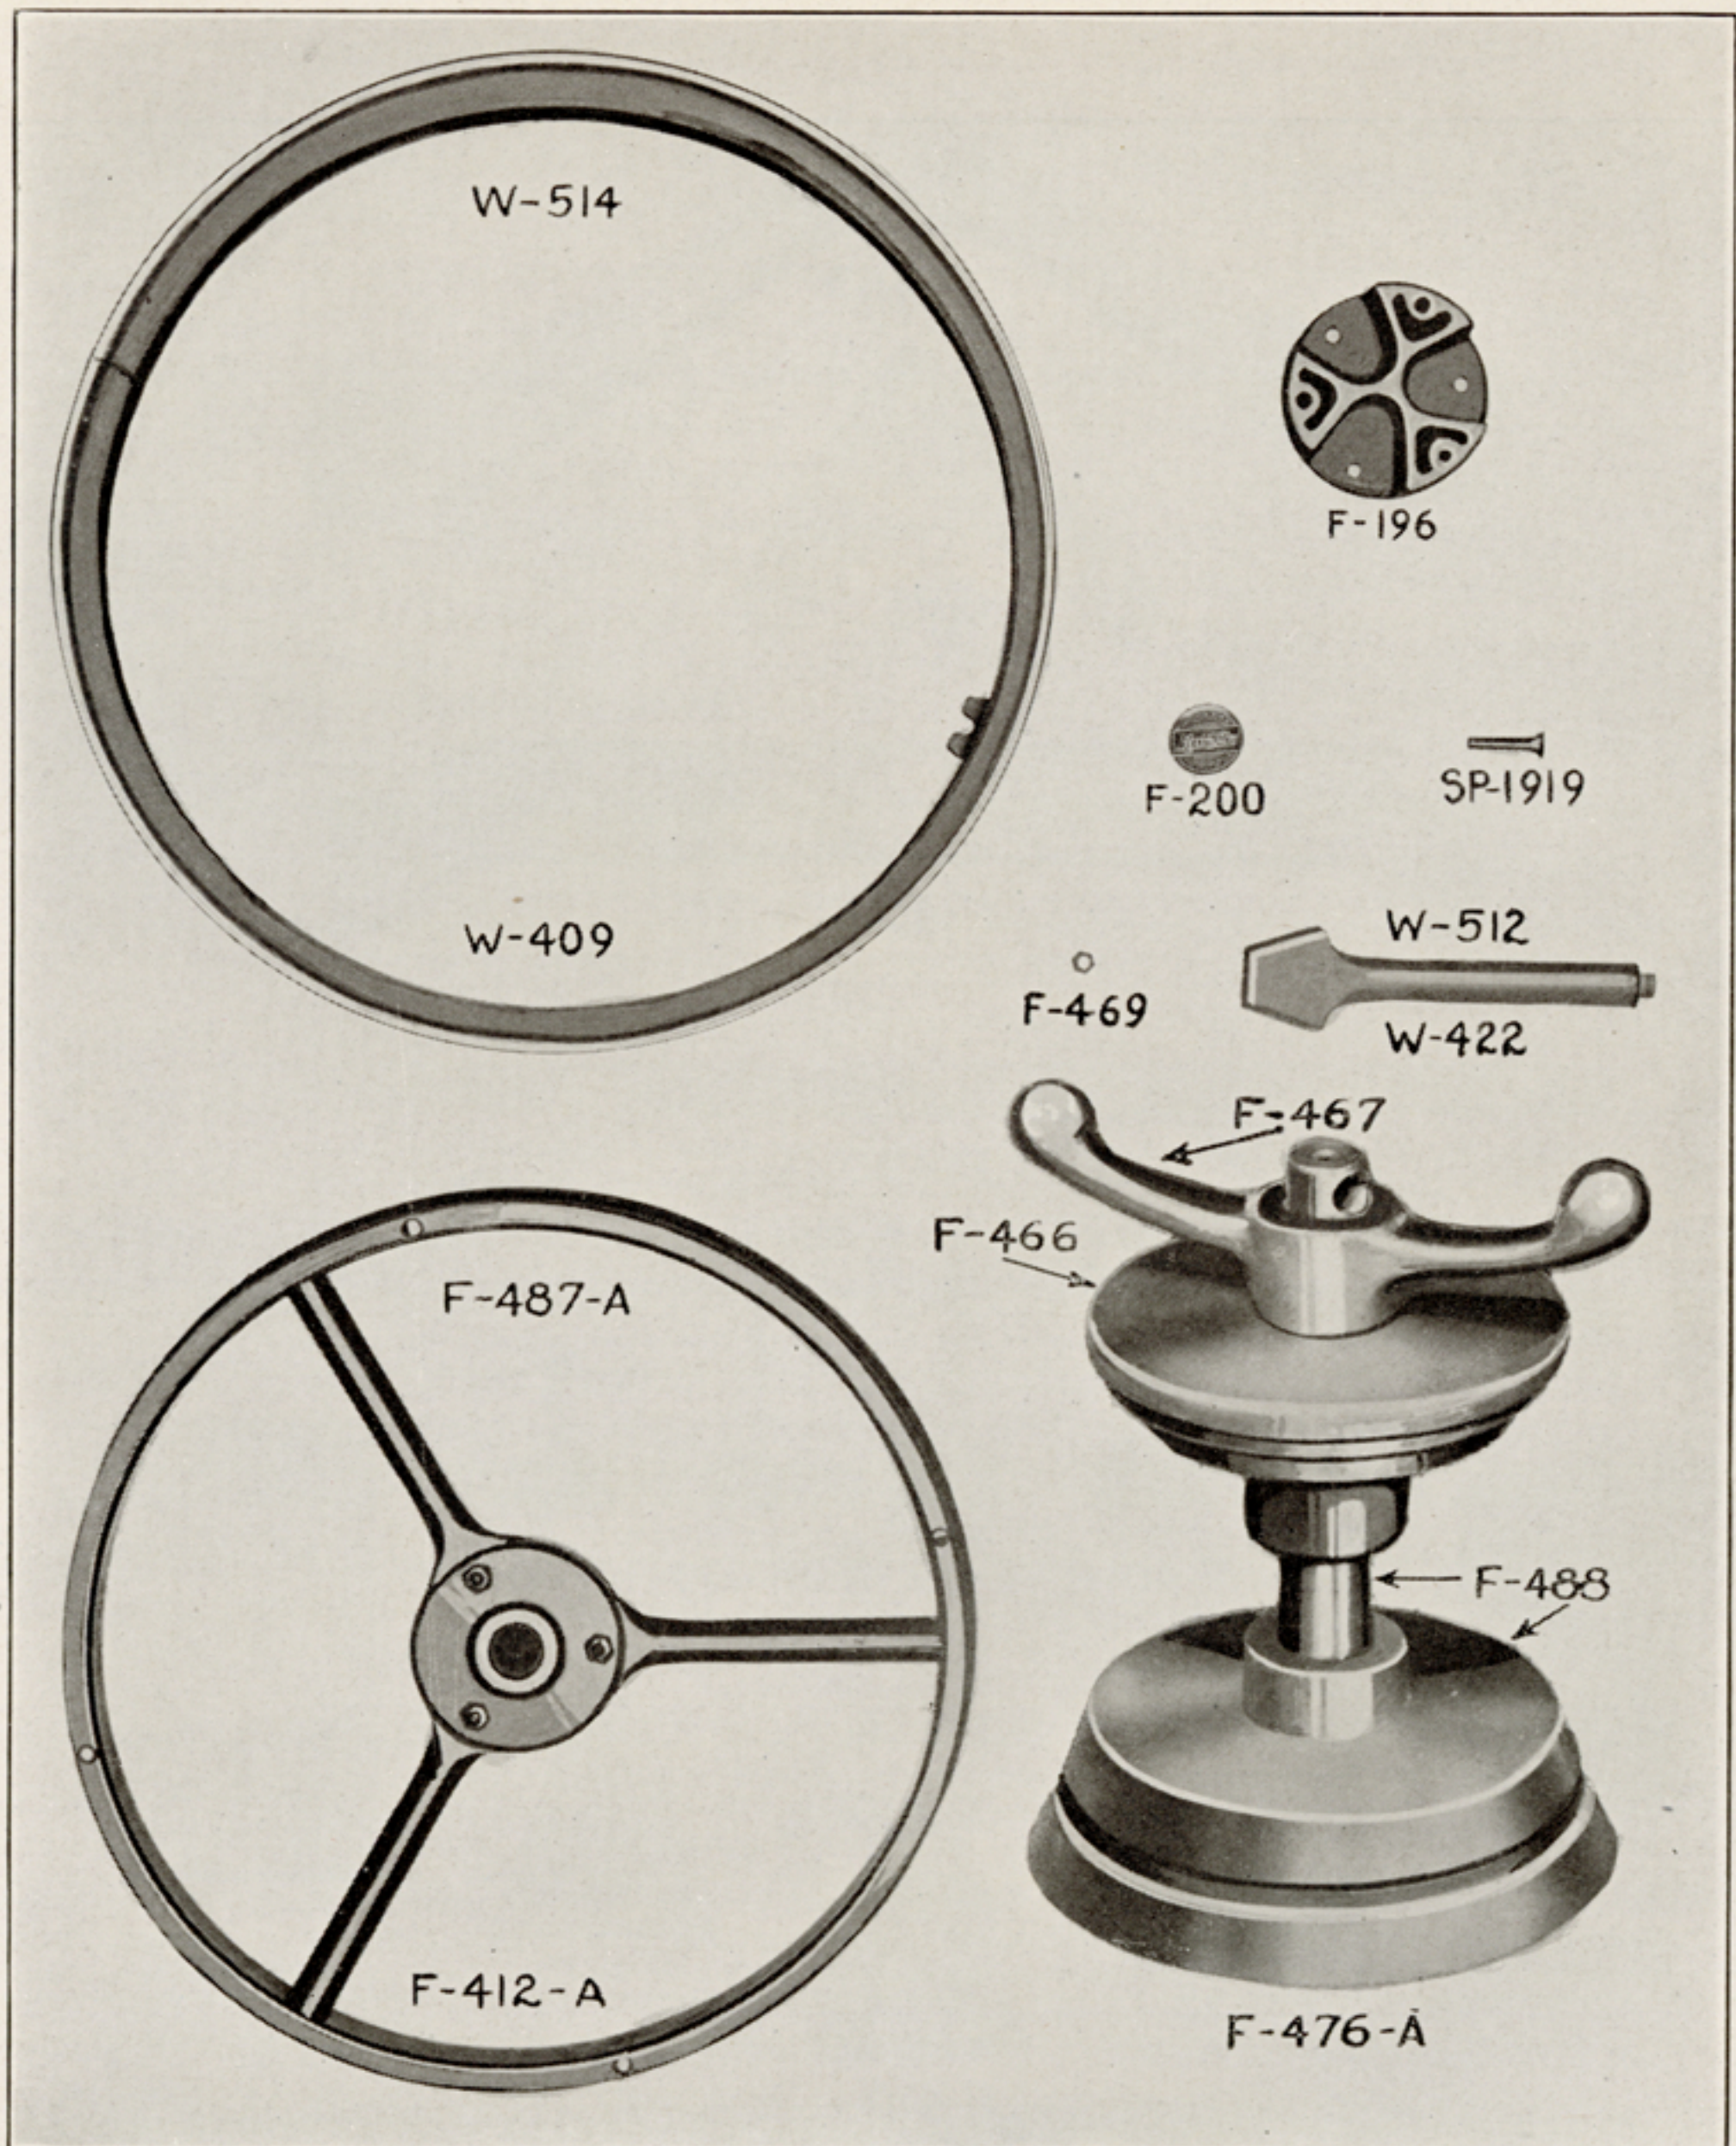


PRICES ON APPLICATION

HOUK WIRE WHEEL CARRIER

Part No.	Name	No. Req.
F-476-A	Wire wheel carrier assembly including.....	1
F-466	Wire wheel carrier clamping sleeve.....	1
F-467	Wire wheel carrier clamping nut (nickel plated).....	1
F-488	Wire wheel carrier collar and stud.....	1
SP-2330	Wire wheel carrier taper pin, No. 3x1 1/2".....	1

LEXINGTON SERIES "T" PARTS LIST

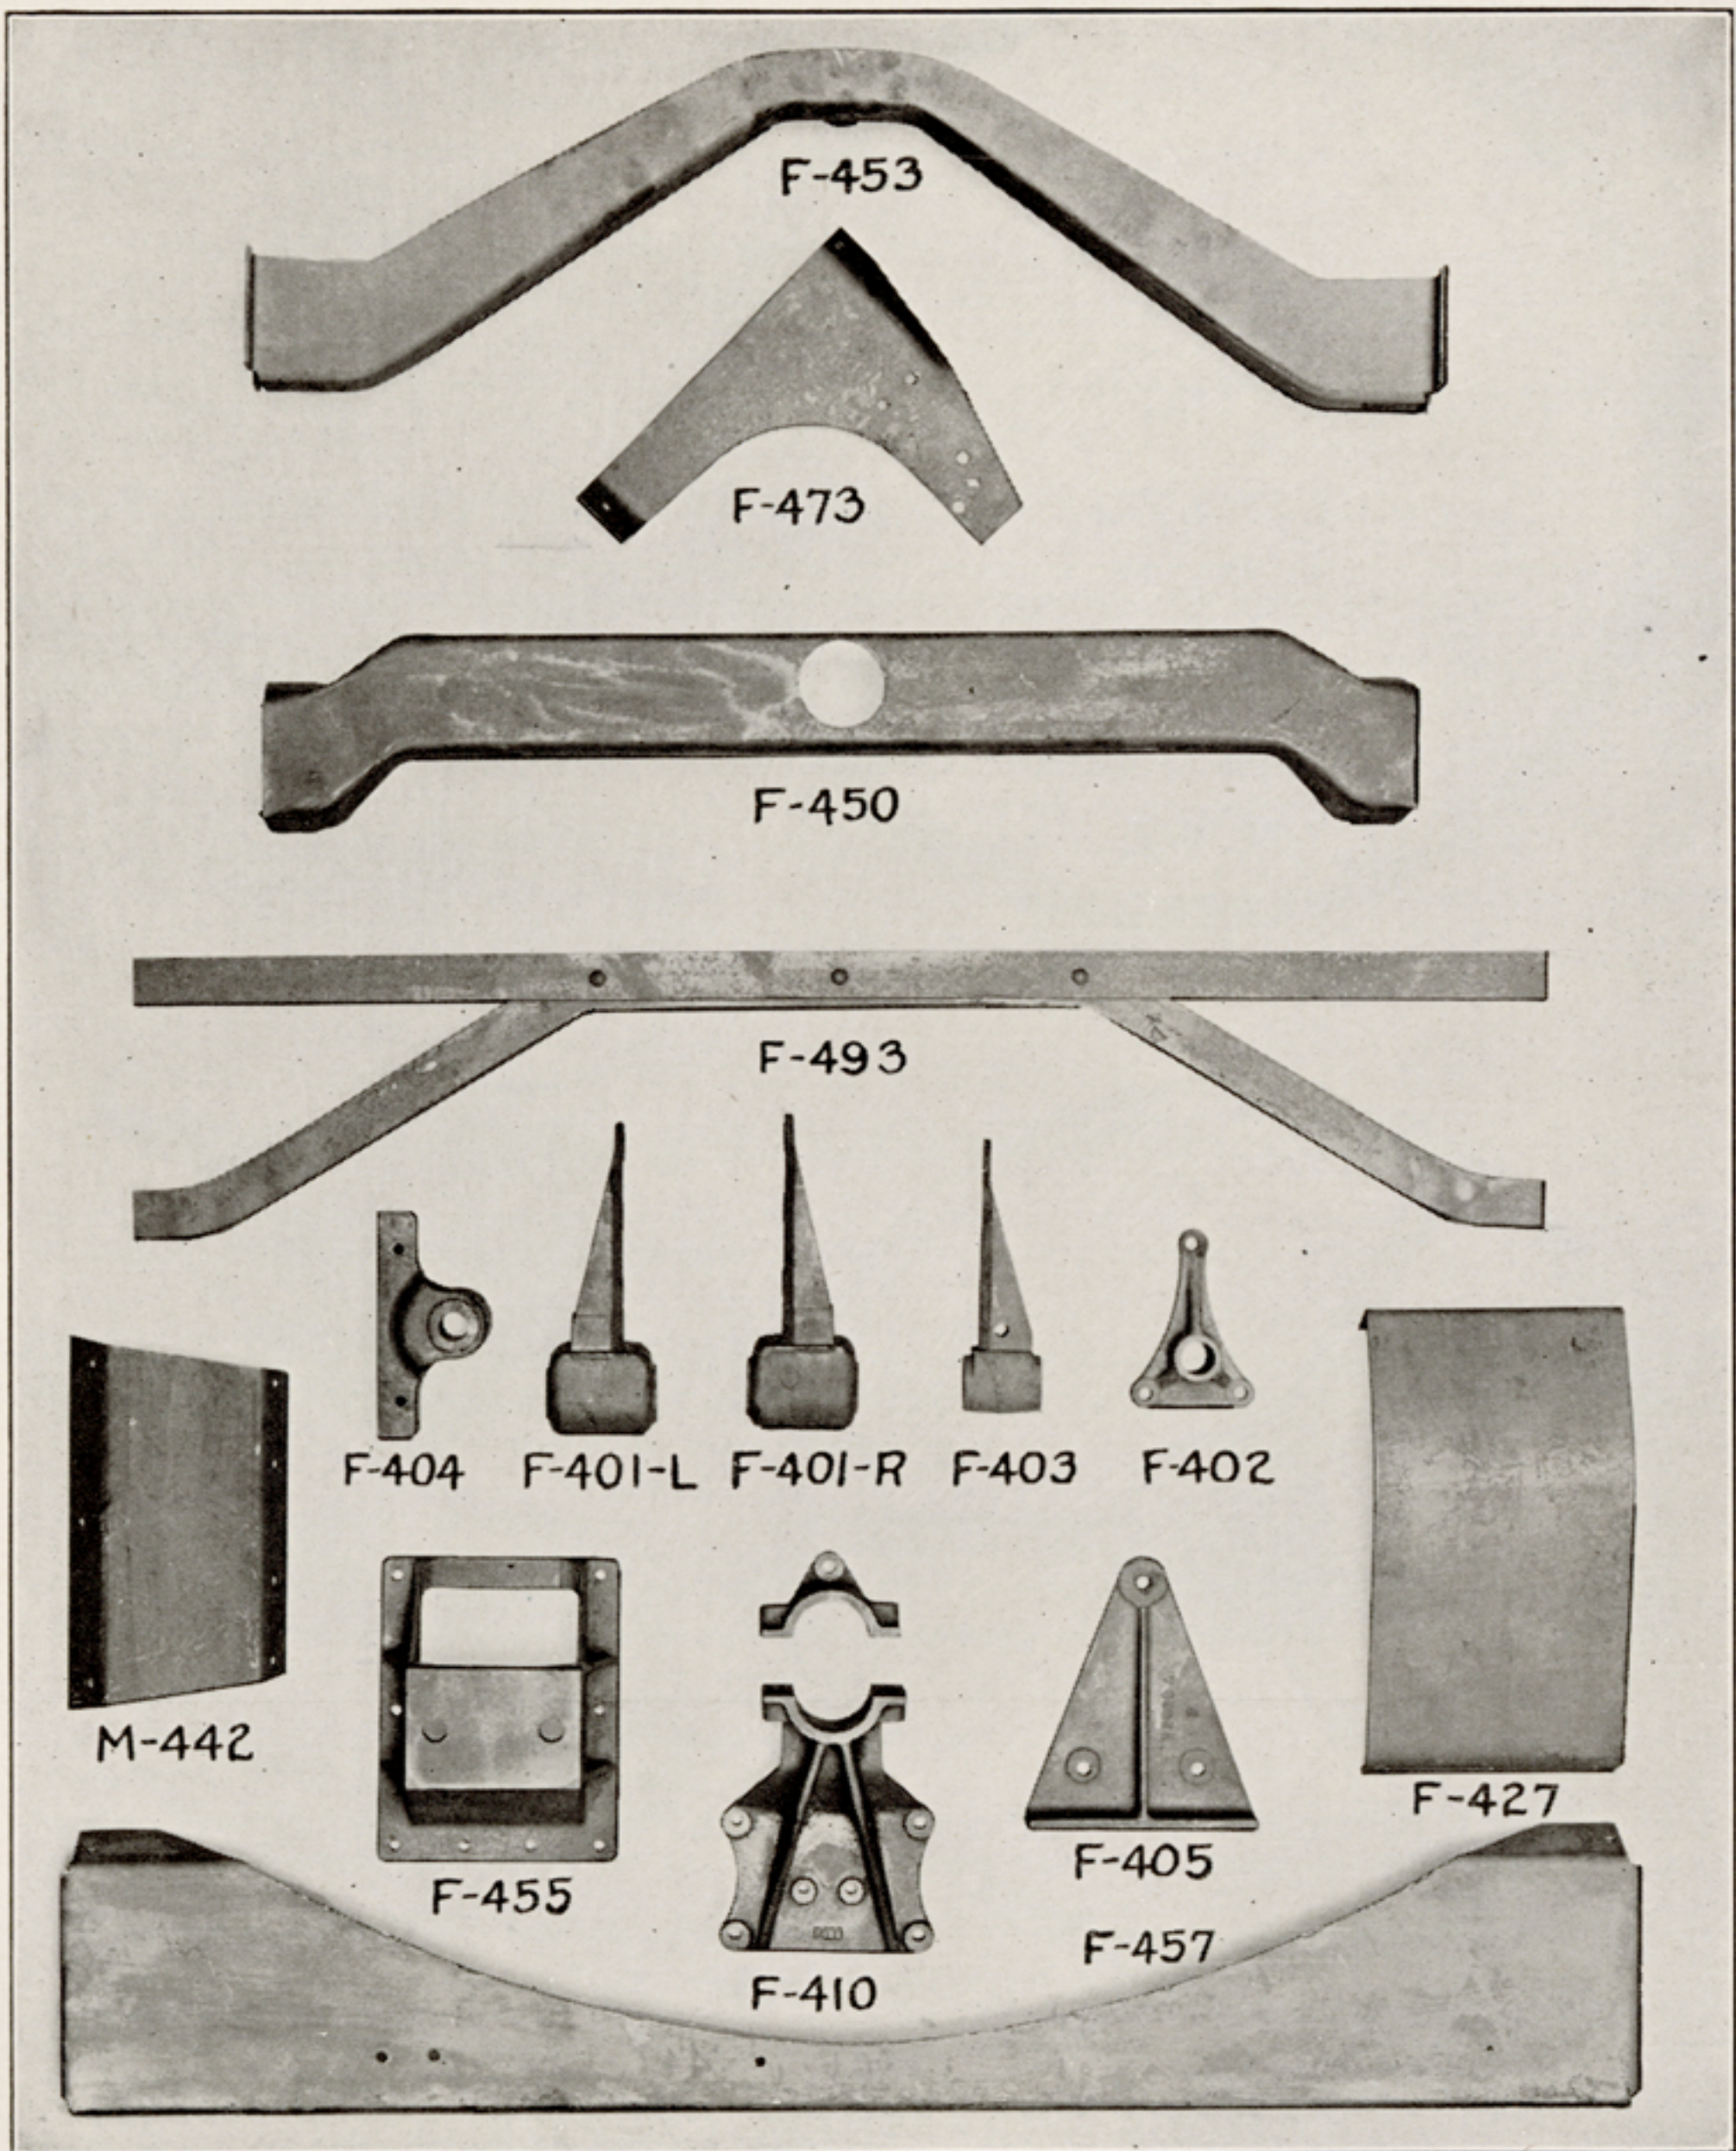

FRAME BRACKETS, CROSS MEMBERS, AND VARIOUS PARTS



LEXINGTON SERIES "T" PARTS LIST


FRAME GROUP

Part No.	Name	No. Req.
F-462-A	Frame assembly complete, including all brackets, etc.....	1
F-401-L	Front spring horn, left.....	1
F-401-R	Front spring horn, right.....	1
F-402	Front spring rear bracket, right or left.....	2
F-403	Rear spring horn, right or left.....	2
F-404	Rear spring bracket, front, right or left.....	2
F-405	Support bracket, front of rear spring.....	2
F-413	Tire carrier bracket.....	1
F-423	Spacer, 1/2" O. D. x 1/16" wall x 1 1/8" long steel tube.....	4
F-478	Reinforcement plate for rear cross member.....	1
F-450	Front cross member.....	1
F-451	Running board brace and battery support.....	1
F-452	Battery support.....	1
F-453	Front engine support.....	1
F-454-L	Left main side rail.....	1
F-454-R	Right main side rail.....	1
F-455-L	Front engine support bracket, rear left.....	1
F-455-R	Front engine support bracket, rear right.....	1
F-456-L	Front engine support bracket, left front.....	1
F-456-R	Front engine support bracket, right front.....	1
F-457	Second cross member.....	1
F-458	Rear cross member.....	1
F-459	Rear engine support, malleable iron. Use in place of F-459 R. & L. after car No. 30500.....	1
F-459-L	Rear engine support, left, stamping.....	2
F-459-R	Rear engine support, right, stamping.....	2
F-460-L	Left running board.....	1
F-460-R	Right running board.....	1
F-461-L	Left running board angle.....	1
F-461-R	Right running board angle.....	1
F-464	Steering gear anchor bracket.....	1
F-473	Brake anchor bracket.....	1
F-482	Running board brace, bottom.....	2
F-493	Center cross brace, upper and lower.....	1
B-445	Brake anchor bracket brace.....	2
SP-400	1/4" S. A. E. hex. nuts.....	45
SP-401	5/16" S. A. E. hex. nuts.....	2
SP-402	3/8" S. A. E. hex. nuts.....	2
SP-901	1/4x3/4" S. A. E. bolts, running board to frame.....	22
SP-903	1/4x1 1/4" S. A. E. bolts for steering gear bracket.....	2
SP-916	5/16x2 1/4" S. A. E. bolts.....	4
SP-937	3/8x2 1/4" S. A. E. bolts, clamp cap to bracket.....	2

N. B. Part No. F-410. shown in cut on Page 52 superseded by part No. F-464. Use latter number when ordering Steering Gear Anchor Bracket.

PRICES ON APPLICATION

LEXINGTON SERIES "T" PARTS LIST

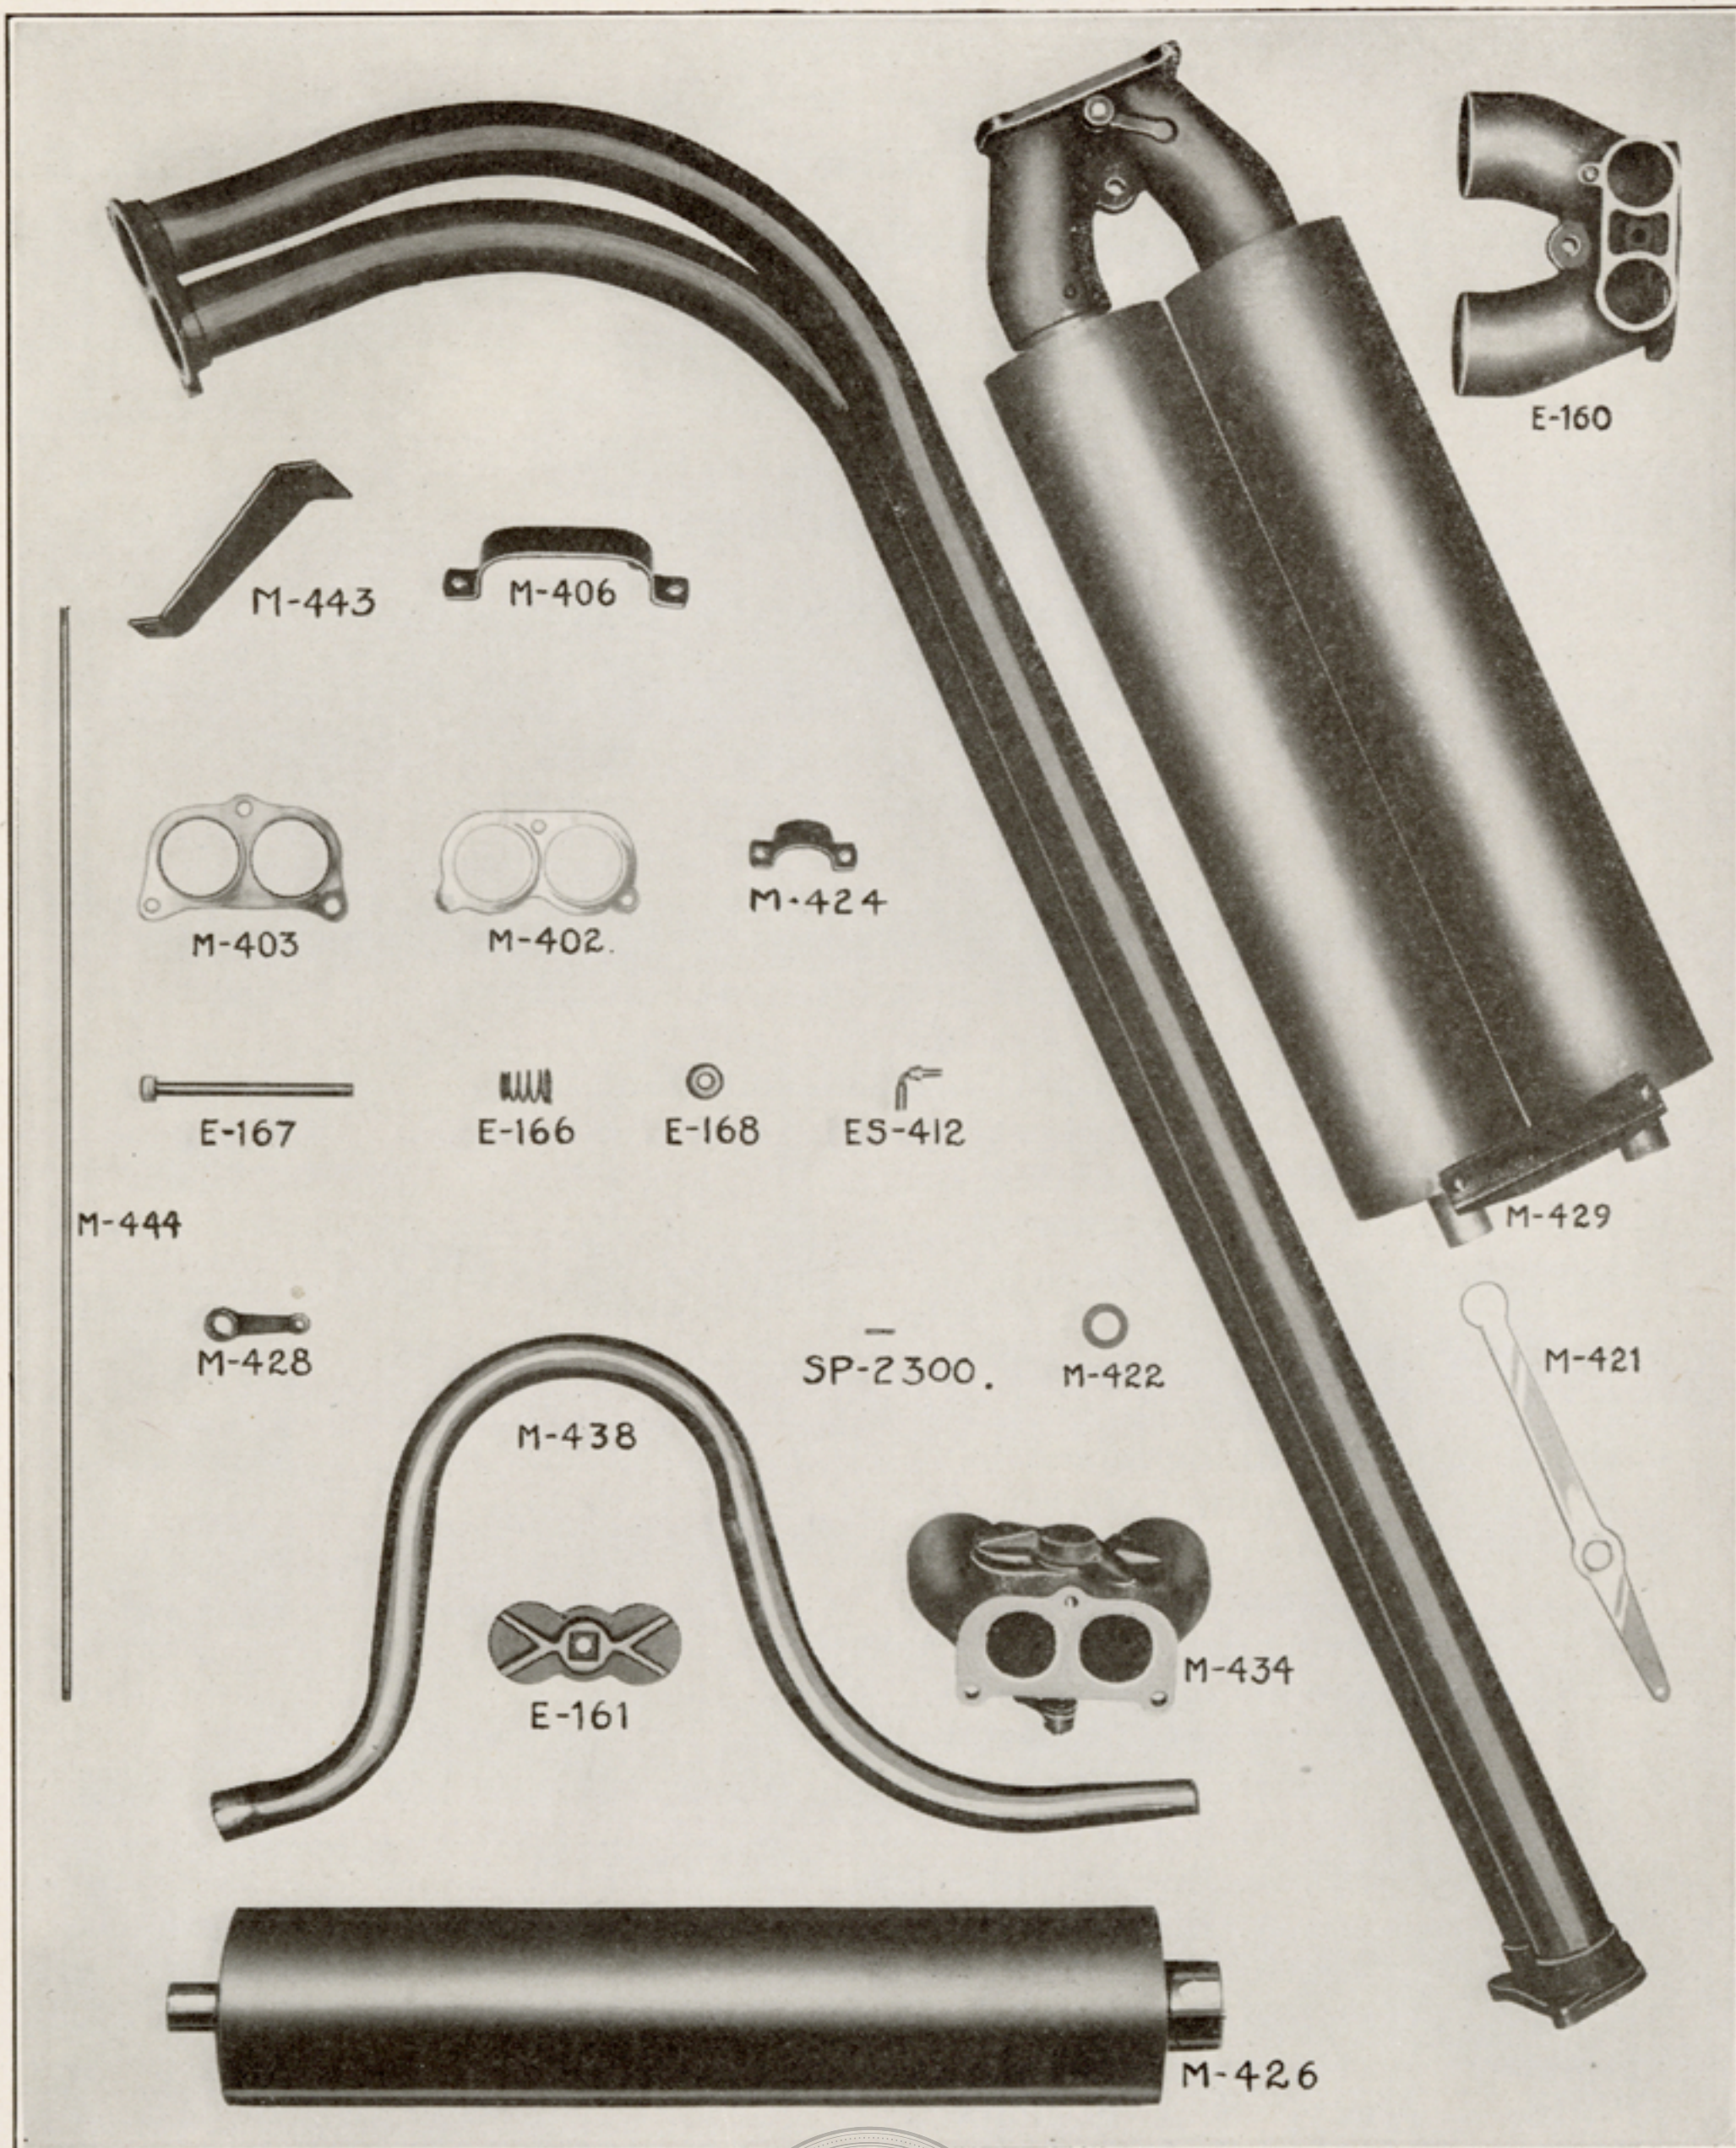

MUFFLER AND EXHAUST TUBE PARTS

LEXINGTON SERIES "T" PARTS LIST

MUFFLER

Part No.	Name	No. Req.
M-441-A	Muffler exhaust tube assembly , consisting of flanges, front and rear, and inner and outer exhaust tubes.....	1
M-429-A	Muffler assembly complete.....	1
M-434-A	Muffler head assembly	1
M-402	Muffler exhaust tube copper asbestos gasket to motor end.....	1
M-403	Muffler exhaust tube copper asbestos gasket muffler end.....	1
M-406	Clip for exhaust tube to frame.....	1
M-421	Muffler cutout lever.....	1
M-422	Muffler cutout lever leather washer.....	1
M-424	Clips for tail pipe.....	2
M-426	Muffler body.....	2
M-428	Muffler cutout valve shaft lever.....	1
M-438	Muffler tail pipes.....	2
M-442	Hanger for tail pipes.....	1
M-443	Rear muffler support, stamping.....	1
M-445	Muffler cutout rod adjusting sleeve.....	1
M-446	Muffler cut out rod, 1/4x14 1/2".....	2
E-160	Muffler head, only.....	1
E-161	Muffler cutout valve.....	1
E-165	Muffler tie angle.....	1
E-166	Muffler cutout valve spring.....	1
E-167	Muffler cutout valve shaft.....	1
E-168	Muffler cutout valve spring washer.....	1
SP-2301	Muffler cutout valve shaft taper pin.....	1
SP-3400	Ball joints, Memco No. 13.....	2
CS-412	1/4" ball joints.....	2

PRICES ON APPLICATION


ORDER PARTS FROM YOUR DEALER

WHERE POSSIBLE


OUR DEALERS ARE REQUIRED

TO CARRY

LARGE STOCKS OF PARTS

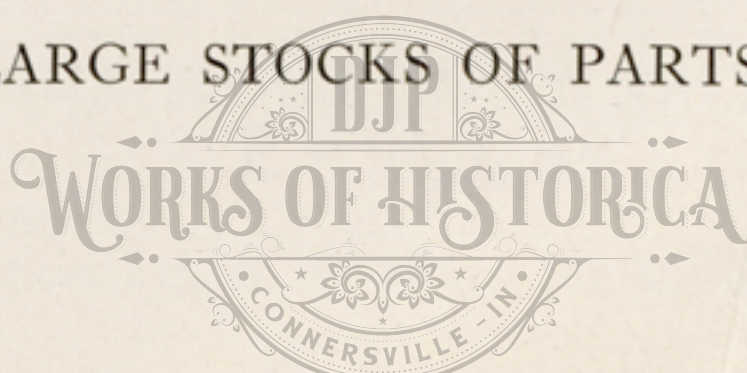

LEXINGTON SERIES "T" PARTS LIST

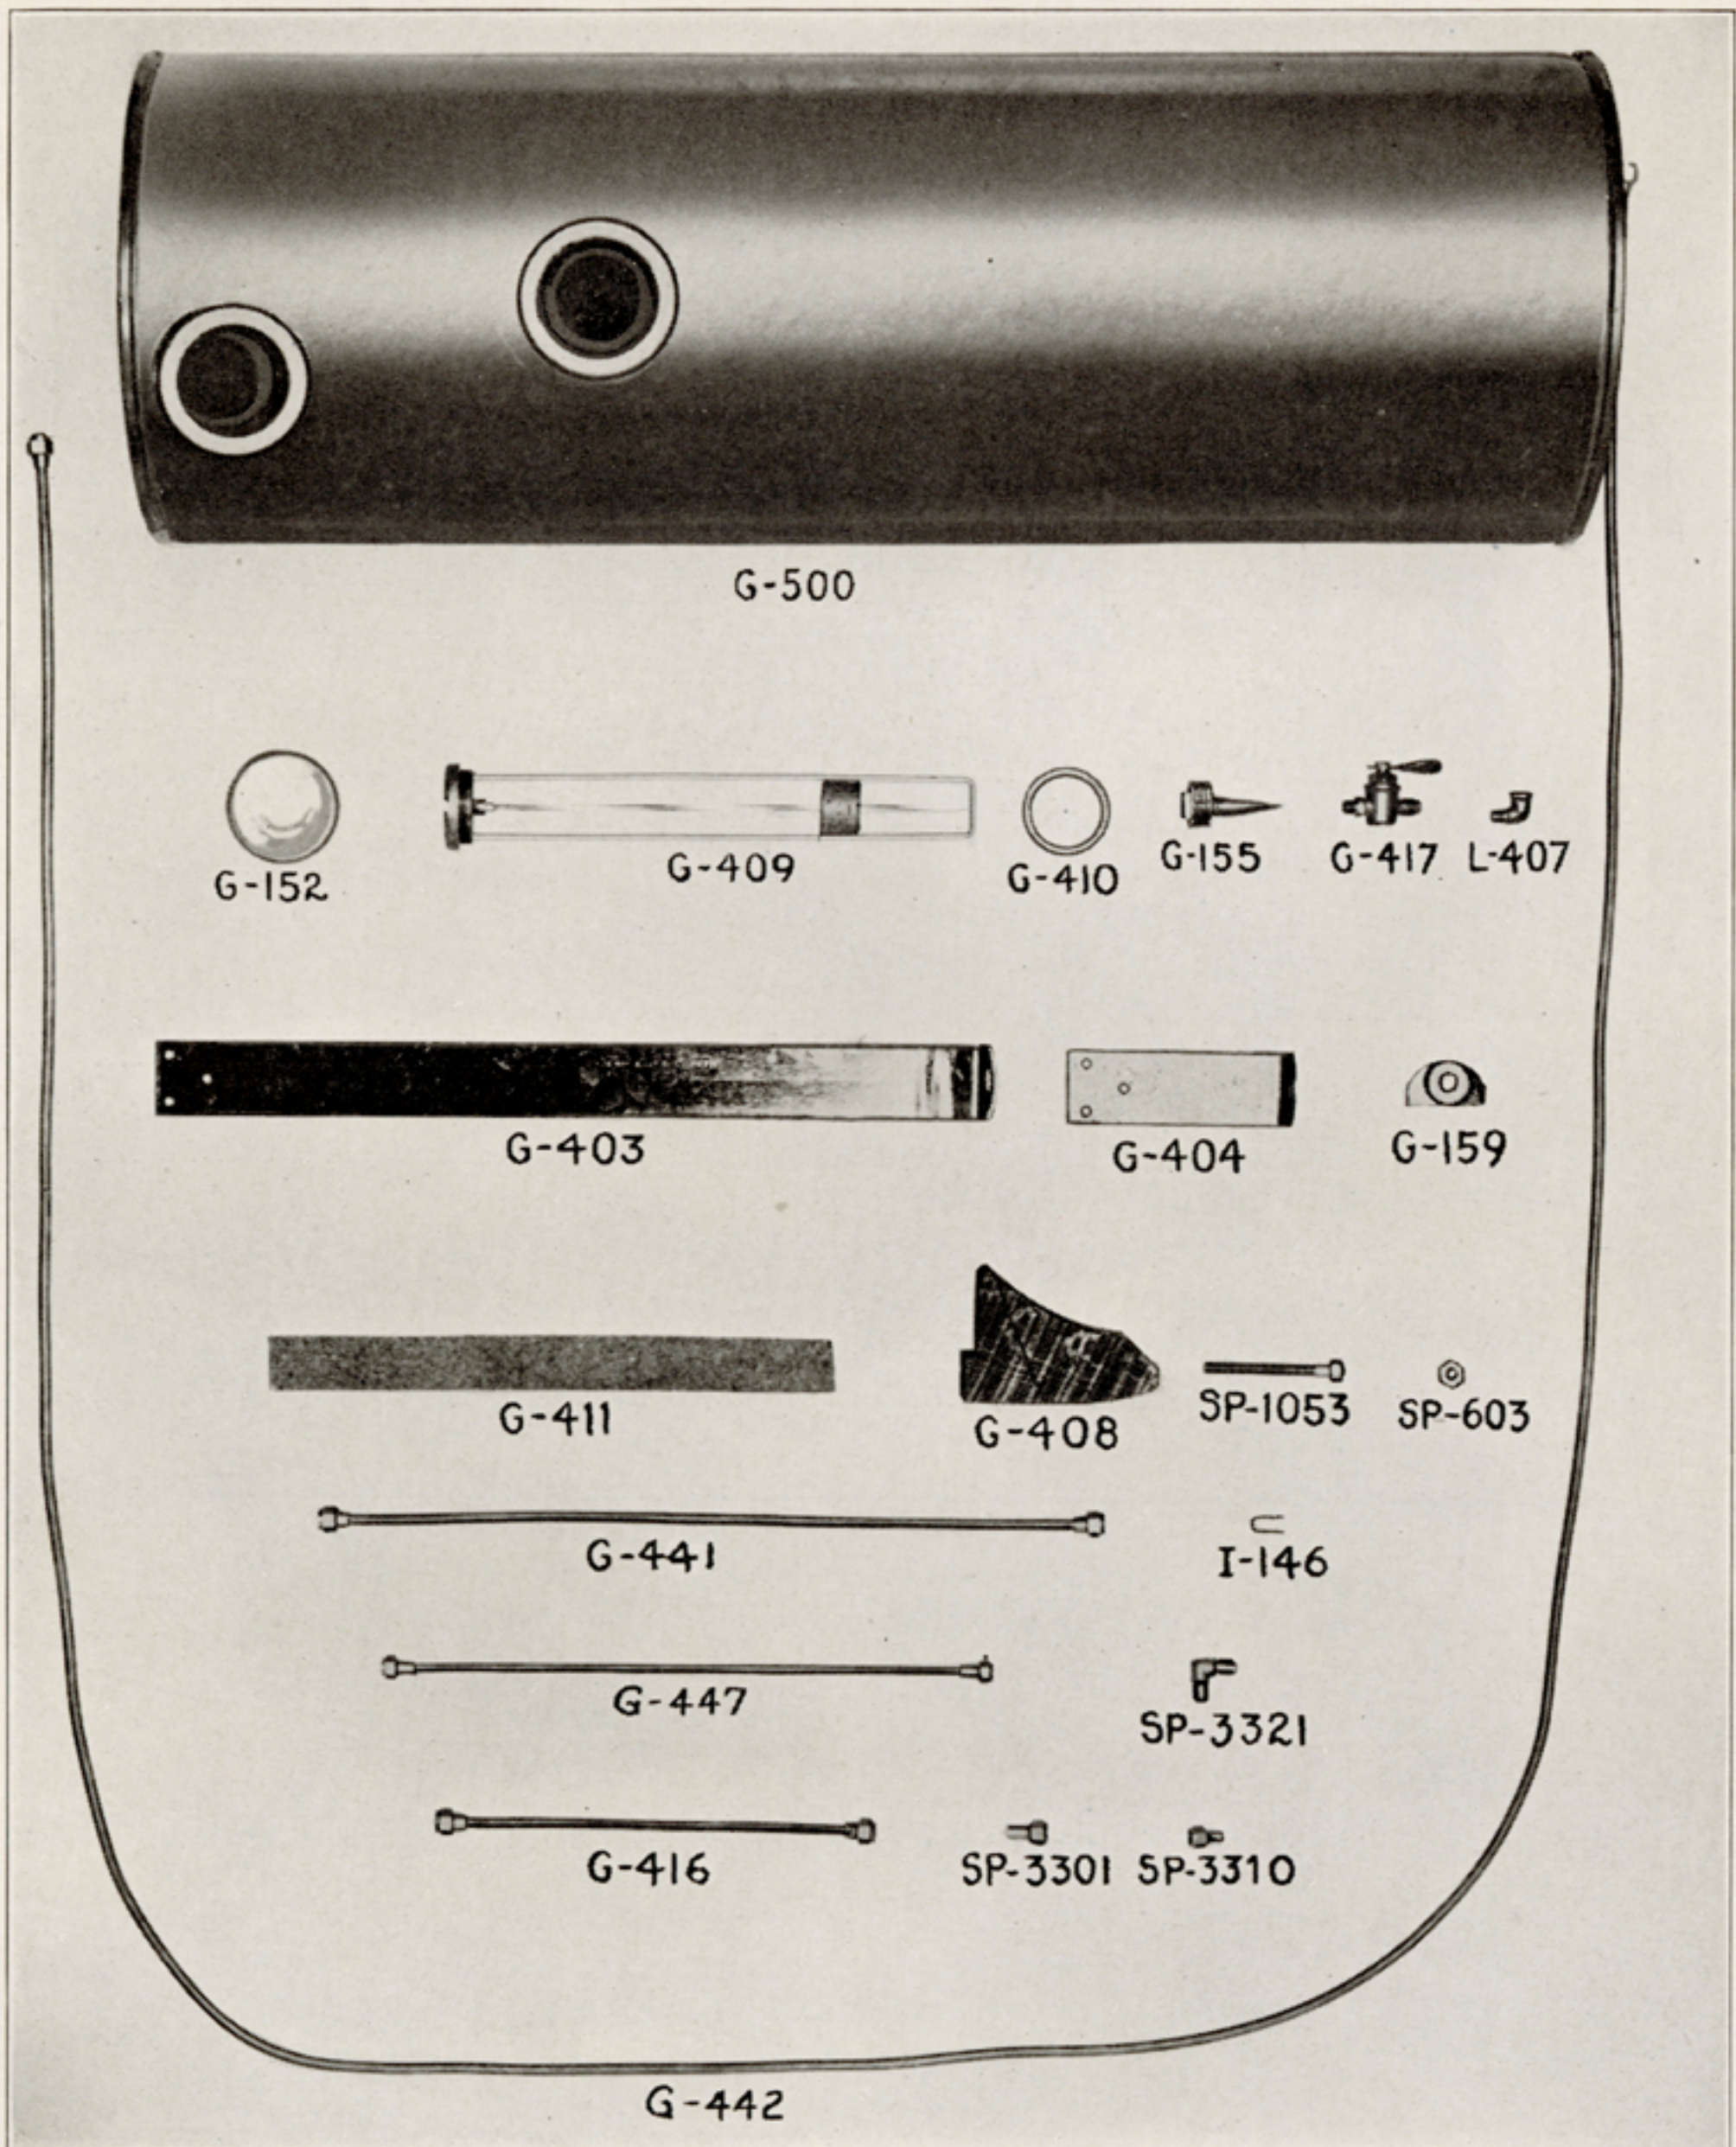

GASOLINE TANK, LINES, AND PARTS

WORKS OF HISTORICA
CONNERSVILLE - IN

LEXINGTON SERIES "T" PARTS LIST


GASOLINE SYSTEM

Part No.	Name	No. Req.
G-400	Gasoline tank.....	1
G-152	Gas tank filler cap.....	1
G-155	Gasoline strainer assembly.....	1
G-158	Gas tank drain plug.....	1
G-159	Gas tank filler blocks, (cast iron).....	4
G-403	Gas tank rear straps.....	2
G-404	Gas tank front straps.....	2
G-408	Gas tank filler blocks, (hard wood).....	2
G-409	Gasoline gauge.....	1
G-410	Gasoline gauge gasket, (copper asbestos).....	1
G-411	Gas tank felt antisqueak— $\frac{1}{4}$ " thick x $11\frac{1}{2}$ " wide x $15\frac{1}{2}$ " long	6
G-412	Stewart vacuum tank.....	1
G-441	Gasoline line $\frac{5}{16}$ " O.D., copper tube, vacuum tank to carburetor—35" long.....	1
G-416	Gasoline line, $\frac{5}{16}$ " O.D. copper tube, bottom of gasoline tank to ell on frame.....	1
G-417	Kantleak shut-off cock— $\frac{1}{8}$ " I. P. Bottom of vacuum tank.....	1
G-417	Kantleak shut-off cock— $\frac{1}{8}$ " I. P. Bottom of gasoline tank.....	1
G-440	Studs for holding carburetor to manifold.....	2
G-442	Gasoline line, $\frac{5}{16}$ " O. D. copper tube, ell at rear of frame to ell for vacuum tank connections—102" long.....	1
G-443	Rayfield carburetor.....	1
G-444	Carburetor gasket.....	1
G-445	Carburetor stud nuts.....	2
G-446	Gas line clips— vacuum tank to carburetor.....	1
G-447	Gasoline line, $\frac{5}{16}$ " O. D. copper tube, vacuum tank to elbow—32" long.....	1
I-146	Gas line clips.....	8
L-407	Gas tank st. ell— $\frac{1}{8}$ " I. P., bottom of tank.....	1
E-698	Pc. $\frac{1}{4}$ " O. D. copper tube from tee on engine to dash— $22\frac{7}{8}$ " long.....	1
E-699	Pc. $\frac{1}{4}$ " O. D. copper tube from intake manifold to vacuum tank—27" long.....	1
SP-400	Gas line clip bolt nut— $\frac{1}{4}$ "-28 S. A. E. hex.....	1
SP-603	Gas tank cast iron filler block to frame hex. nut.....	2
SP-901	Gas line clip bolts—S. A. E. $\frac{1}{4}$ x $\frac{3}{4}$ " S. A. E.....	1
SP-1053	Gas tank cast iron filler block to frame case screws.....	2
SP-3300	No. 41F union nuts for $\frac{1}{4}$ " O. D. copper tube.....	2
SP-3301	No. 41F Imperial S. A. E union nuts for $\frac{5}{16}$ " O. D. copper tube.....	8
SP-3310	S. A. E flared union for $\frac{1}{4}$ " O. D. copper tube.....	1
SP-3320	No. 49F Imperial S. A. E elbow $\frac{1}{8}$ " I. P. thread for $\frac{5}{16}$ " O. D. copper tube top of vacuum tank.....	1
SP-3321	No. 55F Imperial S. A. E. elbow for $\frac{5}{16}$ " O. D. copper tube, both ends.....	2
SP-3322	No. 49F Imperial S. A. E. elbow for $\frac{1}{4}$ " O. D. copper tube.....	2

PRICES ON APPLICATION

LEXINGTON SERIES "T" PARTS LIST

INSTRUMENTS AND INSTRUMENT BOARDS

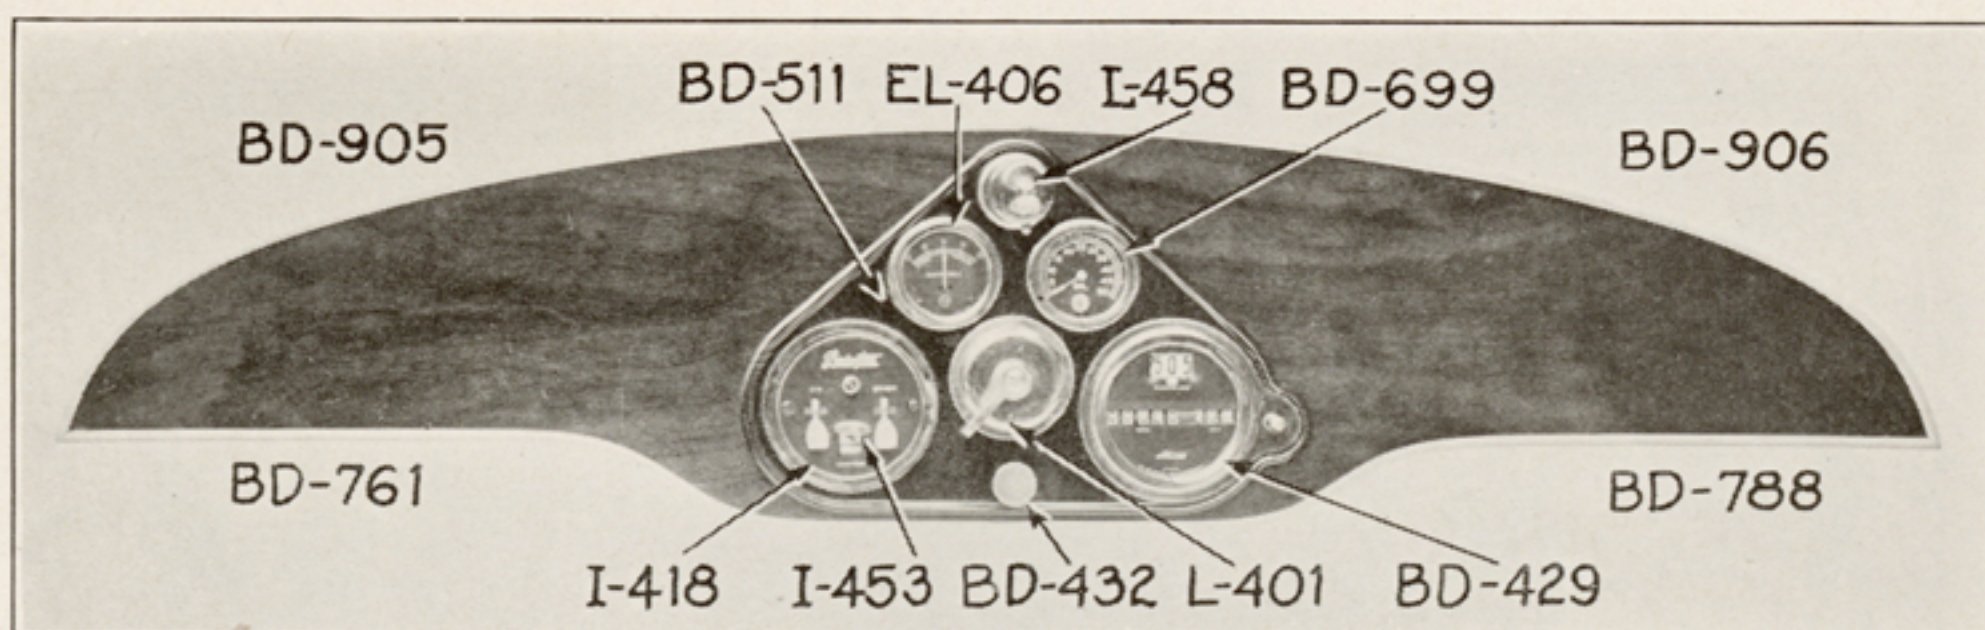

PRICES ON APPLICATION

Part No.	Name	No. Req.
BD-761	Instrument board, Touring Car, 30,001 to 30,500.....	1
BD-788	Instrument board, Touring Car, 30,501 and up	1
BD-905	Instrument board, Sedanette.....	1
BD-906	Instrument board, Salon Sedan.....	1
BD-428	Oil pressure gauge, line sleeve connection.....	1
BD-429	Speedometer head.....	1
BD-432	Carburetor choke assembly.....	1
BD-511	Instrument mounting plate, black enameled.....	1
BD-517	Instrument board bracket.....	1
BD-699	Oil pressure gauge.....	1
BD-760	Oil line assembly. Pc. 1/4" O. D. copper tube 14" long.....	1
BD-787	Sparton horn Model P. V.	1
BD-815	Nickel-plated flat washer for choker wire 5/8" I. D. x 7/8" O. D.	1
EL-406	Ammeter.....	1
EL-491	Ammeter glass with ring.....	1
EL-407	Ammeter mounting bracket.....	1
EL-430	Ammeter mounting bracket bushing fibre.....	2
I-469	Ignition switch key (give serial number of car).....	1
L-458	Dash lamp assembly (including bulb).....	1
L-477	Dash lamp rubber interior.....	1
L-478	Dash lamp shade only.....	1
L-129	Dash lamp bulb 6 volt 4 C. P. double contact.....	1
L-479	Dash lamp switch lever only	1
L-401	2-Way Head Lamp control vacuum valve assembly.....	1
I-418	Ignition and lighting switch.....	1
BD-907	Oil pressure gauge glass.....	1
BD-772	Cowl ventilator cover.....	1
BD-908	Cowl ventilator, dash control handle.....	1
BD-909	Cowl ventilator dash control handle set screw.....	1
BD-910	Cowl ventilator dash control rod.....	1


NOTE:—See *Wiring group* for instrument wiring, Page 28.

TIRE PUMP

T-489	Tire pump complete.....	1
T-490	Hose, 15 feet long.....	1
T-608	Tire pump gasket, Vellumoid.....	1
SP-1920	Fillister head cap screw, tire pump to transmission case.....	4

LEXINGTON SERIES "T" PARTS LIST

2-WAY HEAD LAMPS AND FITTINGS

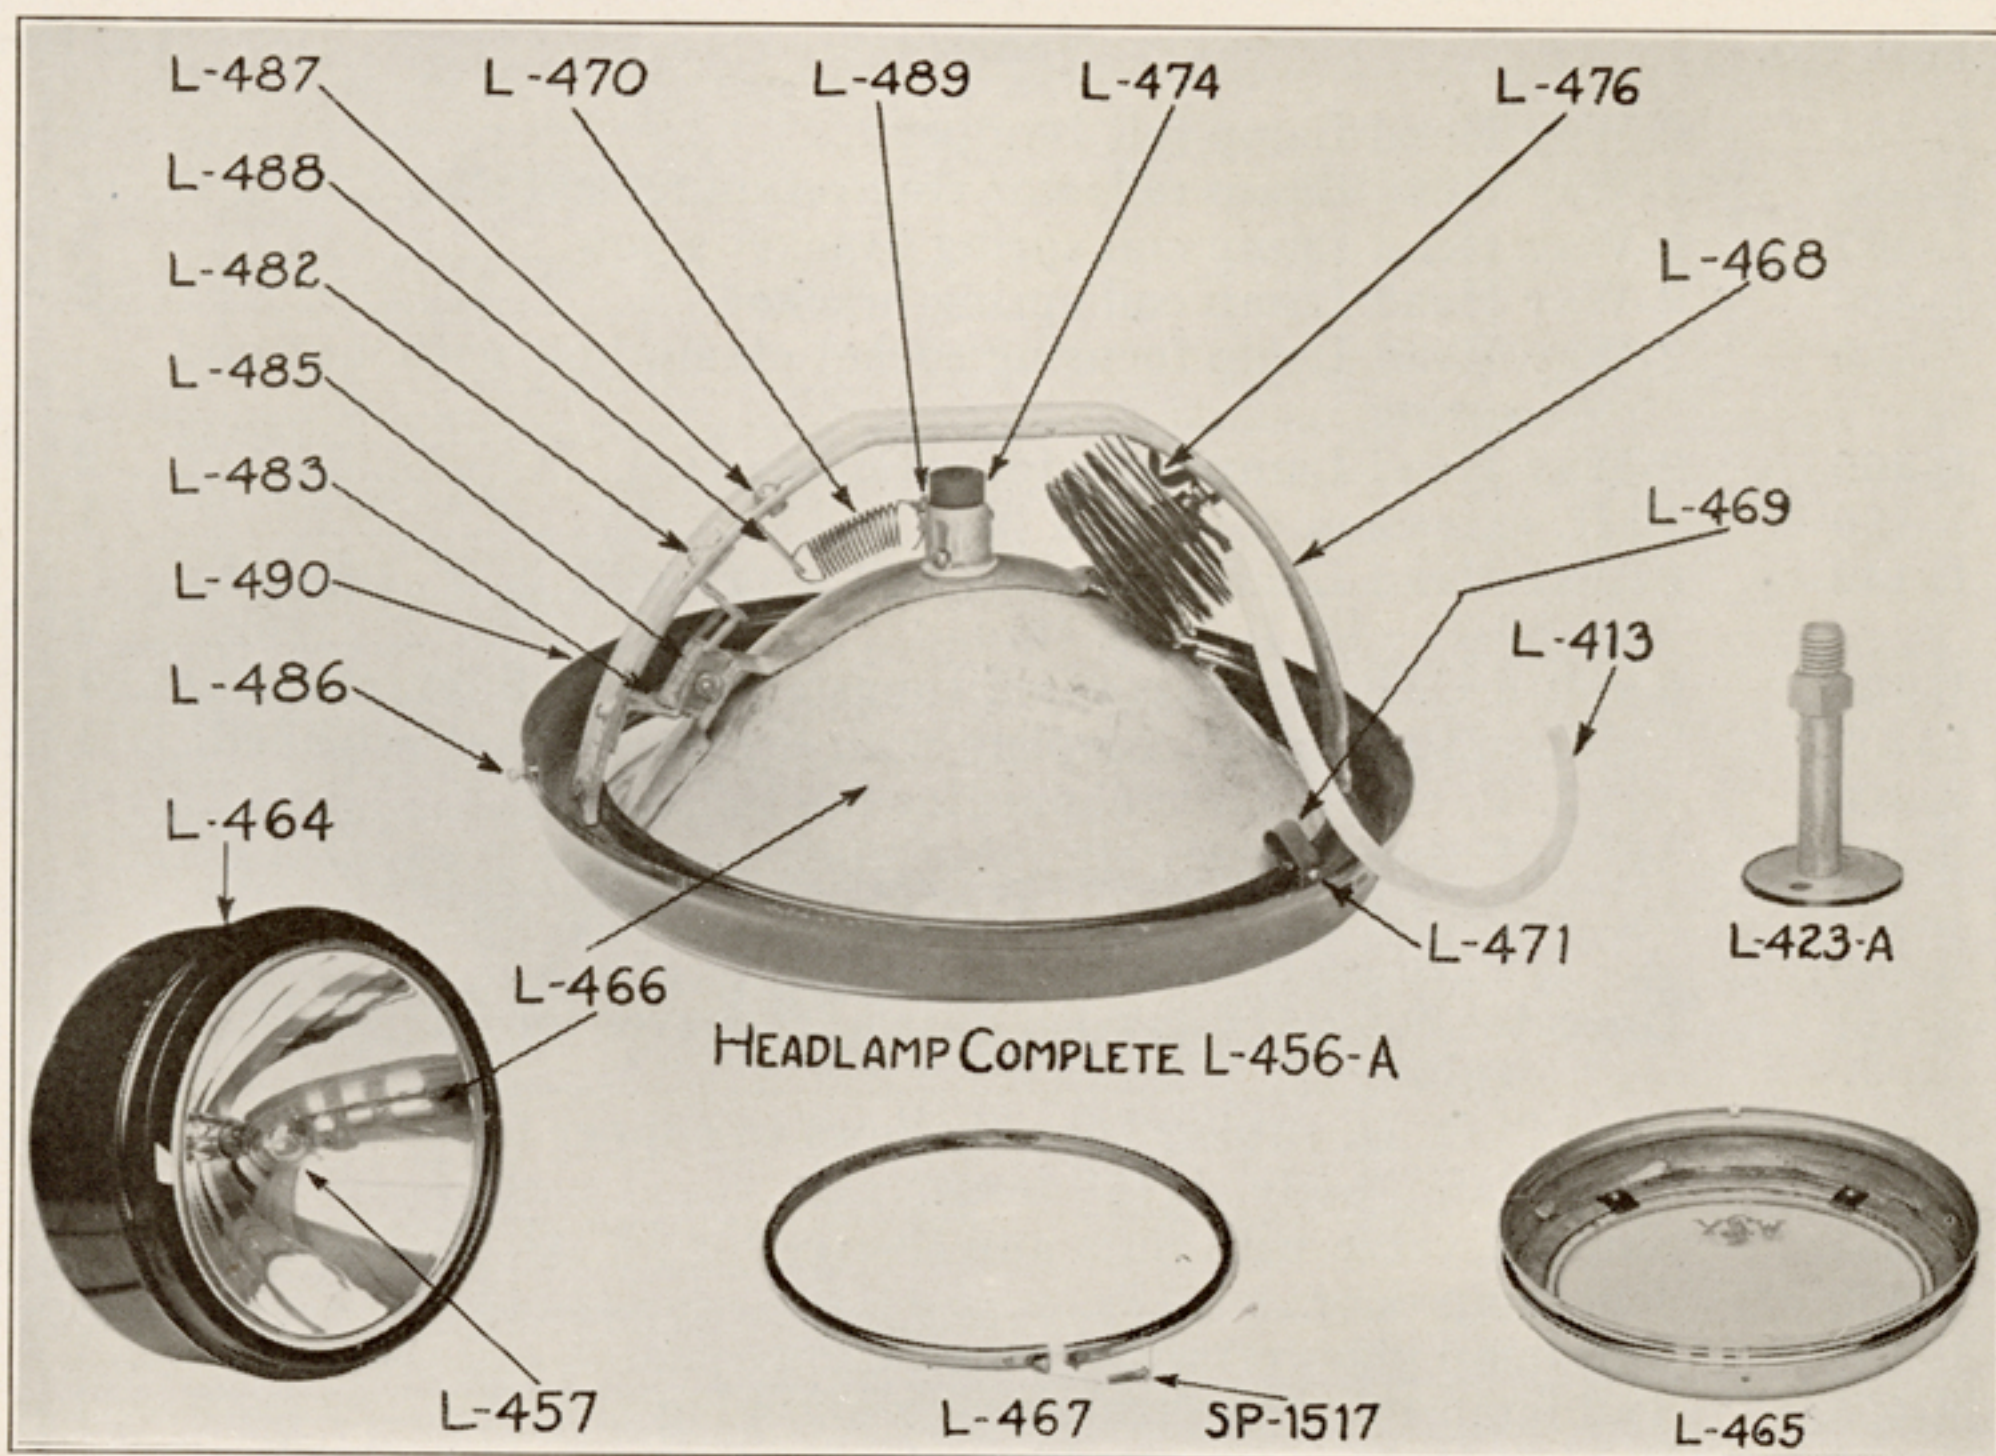

Part No.	Name	No. Req.
L-456-A	2-Way Head Lamp assembly complete and including the following:	2
L-129	Dash lamp 6 volt 4 C. P. double contact bulb, tungsten	1
L-423-A	2-Way Head Lamp clamping bolt assembly, consisting of clamping bolt and head	2
L-457	2-Way Head Lamp bulb, 6-8 volt, 21 C. P., single contact	2
L-464	2-Way Head Lamp body	2
L-465	2-Way Head Lamp door	2
L-466	2-Way Head Lamp reflector	2
L-467	2-Way Head Lamp door ring	2
L-468	2-Way Head Lamp ring arch	2
L-469	2-Way Head Lamp reflector retaining spring clip	4
L-470	2-Way Head Lamp reflector coil spring	2
L-471	2-Way Head Lamp reflector spring clip retainer screw	4
L-472	2-Way Head Lamp lens	2
L-474	2-Way Head Lamp focusing socket	2
L-475	2-Way Head Lamp glass felt, $\frac{3}{16}$ "x $\frac{1}{4}$ "x34"	2
L-476	2-Way Head Lamp bellows	2
L-480	2-Way Head Lamp lens retaining clip	3
L-482	2-Way Head Lamp bumper stop bracket screw	4
L-483	2-Way Head Lamp bumper stop bracket	4
L-484	2-Way Head Lamp bumper retaining screw and nut	2

(Continued on Page 60)

PRICES ON APPLICATION

LEXINGTON SERIES "T" PARTS LIST

LAMPS (Continued)

Part No.	Name	No. Req.
L-485	2-Way Head Lamp felt bumper.....	2
L-486	2-Way Head Lamp reflector ring retaining screw.....	2
L-487	2-Way Head Lamp coil spring bracket screw.....	2
L-488	2-Way Head Lamp coil spring bracket.....	2
L-489	2-Way Head Lamp focusing socket clamp bolt with nut and spring.....	2
L-490	2-Way Head Lamp reflector retaining ring.....	2
L-130	10 ft. extension cord with plug and socket.....	1
L-142	2-Way Head Lamp clamping bolt acorn nut, N. P. tapped $\frac{1}{2}$ "—13 U. S. S. thread.....	2
L-146	6 volt 2 C. P. single contact tungsten bulb (tail lamp).....	1
L-403	Tail lamp assembly complete with license bracket attached.....	1
L-406	$\frac{1}{8}$ " I. P. check valve connector for $\frac{1}{8}$ " tube.....	1
L-407	$\frac{1}{8}$ " I. P. brass street ell.....	1
L-408	$\frac{1}{8}$ " brass tee.....	1
L-409	$\frac{5}{16}$ " I. P. brass close nipple.....	1
L-411	Brass tee connections with nuts and sleeves for $\frac{1}{8}$ " O. D. tubing.....	1
L-413	Pc. $\frac{1}{8}$ " O. D. rubber tube (bellows to copper tube) inside lamp body, $11\frac{1}{4}$ " long.....	2
L-435	Shut-off valve with nuts and sleeves for $\frac{1}{8}$ " O. D. tube.....	1
L-453	Tail lamp door.....	1
L-454	Tail lamp glass retaining ring.....	1
L-455	Tail lamp thimble with plunger and plug.....	1
L-459	Pc. $\frac{1}{8}$ " O. D. copper tube control valve to vacuum tank, 35" long.....	1
L-460	Pc. $\frac{1}{8}$ " O. D. copper tube right head lamp to tee connector 39" long with radiator.....	1
L-461	Pc. $\frac{1}{8}$ " O. D. copper tubing left lamp to tee connection 19" long, furnished with radiator.....	1
L-462	Pc. $\frac{1}{8}$ " O. D. copper tube from tee on radiator to shut-off cock, 46" long.....	1
L-463	Pc. $\frac{1}{8}$ " O. D. copper wire tube from shut-off cock to lamp control valve 45" long.....	1
L-491	Tail lamp glass.....	1
EL-152	Bracket for tail light.....	1
EL-480	Underhood type lamp with 17 C. P. D. C. bulb.....	1
EL-483	Tonneau lamp for heel board with 17 C. P. D. C. bulb.....	1
EL-486	Push and pull switch for heel lamp (Touring).....	1
SP-404	No. 5 insulated wire staples.....	5
SP-650	$\frac{5}{16}$ "-18 U. S. S. hex. check nut.....	1
SP-701	No. 6-32 hex. machine nuts.....	3
SP-703	No. 8-32 hex. machine nuts.....	2
SP-710	No. 4-36 hex. machine nuts.....	2
SP-1414	$\frac{5}{16}$ "x $\frac{3}{4}$ " cup point set screw for attaching lamp to bracket.....	1
SP-1505	No. 6-32x $\frac{1}{2}$ " flat hd. machine screws, screws for attaching lamps to heel board.....	3
SP-1517	2-Way Head Lamp door ring clamp screw.....	2

NOTE:—When ordering 2-Way Head Lamp shells or doors specify whether black enamel or nickel-plated finish is wanted.

LEXINGTON SERIES "T" PARTS LIST

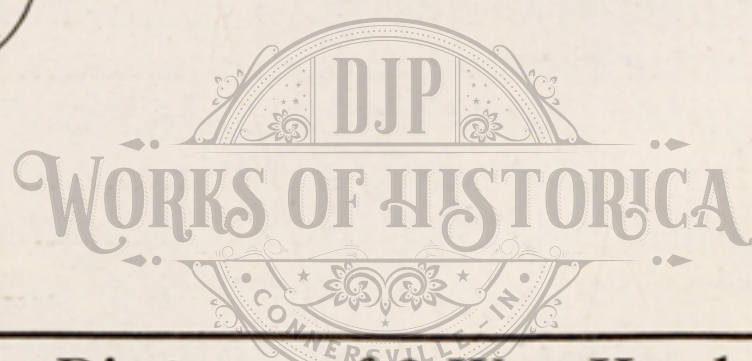
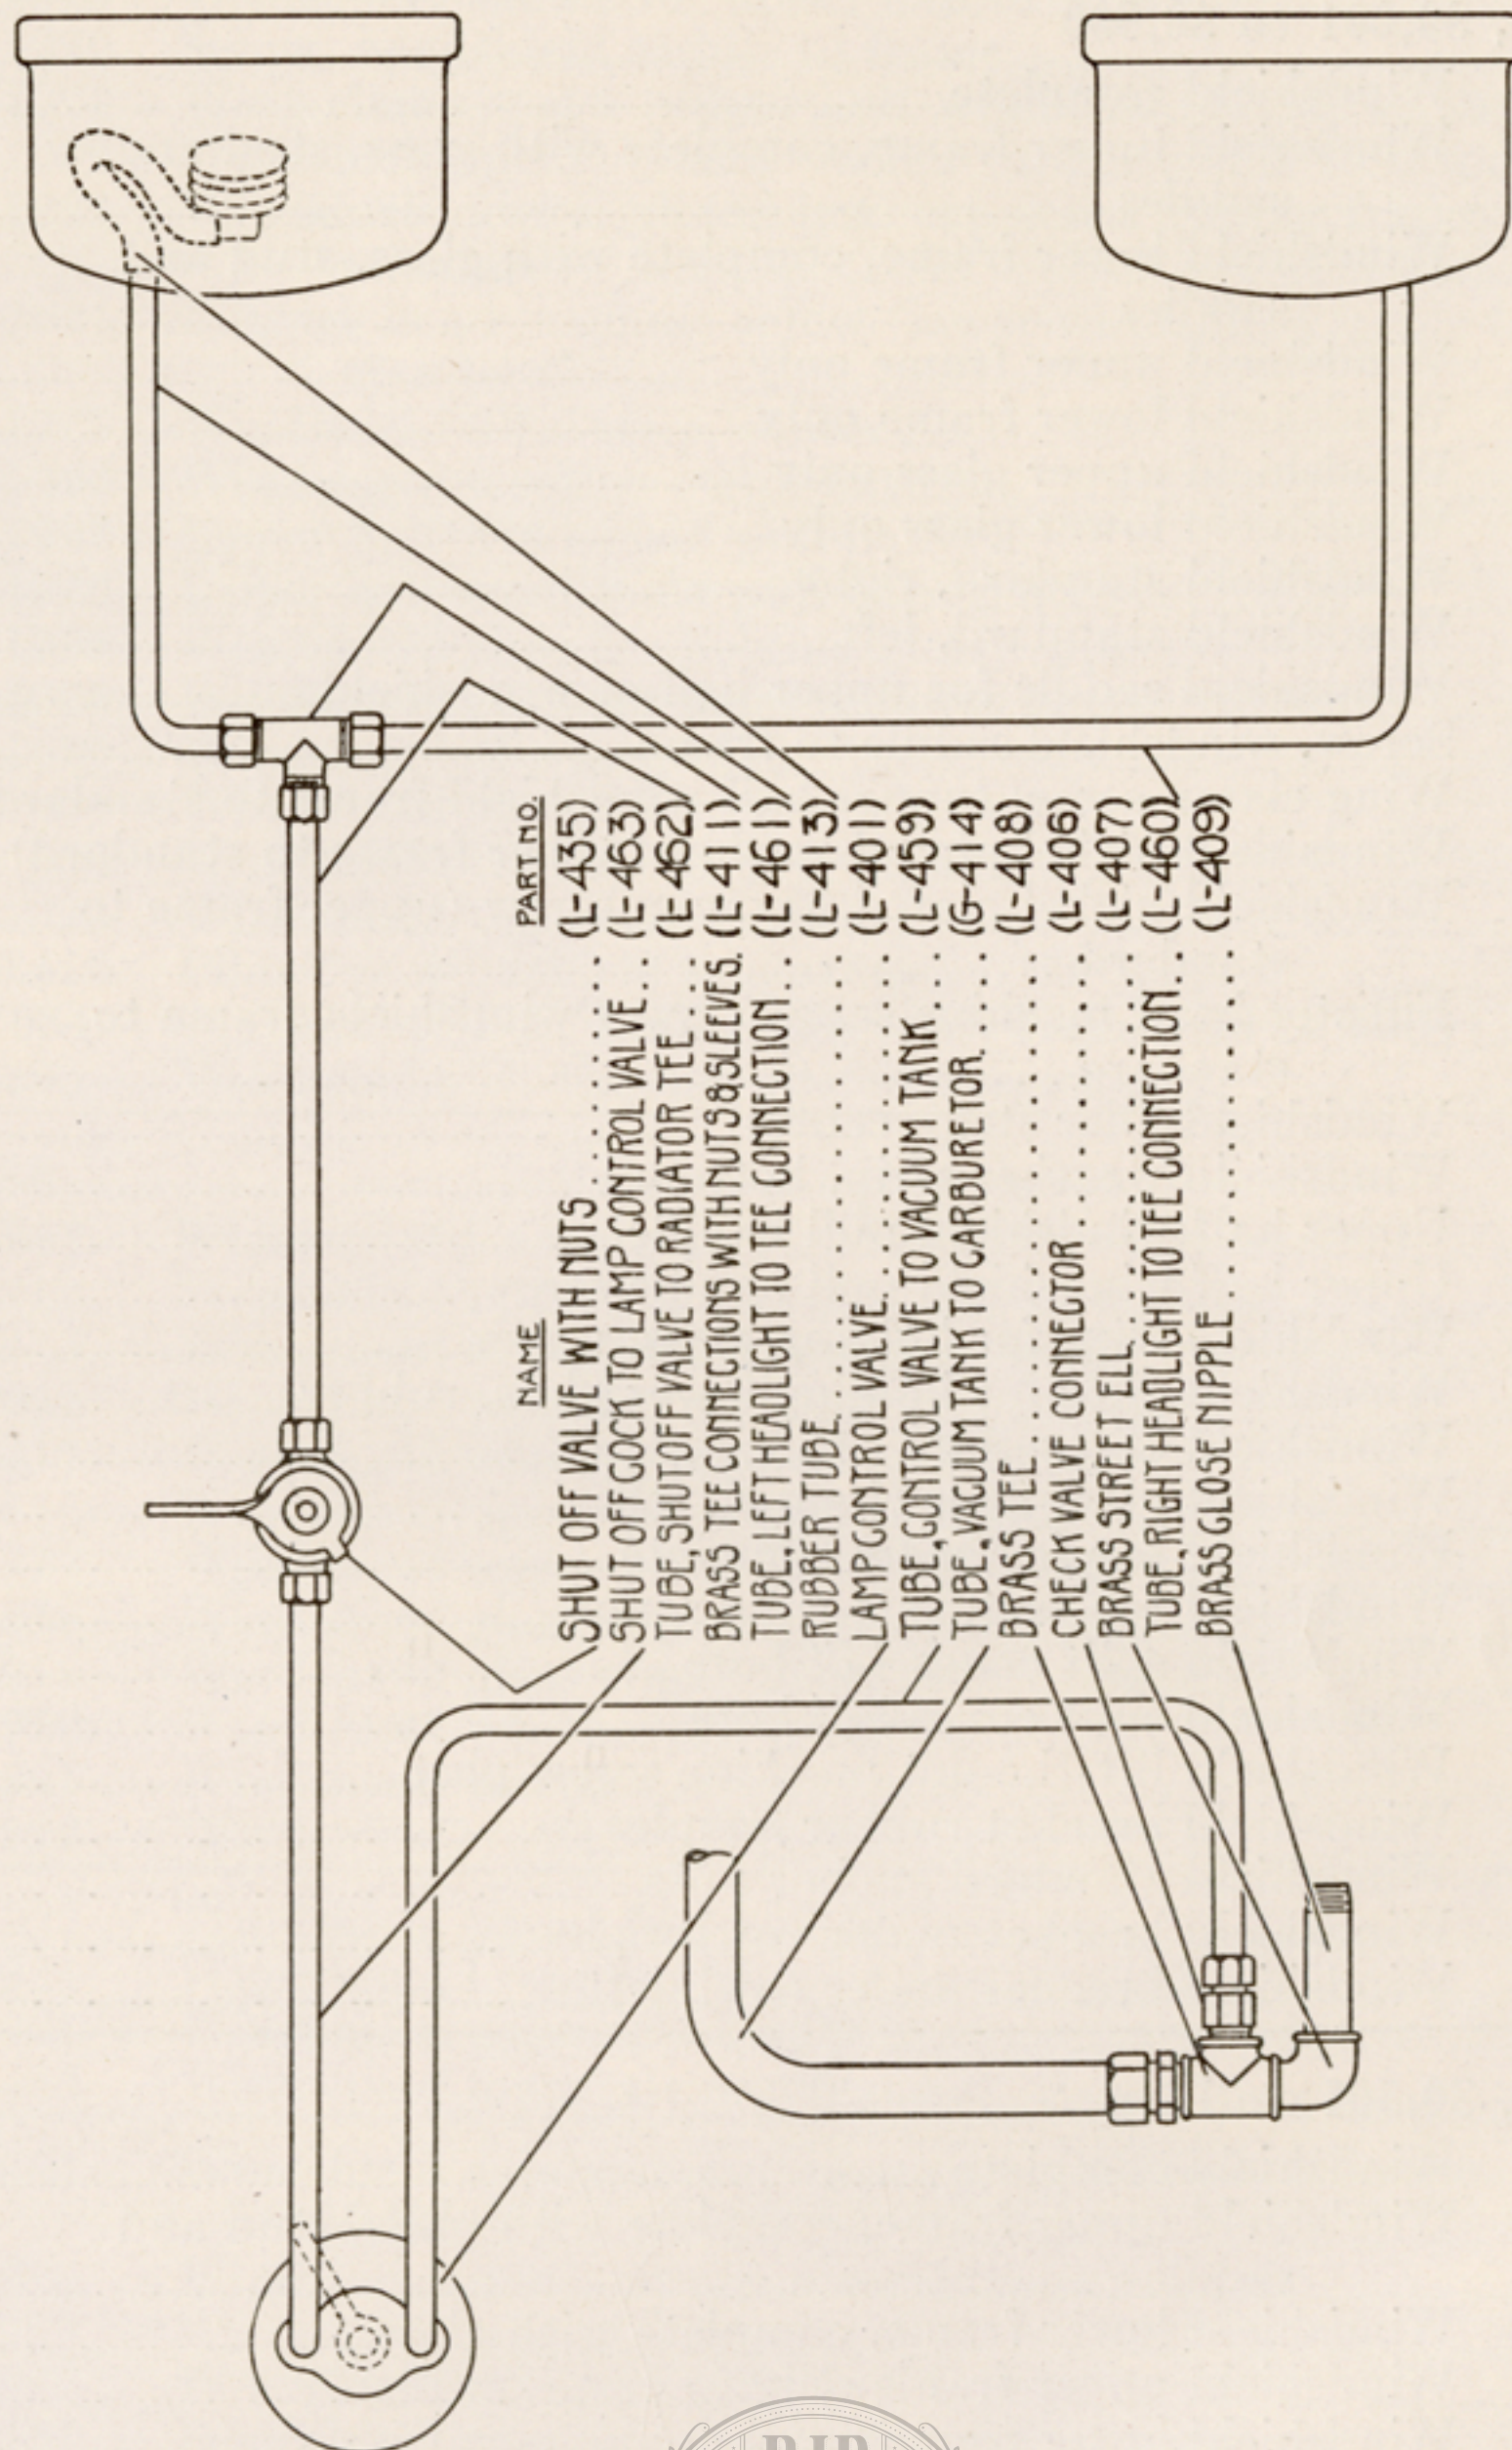


PLATE L-18—Diagram of 2-Way Head Lamp System

LEXINGTON SERIES "T" PARTS LIST

WINDSHIELD GROUP

Part No.	Name	No. Req.
Touring Car, 30,001 to 30,500		
BD-501	Windshield complete.....	1
BD-1034	Windshield upper frame, complete with glass, stud and saddles.....	1
BD-1035	Windshield lower frame, complete with glass, stud and saddles.....	1
BD-1036	Windshield upper frame only.....	1
BD-1037	Windshield lower frame only.....	1
BD-1038	Windshield upper glass only.....	1
BD-1039	Windshield lower glass only.....	1
BD-1040	Windshield standard, right.....	1
BD-1041	Windshield standard, left.....	1
BD-1042	Windshield saddle for upper half of windshield.....	2
BD-1043	Screw, windshield saddle to frame.....	4
BD-1021	Wing clamp screw (upper half windshield frame to standard....	2
BD-1022	Windshield nickel plated washer (upper frame to standard)	2
BD-1023	Windshield nickel plated hex. cap screw (upper frame to standard.....	2
BD-1024	Fillister head machine screw (lower windshield frame to standard.....	6
BD-1025	Windshield filler strip, center.....	1
BD-1026	Windshield weather strip, bottom.....	1
BD-1027	Upper half windshield pull handle.....	2
BD-1028	Upper half windshield pull handle screws.....	4
BD-1029	Windshield clips for holding glass, upper.....	2
BD-1095	Windshield clips for holding lower glass, rubber.....	2
BD-1030	Windshield clip screws.....	4
BD-1031	Windshield glass filler channel, felt.....	Per foot
BD-1032	Windshield top fasteners complete.....	2
BD-1033	Windshield top fasteners wing screw.....	2
BD-694	Windshield split cones $\frac{3}{4}$ " bore.....	2
BD-695	Windshield split cones $\frac{1}{2}$ " bore.....	2
BD-696	Windshield lift-the-dot machine screw post.....	6
BD-697	Windshield bracket rubber ferrules.....	2
BD-1092	Windshield standard anchor nuts.....	2
BD-1093	Windshield bracket under cowl, right.....	1
BD-1094	Windshield bracket under cowl, left.....	1

Touring Car, 30,501 and up

BD-795	Windshield complete.....	1
BD-1011	Windshield upper frame, complete with glass, stud and saddles.....	1
BD-1012	Windshield lower frame, complete with glass.....	1
BD-1013	Windshield upper frame only.....	1
BD-1014	Windshield lower frame only.....	1
BD-1015	Windshield upper glass only.....	1
BD-1016	Windshield lower glass only.....	1
BD-1017	Windshield standard, right.....	1
BD-1018	Windshield standard, left.....	1

(Continued on Page 63)

PRICES ON APPLICATION

LEXINGTON SERIES "T" PARTS LIST

WINDSHIELD GROUP (Continued)

Part No.	Name	No. Req.
BD-1019	Windshield saddle for upper half of windshield.....	2
BD-1020	Screw, windshield saddle to frame.....	4
BD-1021	Wing clamp screw (upper half windshield frame to standard)..	2
BD-1022	Windshield nickel plated washer (upper frame to standard).....	2
BD-1023	Windshield nickel plated hex. cap screw (upper frame to standard).....	2
BD-1024	Fillister head machine screw (lower windshield frame to standard).....	4
BD-1025	Windshield filler strip, center.....	1
BD-1026	Windshield weather strip, bottom.....	1
BD-1027	Upper half windshield pull handle.....	2
BD-1028	Upper half windshield pull handle screws.....	4
BD-1029	Windshield clips for holding glass, (upper).....	2
BD-1095	Windshield clips for holding lower glass, (rubber).....	2
BD-1030	Windshield clip screws.....	4
BD-1031	Windshield glass filler channel, (felt).....	Per foot
BD-1032	Windshield top fasteners complete.....	2
BD-1033	Windshield top fasteners wing screw.....	2
BD-2446	Plate for windshield mounting.....	2
SP-1034	$\frac{3}{8}$ x16x2 $\frac{1}{2}$ " hex. head cap screw (windshield to body).....	4
BD-696	Windshield lift-the-dot machine screw post.....	6
Sedanette		
BD-911	Windshield assembly, including the following	1
BD-912	Windshield upper frame complete with glass.....	1
BD-913	Windshield lower frame complete with glass.....	1
BD-914	Windshield outside frame only.....	1
BD-915	Windshield upper glass pull to handles.....	2
BD-916	Windshield upper glass pull to handle screws.....	4
BD-917	Windshield upper glass clamping wing bolt.....	2
BD-918	Windshield glass clips lower, rubber.....	2
BD-919	Windshield glass clips upper, nickel plated.....	2
BD-920	Windshield weather strip, upper.....	1
BD-921	Windshield weather strip, center.....	1
BD-922	Windshield weather strip, side upper.....	2
BD-923	Windshield upper frame only, less glass.....	1
BD-924	Windshield lower frame only, less glass.....	1
BD-925	Windshield upper glass only.....	1
BD-926	Windshield lower glass only.....	1
BD-927	Windshield rain and sun visor complete including the following;.....	1
BD-928	Windshield rain and sun visor curtain.....	1
BD-929	Windshield rain and sun visor curtain roller.....	1
BD-930	Windshield rain and sun visor bracket arm.....	2
BD-931	Windshield rain and sun visor bracket acorn nuts.....	2
BD-932	Windshield rain and sun visor frame only.....	1
BD-933	Windshield rain and sun visor glass only.....	1
BD-934	Windshield rain and sun visor glass retainer clips	2
BD-935	Windshield rain and sun visor glass retainer clip screws.....	4

PRICES ON APPLICATION

(Continued on Page 64)

LEXINGTON SERIES "T" PARTS LIST

WINDSHIELD GROUP (Continued)

Part No.	Name	No. Req.
Salon-Sedan		
BD-936	Windshield upper frame complete with glass.....	1
BD-937	Windshield lower frame complete with glass.....	1
BD-938	Windshield upper frame only.....	1
BD-939	Windshield frame only, lower.....	1
BD-940	Windshield upper glass only.....	1
BD-941	Windshield lower glass only.....	1
BD-942	Windshield lower pull to handle, black enameled.....	2
BD-943	Windshield lower pull handle screw with special nuts.....	4
BD-944	Windshield glass retainer clips.....	6
BD-945	Windshield glass retainer clip screws.....	6
BD-946	Windshield weather strip, center.....	1
BD-947	Windshield weather strip, upper.....	1
BD-948	Windshield weather strip, side upper.....	2
BD-949	Windshield weather strip, lower.....	2
BD-950	Windshield upper glass pull to handles.....	2
BD-951	Windshield upper glass pull to handle screws.....	4
BD-952	Windshield lower adjusting wing nut clamp bolts.....	2
BD-953	Windshield auxiliary frame complete with glass.....	1
BD-954	Windshield auxiliary frame only.....	1
BD-955	Windshield auxiliary glass only.....	1
BD-956	Windshield auxiliary glass sliding trunnion.....	2
BD-957	Windshield auxiliary sliding trunnion anchor screws.....	2
BD-958	Windshield auxiliary glass sliding trunnion clamp bolts.....	2
BD-959	Windshield standard, right.....	1
BD-960	Windshield standard, left.....	1
BD-961	Windshield swipe cleaner.....	1

TOP FITTINGS FOR TOURING CAR, 30,001 TO 30,500

BD-1068	Touring car cape top complete with curtains and boot.....	1
BD-1069	Top boot.....	1
BD-1070	Top bows.....	4
BD-1071	Side curtain, left front.....	1
BD-1072	Side curtain, left center.....	1
BD-1073	Side curtain, left rear.....	1
BD-1074	Side curtain, right front.....	1
BD-1075	Side curtain, right center.....	1
BD-1076	Side curtain, right rear.....	1
BD-1077	Back curtain with glass.....	1
BD-1078	Back strap.....	2
BD-1079	Top deck only.....	1
BD-1080	Top quarter only, right.....	1
BD-1081	Top quarter only, left.....	1
BD-1082	Bow socket assembly, left.....	1
BD-1083	Bow socket assembly, right.....	1
BD-764-R	Top holder on rear top iron, right.....	1
BD-764-L	Top holder on rear top iron, left.....	1
BD-1084	Prop nuts on front top irons.....	2

(Continued on Page 65)

PRICES ON APPLICATION

LEXINGTON SERIES "T" PARTS LIST

TOP FITTINGS FOR TOURING CAR (Continued)

Part No.	Name	No. Req.
BD-1085	Curtain rod for left front door.....	1
BD-1086	Curtain rod for left rear door.....	1
BD-1087	Curtain rod for right front door.....	1
BD-1088	Curtain rod for right rear door.....	1
BD-797	Curtain rod sockets.....	4
BD-796	Curtain rod socket cover.....	4
BD-1065	Glove fasteners complete.....	
BD-589	Murphy fasteners complete, stud and eyelet.....	
BD-590	Lift-the-dot fasteners complete, stud and socket.....	
BD-771	Rubber finishing washers for front top iron.....	2
BD-1089	Rubber finishing washers for rear rest iron.....	2
BD-1090	Lock pins and nuts (top holder to rear top iron).....	2

TOP FITTINGS FOR TOURING CAR, 30,501 AND UP

BD-1044	Touring car cape top complete with curtains and boot.....	1
BD-1045	Top boot.....	1
BD-1046	Top bows.....	4
BD-1047	Side curtain, left front.....	1
BD-1048	Side curtain, left center.....	1
BD-1049	Side curtain, left rear.....	1
BD-1050	Side curtain, right front.....	1
BD-1051	Side curtain, right center.....	1
BD-1052	Side curtain, right rear.....	1
BD-1053	Back curtain with glass.....	1
BD-1054	Back strap.....	2
BD-1055	Top deck only.....	1
BD-1056	Top quarter only, right.....	1
BD-1057	Top quarter only, left.....	1
BD-1058	Bow socket assembly, left.....	1
BD-1059	Bow socket assembly, right.....	1
BD-764	Top holder on rear top iron, right.....	1
BD-764	Top holder on rear top iron, left.....	1
BD-1060	Prop nuts on front top irons.....	2
BD-1061	Curtain rod for left front door.....	1
BD-1062	Curtain rod for left rear door.....	1
BD-1063	Curtain rod for right front door.....	1
BD-1064	Curtain rod for right rear door.....	1
BD-797	Curtain rod sockets.....	4
BD-796	Curtain rod socket cover plate.....	4
BD-1065	Glove fasteners complete.....	
BD-589	Murphy fasteners complete, stud and eyelet.....	
BD-590	Lift-the-dot fasteners complete, stud and socket.....	
BD-771	Rubber finishing washers for front top iron.....	2
BD-1066	Rubber finishing washers for rear rest iron.....	2
BD-1067	Lock pins and nuts (top holder to rear top iron).....	2

PRICES ON APPLICATION

Car Number *must* be given when ordering repair parts. Order parts by number in *left* hand column using name of part in full. Read instructions carefully on page 3 before ordering.

LEXINGTON SERIES "T" PARTS LIST

TOURING BODY


Part No.	Name	No. Req.
----------	------	----------

Touring Car, 30,501 and up

NOTE:—When ordering new body or parts it is necessary that serial number of car be given.

BD-510	Five-passenger body with 2 auxiliary seats, 30,001 to 30,500....	1
BD-692	Five-passenger body with 2 auxiliary seats, 30,501 and up.....	1
BD-372	Escutcheon plate for tire pump.....	1
BD-408	Escutcheon plate for gear shift.....	1
BD-412	Escutcheon plate for speedometer cable.....	1
BD-418	$\frac{3}{8}$ x2" step bolts and nuts, body to frame under floor board	2
BD-418	$\frac{3}{8}$ x $\frac{3}{4}$ " step bolts and nuts, center of body.....	4
BD-422	Pcs. antisqueak $\frac{1}{8}$ x1"x39" under rear of body	2
BD-440	Serial number name plate.....	1
BD-468	Washer for top iron stud.....	2
BD-512	Front scuff plates.....	2
BD-513-L	Rear scuff plate, left.....	1
BD-513-R	Rear scuff plate, right.....	1
BD-515	Escutcheon plate for steering column.....	1
BD-516	Escutcheon plate for pedals.....	2
BD-517	Instrument board bracket for steering column.....	1
BD-686	Upper toe board.....	1
BD-687	Lower toe board.....	1
BD-688	Floor board, (Moore type).....	1
BD-798	Floor board, (Staudt type).....	1
BD-689	Upper toe board linoleum.....	1
BD-690	Linoleum for lower toe board.....	1
BD-691	Floor board linoleum.....	1
BD-698	Pcs. antisqueak $\frac{1}{8}$ x1"x105", under sills of body	2
BD-764	Plain top holders for 5 bow top.....	2
BD-766	Moulding for upper toe board 73" long.....	1
BD-768	Moulding for lower toe board 85 $\frac{1}{2}$ " long.....	1
BD-770	Moulding for floor board 98 $\frac{1}{4}$ " long, (Moore).....	1
BD-771	Rubber ferrules for top irons $\frac{7}{16}$ x $\frac{1}{8}$ ODx $\frac{7}{16}$ ID".....	2
BD-772	Ventilator for body.....	1
BD-799	Moulding for floor board, (Staudt type).....	1
BD-773	Door locating dowel.....	4
BD-774	Door locating ferrule.....	4
BD-775	Door locating washer.....	4
BD-782	Auxiliary seat panel catch.....	2
BD-783	Windshield anchor bolt plates.....	2
BD-789	Roze rail, nicked fittings.....	1
BD-790	Foot rest 35 $\frac{3}{4}$ " long.....	1
BD-816	Foot rest 33 $\frac{1}{8}$ " long.....	1

PRICES ON APPLICATION

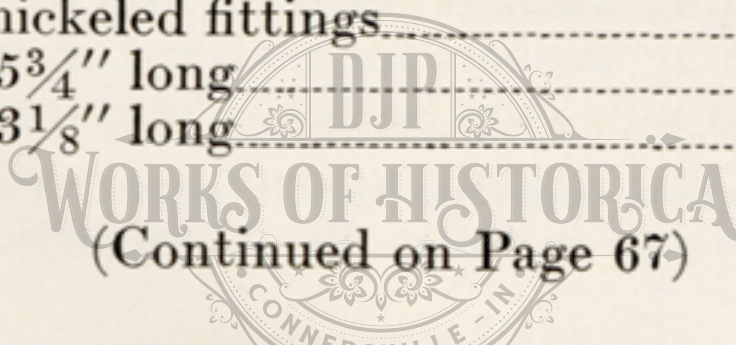

(Continued on Page 67)


LEXINGTON SERIES "T" PARTS LIST

TOURING BODY (Continued)

Part No.	Name	No. Req.
BD-889	Door, right front—less leather upholstering and with prime coat of paint only, Moore type	1
BD-890	Door, left front—less leather upholstering and with prime coat of paint only, Moore type	1
BD-891	Door, right rear—less leather upholstering and with prime coat of paint only, Moore type	1
BD-892	Door, left rear—less leather upholstering and with prime coat of paint only, Moore type	1
BD-893	Door, right front—upholstered and with color coat, (state color and kind of trimming) Moore type	1
BD-894	Door, left front—upholstered and with color coat, (state color and kind of trimming) Moore type	1
BD-895	Door, right rear—upholstered and with color coat, state color and kind of trimming) Moore type	1
BD-896	Door, left rear—upholstered and with color coat, (state color and kind of trimming) Moore type	1
BD-897	Door, right front—less leather upholstering and with prime coat of paint only, Staudt type	1
BD-898	Door, left front—less leather upholstering and with prime coat of paint only, Staudt type	1
BD-899	Door, right rear—less leather upholstering and with prime coat of paint only, Staudt type	1
BD-900	Door, left rear—less leather upholstering and with prime coat of paint only, Staudt type	1
BD-901	Door, right front—upholstered and with color coat (state color and kind of trimming) Staudt type	1
BD-902	Door, left front—upholstered and with color coat, (state color and kind of trimming) Staudt type	1
BD-903	Door, right rear—upholstered and with color coat, (state color and kind of trimming) Staudt type	1
BD-904	Door, left rear—upholstered and with color coat, (state color and kind of trimming) Staudt type	1
SP-602	$\frac{3}{8}$ "-16 U. S. S. hex. nuts	2
SP-982	$\frac{7}{16}$ x $3\frac{1}{4}$ " S. A. E. bolts, second series	4
SP-1200	$\frac{1}{4}$ x $1\frac{1}{4}$ " step bolts and nuts	2
SP-1214	$\frac{3}{8}$ x $2\frac{3}{4}$ " step bolts and nuts front of body to frame	2
SP-1216	$\frac{3}{8}$ x $1\frac{1}{2}$ " step bolts and nuts, rear of body to frame	4
SP-3300	No. 41F imperial S. A. E union nuts for $\frac{1}{4}$ " O. D. tube	2
SP-3820	$\frac{1}{4}$ x $1\frac{1}{4}$ " button hd. cap screw, black enamel clamp screws with bracket	2
SP-3821	$\frac{1}{4}$ x $1\frac{7}{8}$ " button hd. cap screw bracket to instrument board, black enameled	2
SP-3825	$\frac{3}{8}$ x2" C. S. hd. cap screws rear door post to frame	2
SP-4005	N. P. finishing washers No. 10	12

PRICES ON APPLICATION

Car Number *must* be given when ordering repair parts. Order parts by number in *left* hand column using name of part in full. Read instructions carefully on page 3 before ordering.

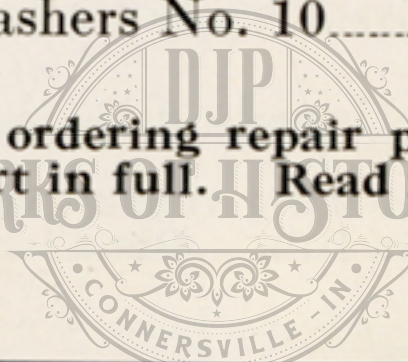

LEXINGTON SERIES "T" PARTS LIST

SEDANETTE BODY

Part No.	Name	No. Req.
Door Hardware		
BD-962	Left front lock (with safety).....	1
BD-963	Right front door lock (without safety).....	1
BD-964	Left rear door lock (with safety).....	1
BD-965	Right rear door lock (with safety).....	1
BD-966	Top door hinge 1 $\frac{3}{4}$ x3".....	4
BD-967	Center door hinge 1 $\frac{3}{4}$ x3 $\frac{1}{8}$ ".....	4
BD-968	Bottom door hinge 1 $\frac{3}{4}$ x4".....	4
BD-969	Rubber door bumpers.....	8
BD-970	Ideal dove tail bumpers.....	4
BD-971	Door striker plate.....	4
BD-972	Right front outside door handle (plain).....	1
BD-973	Left front outside door handle (plain).....	1
BD-974	Left rear outside door handle (plain).....	1
BD-975	Right rear outside door handle (plain).....	1
BD-976	Window regulator, right.....	2
BD-977	Window regulator, left.....	2
BD-978	Right front door lock (Yale).....	1

Interior Hardware

BD-979	Lever lock handles.....	4
BD-980	Lever lock handle nuts.....	4
BD-981	Side curtains with rollers for right and left rear window.....	4
BD-982	Rear window curtain with roller.....	1
BD-983	Step light switches.....	2
BD-984	Window regulator handles.....	4
BD-985	Door stop strap footman loops.....	8
BD-986	Window regulator handle escutcheon plate.....	4
BD-987	Dome light switch.....	1
BD-988	Pull to rings, for doors.....	4
BD-989	Robe rail fixture.....	2
BD-990	Robe rail.....	1
BD-991	Ladies' vanity case.....	1
BD-992	Gents' smoking case.....	1

Upholstering

BD-993	Tonneau floor carpet.....	1
BD-994	Front seat cushion.....	1
BD-995	Rear seat cushion.....	1
BD-996	Back of front seat piped ready to install.....	1
BD-997	Back of rear seat piped ready to install.....	1

(Continued on Page 69)

Car Number *must* be given when ordering repair parts. Order parts by number in *left* hand column using name of part in full. Read instructions carefully on page 3 before ordering.

LEXINGTON SERIES "T" PARTS LIST

SEDANETTE BODY (Continued)

Part No.	Name	No. Req.
Glass		
BD-998	Windshield assembly complete.....	1
BD-999	Left front door glass.....	1
BD-1000	Right front door glass.....	1
BD-1001	Left rear door glass.....	1
BD-1002	Right rear door glass.....	1
BD-1003	Left rear "D" window glass.....	1
BD-1004	Right rear "D" window glass.....	1
BD-1005	Rear window glass.....	1

*** Body Fittings**

BD-1006	Cowl ventilator.....	1
BD-1007	Instrument board.....	1
BD-1008	Door stop straps for front doors.....	2
BD-1009	Door stop straps for rear doors.....	2
BD-820	Toe board, upper.....	1
BD-819	Toe board, lower.....	1
BD-818	Floor board.....	1
BD-1010	Scuff plates.....	2

SALON-SEDAN BODY

Door Hardware

BD-822	Left front door lock (with safety).....	1
BD-823	Right front door lock (without safety).....	1
BD-824	Left rear door lock (with safety).....	1
BD-825	Right rear door lock (with safety).....	1
BD-826	Top door hinge 1 $\frac{3}{4}$ x3".....	4
BD-827	Center door hinge 1 $\frac{3}{4}$ x3 $\frac{3}{8}$ ".....	4
BD-828	Bottom door hinge 1 $\frac{3}{4}$ x4".....	4
BD-829	Rubber door bumpers.....	8
BD-830	Ideal dove tail bumpers.....	4
BD-831	Door striker plates.....	4
BD-832	Right front outside door handle with locking device.....	1
BD-833	Left front outside door handle (plain).....	1
BD-834	Left rear outside door handle (plain).....	1
BD-835	Right rear outside door handle (plain).....	1
BD-836	Window regulator, right.....	2
BD-837	Window regulator, left.....	2

Interior Hardware

BD-838	Lever lock handles.....	4
BD-839	Side curtain with rollers for right and left rear windows.....	2
BD-840	Rear window curtain with roller.....	1
BD-841	Step light switches.....	2
BD-842	Window regulator handles.....	4
BD-843	Door strap footman loops.....	8
BD-844	Window regulator handle escutcheon plate.....	4
BD-845	Dome light switch.....	1
BD-846	Pull to handles, for doors.....	4

(Continued on Page 70)

PRICES ON APPLICATION

LEXINGTON SERIES "T" PARTS LIST

SALON-SEDAN BODY (Continued)

Part No.	Name	No. Req.
Interior Hardware (Continued)		
BD-847	Window strap fasteners.....	2
BD-848	Robe rail fixture.....	2
BD-849	Robe rail.....	1
BD-850	Corner light.....	2
BD-851	Inside door lever lock plates.....	4
BD-852	Tonneau front switch.....	1
BD-853	Ladies' vanity case.....	1
BD-854	Gents' smoking case.....	1
Upholstering		
BD-855	Tonneau floor carpet.....	1
BD-856	Front seat cushion.....	1
BD-857	Rear seat cushion.....	1
BD-858	Back of front seat piped ready to install.....	1
BD-859	Back of rear seat piped ready to install.....	1
Glass		
BD-860	Windshield assembly complete.....	1
BD-861	Left front door glass.....	1
BD-862	Right front door glass.....	1
BD-863	Left rear door glass.....	1
BD-864	Right rear door glass.....	1
BD-865	Left rear "D" window glass.....	1
BD-866	Right rear "D" window glass.....	1
BD-867	Rear window glass.....	1
Body Fittings		
BD-868	Cowl ventilator.....	1
BD-869	Roof ventilator.....	1
BD-870	Roof ventilator handle.....	1
BD-871	Instrument board.....	1
BD-872	Auxiliary seat irons.....	4
BD-873	Auxiliary seat hinge.....	4
BD-874	Compartment hinge.....	2
BD-875	Nickel-plated catches.....	3
BD-876	Window anti-rattlers.....	8
BD-877	Door stop straps for front doors.....	2
BD-878	Door stop straps for rear doors.....	2
BD-879	Auxiliary seat, right.....	1
BD-880	Auxiliary seat, left.....	1
BD-881	Left front door trimming.....	1
BD-882	Right front door trimming.....	1
BD-883	Left rear door trimming.....	1
BD-884	Right rear door trimming.....	1
BD-885	Toe board, upper.....	1
BD-886	Toe board, lower.....	1
BD-887	Floor board.....	1
BD-888	Scuff plates.....	2

PRICES ON APPLICATION

LEXINGTON SERIES "T" PARTS LIST

HOOD

Part No.	Name	No. Req.
H-406	Hood, to be used with Ansted radiator on Moore type body and Streator Sedan.....	1
H-416	Hood, to be used with Harrison radiator on Staudt type body and first series McFarlan Sedanette.....	1
H-416	Hood, to be used with Harrison radiator on Staudt type body	1
H-419	Hood, to be used with second series McFarlan Sedanette, (special 19 Louvre).....	1
H-161	Hood handles.....	2
H-402	Pcs. $\frac{3}{32} \times \frac{5}{8}$ " antisqueak 38" long, attached to hood ledge of body.....	2
H-415-R	Hood ledge plate, right side, black enameled.....	1
H-415-L	Hood ledge plate, left side, black enameled.....	1
H-417	Hood fasteners, nickeled.....	4
H-418	Hood fasteners bracket, nickeled.....	4
SP-707	No. 14-20 hex. machine nuts.....	4
SP-708	No. 10-32 hex. machine nuts.....	4
SP-1531	No. 10-32 $\times \frac{1}{2}$ " button head machine screws.....	4
SP-1700	No. 14-20 $\times \frac{3}{4}$ " round head machine screws brass N. P.....	4
SP-2805	$\frac{1}{8} \times \frac{1}{2}$ " split rivets, Japanned.....	

Note:—When ordering hood, it will be necessary to furnish us with serial number of car—specify color.

FRONT FENDERS

X-410-R	Front fender, right.....	1
X-410-L	Front fender, left.....	1
X-401	Front fender irons pressed steel.....	2
X-403	Pcs. antisqueak $\frac{1}{8} \times 1 \times 17$ " between fenders and running board.....	2
X-404	Pcs. antisqueak $\frac{1}{8} \times 1 \frac{1}{2} \times 26$ " between fenders and ledge plate ..	2
SP-601	$\frac{5}{16}$ "-18 U. S. S. hex. nuts.....	8
SP-1012	$\frac{5}{16} \times 1$ " U. S. S. hex. cap screws, fender irons to frame	6
SP-1012	$\frac{5}{16}$ "-18 $\times 1$ " hex. cap screws, fender to frame.....	2

Note:—Front fenders are interchangeable on all Series "T" Models.

REAR FENDERS

X-402-R	Rear fender, right, Moore Touring car, Staudt Touring car and Streator Sedan.....	1
X-402-L	Rear fender, left, Moore Touring car, Staudt Touring car and Streator Sedan.....	1
X-412-R	Rear fender, right, McFarlan Sedanette	1
X-412-L	Rear fender, left, McFarlan Sedanette.....	1
X-405	Pcs. antisqueak $\frac{1}{8} \times 1 \times 12 \frac{1}{4}$ " between fender and running board.....	2
SP-1032	$\frac{3}{8}$ "-16 U. S. S. $\times 1$ " cap screws threaded full length, fender to body.....	10
SP-1033	$\frac{3}{8}$ "-16 U. S. S. $\times 1 \frac{1}{4}$ " cap screws, threaded full length, fender to body.....	2

Note:—We reserve the right to furnish black enamel fenders when color is not specified.

PRICES ON APPLICATION

LEXINGTON SERIES "T" PARTS LIST

Part No.	Name	No. Req.
E-695	Motor splash plate, right.....	1
E-696	Motor splash plate, left.....	1
E-697	Motor splash plate, front.....	1
Y-417	Radiator splash pan.....	1
Y-425	License plate holder buttons.....	2
Y-419	Running board mat, right.....	1
Y-420	Running board mat, left.....	1
Y-421	Running board moulding, rear.....	2
Y-422	Running board moulding, front.....	2
Y-423	Running board moulding, inside.....	2
Y-424	Running board moulding, outside.....	2
Y-418	License plate brackets front.....	2
SP-2501	Escutcheon pin No. 14x $\frac{5}{8}$ " long.....	110

TOOL KIT

BD-224	Oil can.....	1
BD-338	Oil can holder.....	1
BD-800	Tool kit in envelope case consisting of the following tools.....	1
BD-801	12 oz. natural finish ball pein hammer.....	1
BD-802	6" combination plier, natural finish.....	1
BD-803	9" auto wrench, natural finish.....	1
BD-804	8" mill file.....	1
BD-805	File handle.....	1
BD-806	3" round shank screw driver, natural finish.....	1
BD-807	5" square shank screw driver.....	1
BD-808	$\frac{3}{8}$ " standard cold chisel, natural finish.....	1
BD-809	$\frac{3}{8}$ " punch.....	1
BD-810	Cylinder head and spark plug wrench, natural finish, $\frac{21}{32}$ " cylinder head end, $\frac{31}{32}$ " spark plug end.....	1
BD-811	No. 35 double end wrench $\frac{31}{32}$ x $1\frac{1}{16}$ ".....	1
BD-812	No. 31 double end wrench $\frac{7}{8}$ x $\frac{25}{32}$ ".....	1
BD-813	No. 725 double end wrench $\frac{7}{16}$ x $1\frac{1}{2}$ ".....	1
BD-814	No. 723 double end wrench $\frac{3}{8}$ x $\frac{7}{16}$ ".....	1
BD-817	Jack.....	1
BD-780	Push rod housing nut wrench $1\frac{9}{32}$ " opening.....	1
BD-781	Push rod housing lock nut wrench, $1\frac{1}{32}$ " opening.....	1
W-412	Rim nut wrench.....	1
SC-414	Starting crank.....	1

ALL PARTS WILL BE SHIPPED

C. O. D.

UNLESS SUFFICIENT AMOUNT OF

CASH

IS INCLUDED WITH ORDER

Car Number *must* be given when ordering repair parts. Order parts by number in *left* hand column using name of part in full. Read instructions carefully on page 197 before ordering.

